

Wiring Diagram 1976

Mazda Rotary Pickup Federal Spec




mazda

How to use this wiring diagram


In this booklet, whole electrical systems are divided into sub systems, such as charging system, ignition system ---, and the wiring diagram of each system is shown in one page respectively for your easy reference.

When you have the trouble in the charging system for instance,

- 1 OPEN THE PAGE OF "CHARGING SYSTEM" AND THE LAST FOLDED PAGE "FOR COMMON CONNECTORS".
- 2 FIND OUT THE CONNECTORS WHICH YOU WANT TO CHECK ON THE DIAGRAM.

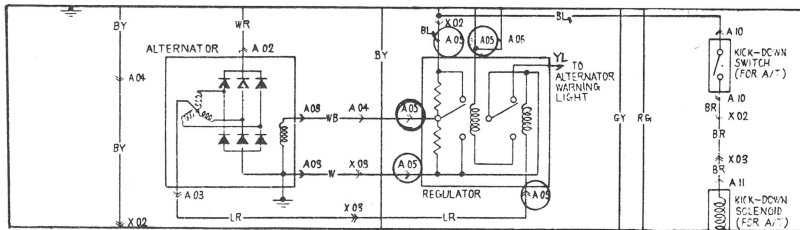


- 3 THEN LOOK UP THE NUMBER IN THE CONNECTOR LIST. THE NUMBERS WHICH START WITH "X" ARE LISTED IN THE LAST PAGE. REST OF THEM ARE AT THE BOTTOM OF EACH PAGE "A" "B" "C" -----.

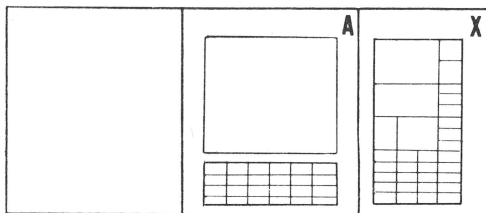

4 THE CONNECTOR LISTS SHOW


- SHAPE OF CONNECTOR
- LOCATION OF CONNECTOR
- COLORS OF WIRES

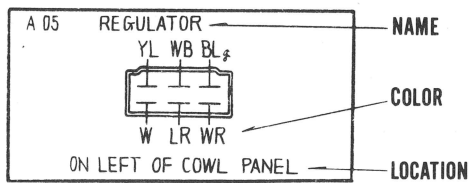

-WIRING CODE-

| CODE | COLOR |
|------|-------------|
| B | BLACK |
| Br | BROWN |
| G | GREEN |
| Gy | GRAY |
| L | BLUE |
| Lq | LIGHT GREEN |
| O | ORANGE |
| R | RED |
| W | WHITE |
| Y | YELLOW |

-EXAMPLE-

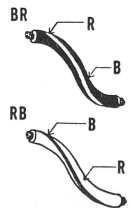

-CONNECTOR TYPE-

FEMALE

MALE



This booklet has two INDEXES, i.e.,

- INDEX OF COMPONENT PARTS IN ALPHABETICAL ORDER
- INDEX OF COMPONENT PARTS BY RESPECTIVE SUB-SYSTEMS

You can locate the component parts on the car by this index.

Symbol in the wiring diagram.

| | | | | | | | | | | | | |
|---------|--------|---|--------|-------|------|----------|-------------------|-------|------|-------|---------|-------|
| | | | | | | | | | | | | |
| BATTERY | GROUND | 1 FUSE 2 FUSE HOLDER 3 FUSIBLE LINK | SWITCH | MOTOR | COIL | RESISTOR | VARIABLE RESISTOR | DIODE | BULB | HORNE | SPEAKER | RELAY |

INDEX

PAGE SUB SYSTEM

A STARTING SYSTEM
 CHARGING SYSTEM
 SUB ZERO SYSTEM
 INHIBITOR SWITCH

B IGNITION SYSTEM
 EMISSION CONTROL SYSTEM
 KICK-DOWN SYSTEM
 FUEL PUMP

C METER SYSTEM
 WARNING LIGHT SYSTEM
 SEAT BELT WARNING SYSTEM

PAGE SUB SYSTEM

D SCREEN WIPER SYSTEM

E HEADLIGHT SYSTEM
 ILLUMINATION LIGHT SYSTEM

F LIGHT SYSTEM
 HORN

G HEATER SYSTEM
 RADIO
 ROOM LIGHT
 CIGAR LIGHTER

INDEX


| COMPONENT | PAGE | LOCATION |
|-----------------------------------|------|---------------------------------|
| AIR CONTROL VALVE----- | B | ON INTAKE MANIFOLD |
| ALTERNATOR----- | A | ABOVE ENGINE |
| ALTERNATOR WARNING LIGHT----- | C | AT COMBINATION METER |
| ANTI AFTERBURN VALVE (D.C.V)----- | B | ABOVE ENGINE |
| BACK-UP LIGHT----- | F | AT REAR BOX |
| BACK-UP LIGHT SWITCH----- | F | AT TRANSMISSION |
| BATTERY----- | A-G | UNDER RIGHT FRONT OF BOX |
| BRAKE FAILURE SWITCH----- | C | ON COWL PLATE RIGHT |
| BRAKE WARNING LIGHT----- | C | ON DASHBOARD |
| CARBURETOR HEATER----- | B | AT CARBURETOR |
| CENTRAL CONTROL UNIT | | UNDER DASHBOARD LEFT END |
| FLASHER RELAY----- | F | |
| HORN RELAY----- | F | |
| WIPER RELAY----- | D | |
| CHOKE MAGNET----- | B | BEHIND CHOKE KNOB |
| CHOKE RELAY----- | B | ON LEFT FRONT FENDER APRON |
| CHOKE SWITCH----- | B | BEHIND CHOKE KNOB |
| CIGAR LIGHTER----- | G | ON DASHBOARD |
| COASTING VALVE (D.C.V)----- | B | ABOVE ENGINE |
| COMBINATION SWITCH | | UNDER STEERING WHEEL |
| DIMMER SWITCH----- | E,F | |
| HAZARD & FLASHER SWITCH----- | F | |
| LIGHT SWITCH----- | E,F | |
| PASSING & HIGH BEAM SWITCH----- | E,F | |
| TURN SIGNAL LIGHT SWITCH----- | F | |
| SCREEN WASHER SWITCH----- | D | |
| SCREEN WIPER SWITCH----- | D | |
| COOLANT LEVEL SWITCH----- | C | ON LEFT FRONT FENDER APRON |
| COOLANT LEVEL WARNING LIGHT----- | C | AT COMBINATION METER |
| DISTRIBUTOR----- | B | AT ENGINE |
| DOOR SWITCH----- | G | AT BOTTOM OF BOTH REAR PILLAR |
| EMISSION CONTROL BOX----- | B | BEHIND PASSENGER SEAT |
| EXTERNAL RESISTOR----- | B | AT IGNITION COIL |
| FUEL GAUGE----- | C | AT COMBINATION METER |
| FUEL GAGE TANK UNIT----- | C | AT FUEL TANK |
| FUEL PUMP----- | B | AT RIGHT OF FUEL TANK |
| FUSE BOX | | LEFT REAR CORNER OF ENGINE ROOM |
| EMI, I.G.COIL----- | B | |
| REGULATOR----- | A | |
| BACK, TURN----- | C,F | |
| HORN, STOP, HAZARD----- | F | |
| ROOM, CIGAR----- | G | |
| TAIL----- | E,F | |
| HEADLIGHT HL RH----- | E | |
| LH----- | E | |
| HU RH----- | E | |
| LH----- | E | |
| FUSE HOLDER | | |
| EMISSION CONTROL BOX----- | B | NEAR EMISSION CONTROL BOX |
| HEATER, RADIO----- | G | RIGHT OF STEERING COLUMN SHAFT |
| SCREEN WIPER----- | D | RIGHT OF STEERING COLUMN SHAFT |
| FUSIBLE LINK | | |
| STARTER MOTOR----- | A | RIGHT OF STEERING COLUMN SHAFT |
| IGNITION COIL----- | B | RIGHT OF STEERING COLUMN SHAFT |

| COMPONENT | PAGE | LOCATION |
|----------------------------------|---------|-------------------------------|
| HEADLIGHT----- | E | AT FRONT OF CABIN |
| HEATER BLOWER MOTOR----- | G | UNDER DASHBOARD |
| HEATER BLOWER MOTOR SWITCH----- | C | ON DASHBOARD |
| HEAT HAZARD SENSOR----- | B | UNDER PASSENGER SEAT |
| HEAT HAZARD WARNING LIGHT----- | B | ON DASHBOARD |
| HIGH BEAM INDICATOR LIGHT----- | E | AT COMBINATION METER |
| HORN----- | F | BEHIND BOTH HEADLIGHT |
| HORN SWITCH----- | F | CENTER OF STEERING WHEEL |
| IDLE SWITCH----- | B | AT CARBURETOR |
| IGNITION COIL----- | B,C | ON LEFT FRONT FENDER APRON |
| IGNITION RELAY----- | B | ON LEFT FRONT FENDER APRON |
| IGNITION SWITCH----- | A-D,F,G | UNDER STEERING WHEEL |
| ILLUMINATION LIGHT | | |
| HEATER----- | C | AT HEATER |
| METER----- | C | AT COMBINATION METER |
| RADIO----- | C | AT RADIO |
| SELECT INDICATOR (A/T only) | C | AT MANUAL SELECT LEVER |
| INHIBITOR SWITCH (A/T only)----- | A,F | AT MANUAL SELECT LEVER |
| KICK-DOWN SWITCH (A/T only)----- | B | ABOVE ACCELERATOR PEDAL |
| KICK-DOWN SOLENOID (A/T only)--- | B | AT TRANSMISSION |
| LICENCE LIGHT----- | F | AT REAR OF BOX |
| MAIN FUSIBLE LINK----- | A-G | BEHIND PASSENGER SEAT |
| MARKER LIGHT | | |
| FRONT----- | F | AT BOTH SIDE OF FRONT BUMPER |
| FRONT SIDE----- | F | AT BOTH SIDE OF FRONT FENDER |
| REAR SIDE----- | F | AT BOTH SIDE OF BOX |
| OIL LEVEL SWITCH----- | C | AT OIL PAN |
| OIL LEVEL WARNING LIGHT----- | C | AT COMBINATION METER |
| OIL THERMO SENSOR----- | A | AT OIL PAN |
| PANEL LIGHT RESISTOR----- | E | ON DASHBOARD |
| PARKING BRAKE SWITCH----- | C | AT FRONT OF PARKING BRAKE ROD |
| POWER VALVE (A/T only)----- | B | AT CARBURETOR |
| RADIO----- | G | ON DASHBOARD |
| REGULATOR----- | A-C | ON LEFT FRONT FENDER APRON |
| RETARD RELAY----- | B,C | ON LEFT FRONT FENDER APRON |
| ROOM LIGHT----- | G | INSIDE OF LEFT REAR PILLAR |
| SCREEN WASHER MOTOR----- | D | ON LEFT FRONT FENDER APRON |
| SCREEN WIPER MOTOR----- | D | ON UPPER COWL CENTER |
| SEAT BELT SWITCH----- | C | UNDER PASSENGER SEAT |
| SEAT BELT TIMER----- | C | UNDER DASHBOARD |
| SEAT BELT WARNING BUZZER----- | C | UNDER DASHBOARD |
| SEAT BELT WARNING LIGHT----- | C | FRONT CENTER OF ROOF |
| SPEAKER----- | G | ON DASHBOARD |
| STARTER MOTOR----- | A,B | AT ENGINE |
| STOP LIGHT SWITCH----- | F | ABOVE BRAKE PEDAL |
| STOP, TURN SIGNAL & MARKER LIGHT | F | AT REAR OF BOX |
| SUB ZERO MOTOR----- | A | ON RIGHT FRONT FENDER APRON |
| TACHOMETER----- | C | AT COMBINATION METER |
| TURN SIGNAL LIGHT | | |
| FRONT----- | F | AT BOTH SIDE OF FRONT BUMPER |
| INDICATOR----- | F | AT COMBINATION METER |
| TURN SIGNAL RELAY----- | F | UNDER DASHBOARD LEFT |
| WATER TEMPERATURE GAUGE----- | C | AT COMBINATION METER |
| WATER TEMPERATURE GAUGE UNIT---- | C | ON ENGINE |
| WATER THERMO SWITCH----- | B | AT LEFT REAR OF ENGINE |

• STARTING SYSTEM
• SUB ZERO SYSTEM

• CHARGING SYSTEM
• INHIBITOR SWITCH

A

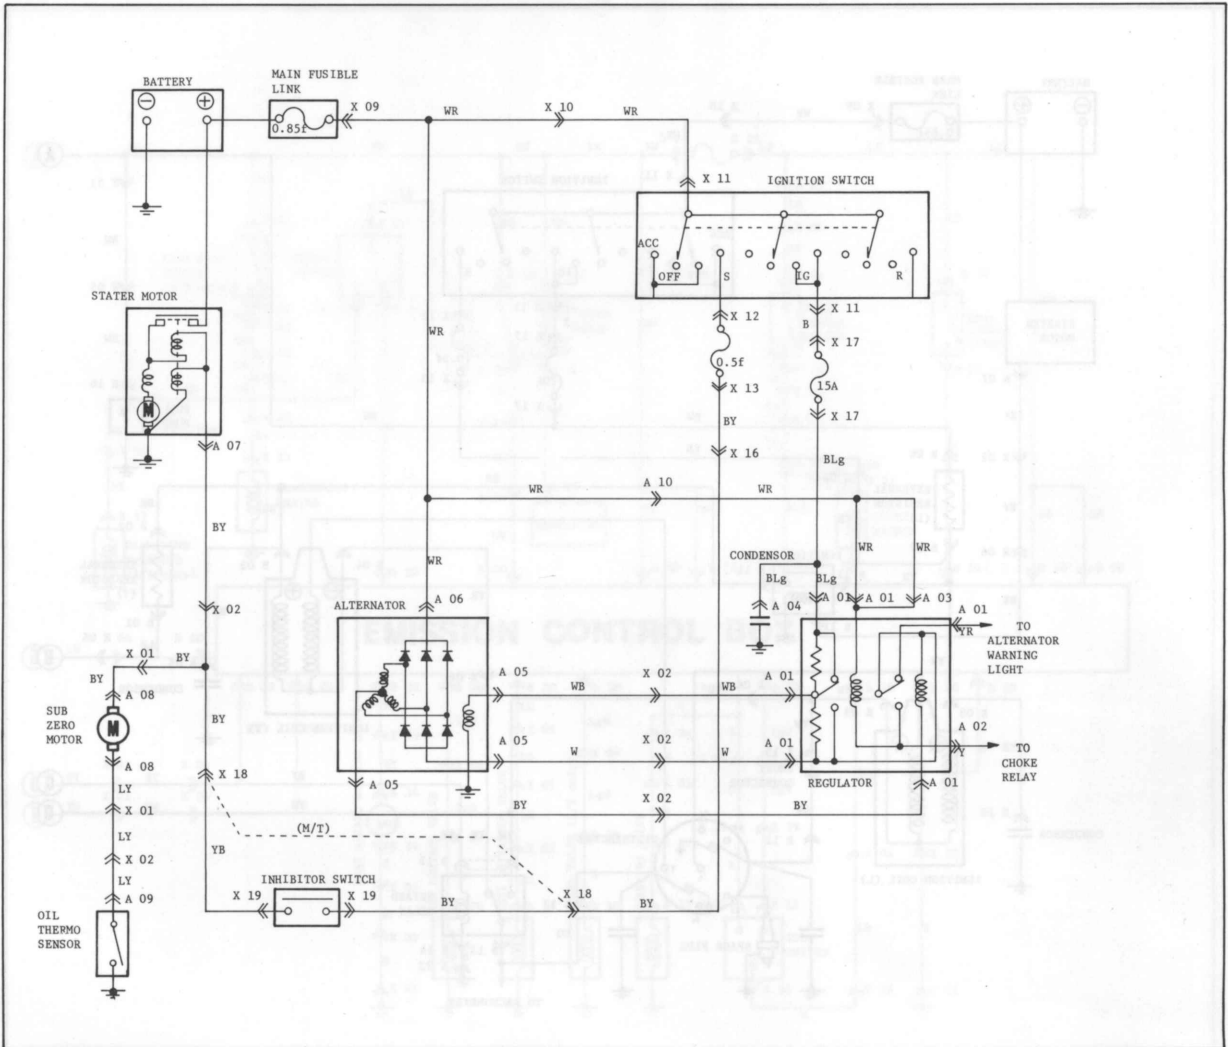


| | | | |
|--|---|---|---|
| <p>A 01 REGULATOR</p> <p>NEAR REGULATOR</p> | <p>A 02 REGULATOR</p> <p>NEAR REGULATOR</p> | <p>A 03 REGULATOR</p> <p>NEAR REGULATOR</p> | <p>A 04 CONDENSOR</p> <p>NEAR REGULATOR</p> |
| <p>A 05 ALTERNATOR</p> <p>AT ALTERNATOR</p> | <p>A 06 ALTERNATOR</p> <p>AT ALTERNATOR</p> | <p>A 07 STATER MOTOR</p> <p>AT STATER MOTOR</p> | <p>A 08 SUB ZERO MOTOR</p> <p>AT SUB ZERO MOTOR</p> |
| <p>A 09 OIL TERMO SENSOR</p> <p>LEFT UNDER OF INTERMEDIATE HOUSING</p> | <p>A 10 CONNECTOR TO ENGINE HARNESS</p> <p>ON LEFT FRONT FENDER APRON</p> | | |

A

• IGNITION SYSTEM • FUEL PUMP


STARTING SYSTEM
SUB ZERO SYSTEM

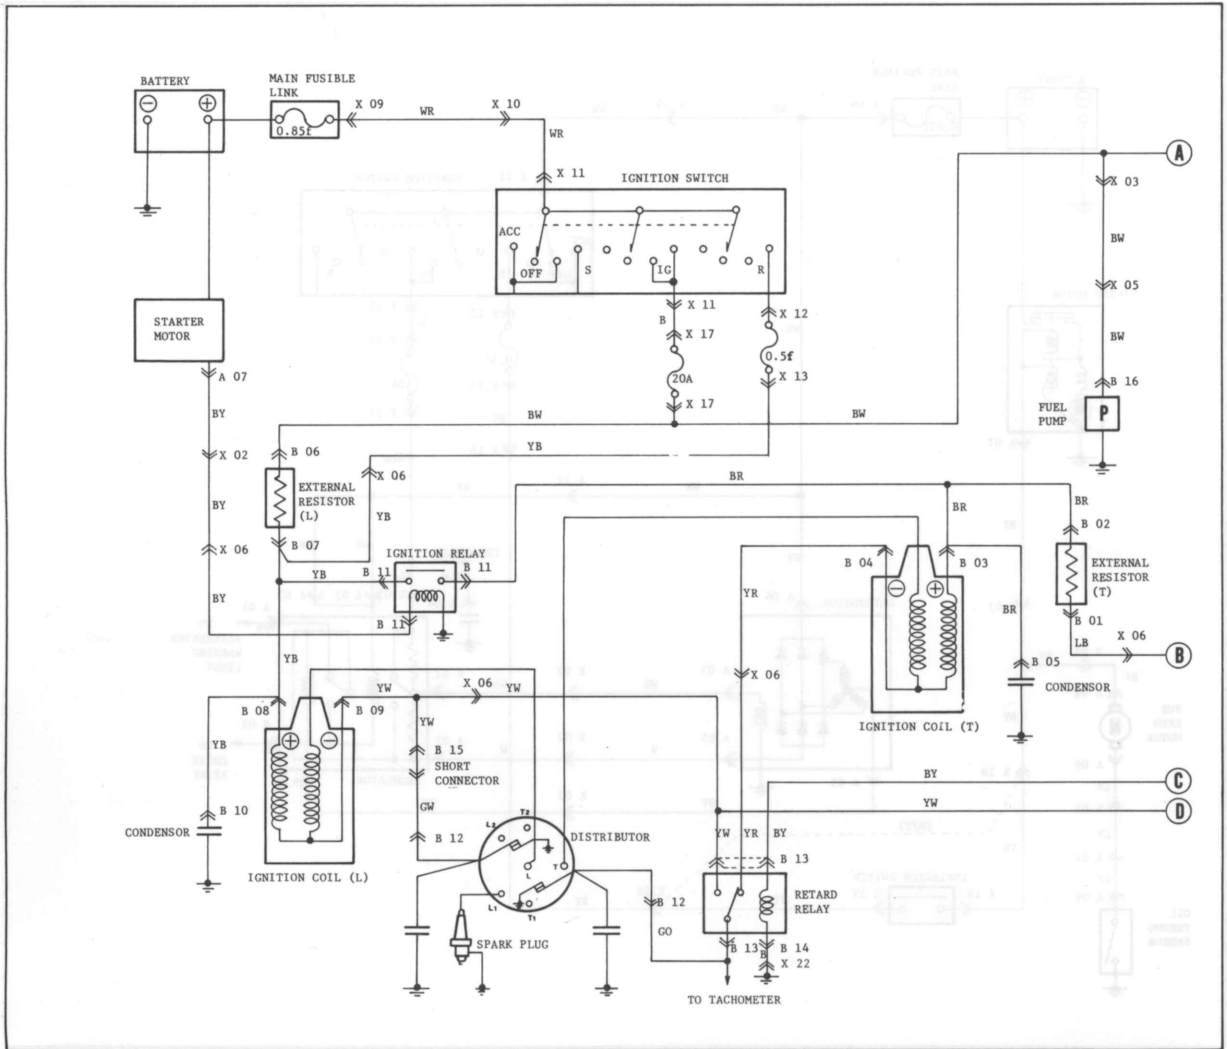

| | | | | | |
|--|--|--|--|---|---|
| B 01 EXTERNAL RESISTOR (T) AT EXTERNAL RESISTOR | B 02 EXTERNAL RESISTOR (T) AT EXTERNAL RESISTOR | B 03 ⊕ TERMINAL OF IGNITION COIL (T) AT IGNITION COIL | B 04 ⊖ TERMINAL OF IGNITION COIL AT IGNITION COIL | B 05 CONDENSOR NEAR DISTRIBUTOR | B 06 EXTERNAL RESISTOR AT EXTERNAL RESISTOR |
| B 07 EXTERNAL RESISTOR AT EXTERNAL RESISTOR | B 08 ⊕ TERMINAL OF IGNITION COIL (L) AT IGNITION COIL | B 09 ⊖ TERMINAL OF IGNITION COIL (L) AT IGNITION COIL | B 10 CONDENSOR NEAR IGNITION COIL | B 11 IGNITION RELAY LEFT FRONT FENDER APRON | B 12 CONNECTOR TO DISTRIBUTOR NEAR DISTRIBUTOR |
| B 13 RETARD RELAY AT RETARD RELAY | B 14 RETARD RELAY AT RETARD RELAY | B 15 SHORT CONNECTOR NEAR RETARD RELAY | B 16 FUEL PUMP NEAR FUEL PUMP | B 17 KICK-DOWN SWITCH ABOVE ACCELERATOR PEDAL | B 18 SHORT CONNECTOR NEAR RETARD RELAY |
| B 19 KICK-DOWN SOLENOID NEAR LEFT OF CLUTCH HOUSING | B 20 EMISSION CONTROL BOX BEHIND BACK SEAT RIGHT | B 21 CARBURETOR HEATER NEAR ALTERNATOR | B 22 CHOKE SWITCH NEAR CHOKE SWITCH | B 23 CHOKE RELAY AT CHOKE RELAY | B 24 CHOKE RELAY AT CHOKE RELAY |
| B 25 FUSE HOLDER NEAR EMISSION CONTROL BOX | B 26 WATER THERMO SWITCH ON FRONT ROTOR HOUSING | B 27 FUEL PUMP NEAR FUEL PUMP | B 28 AIR CONTROL VALVE NEAR AIR PUMP | B 29 CONNECTOR TO CAB. HARNESS ON RIGHT FRONT FENDER | B 30 POWER VALVE NEAR AIR PUMP |
| B 31 IDLE SWITCH NEAR AIR PUMP | B 32 CONSTANT VALVE ON REAR ROTOR HOUSING | B 33 ANTI AFTERBURN VALVE ON REAR ROTOR HOUSING | B 34 HEAT HAZARD WARNING LIGHT BEHIND METER SET RIGHT | | |

• EMISSION CONTROL SYSTEM
• KICK-DOWN SYSTEM


B

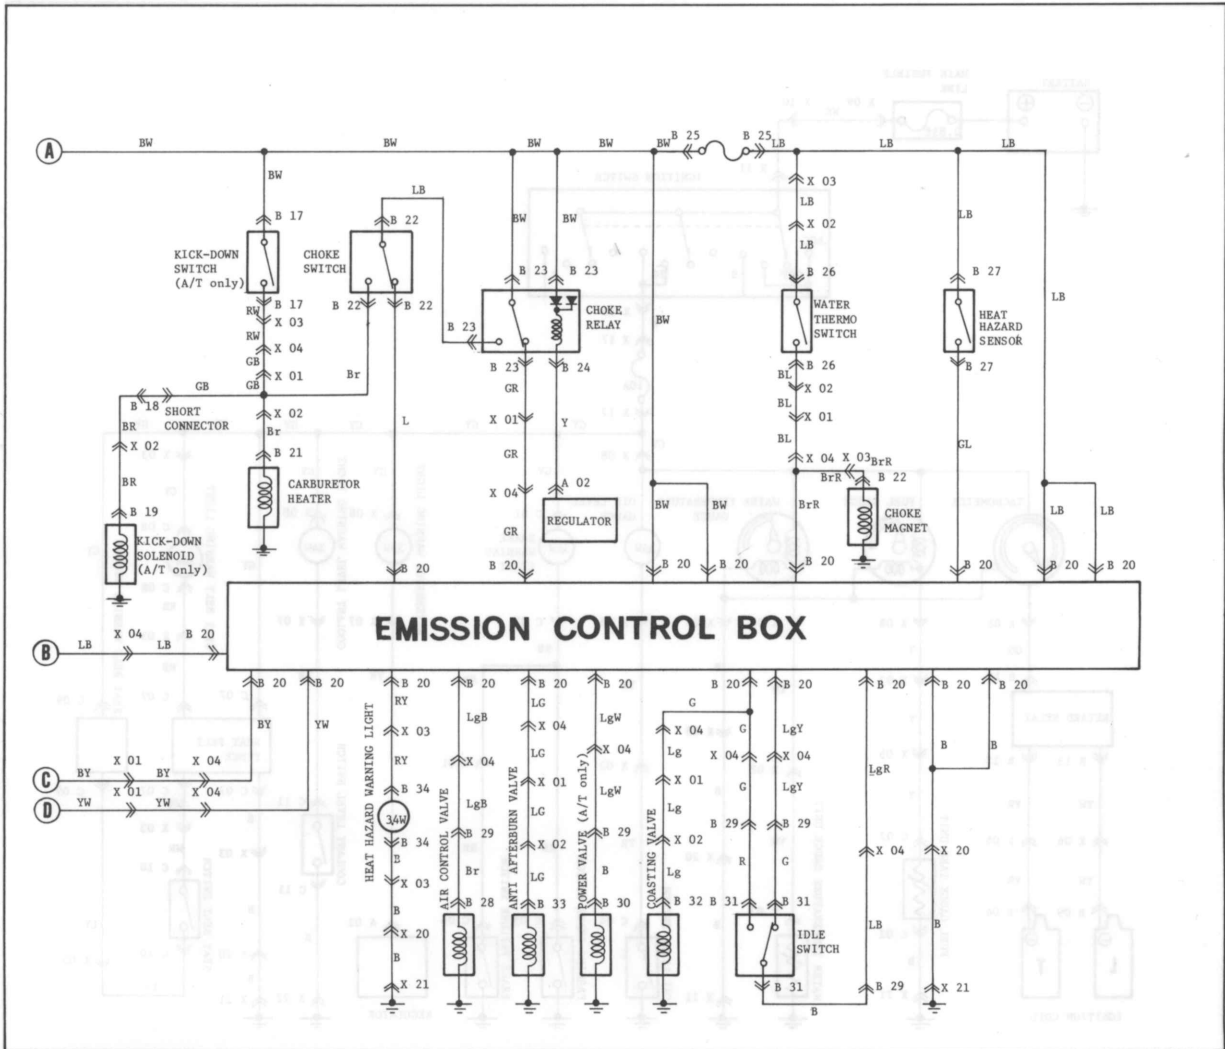

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

C

• METER SYSTEM • SEAT BELT WARNING SYSTEM • WARNING LIGHT SYSTEM

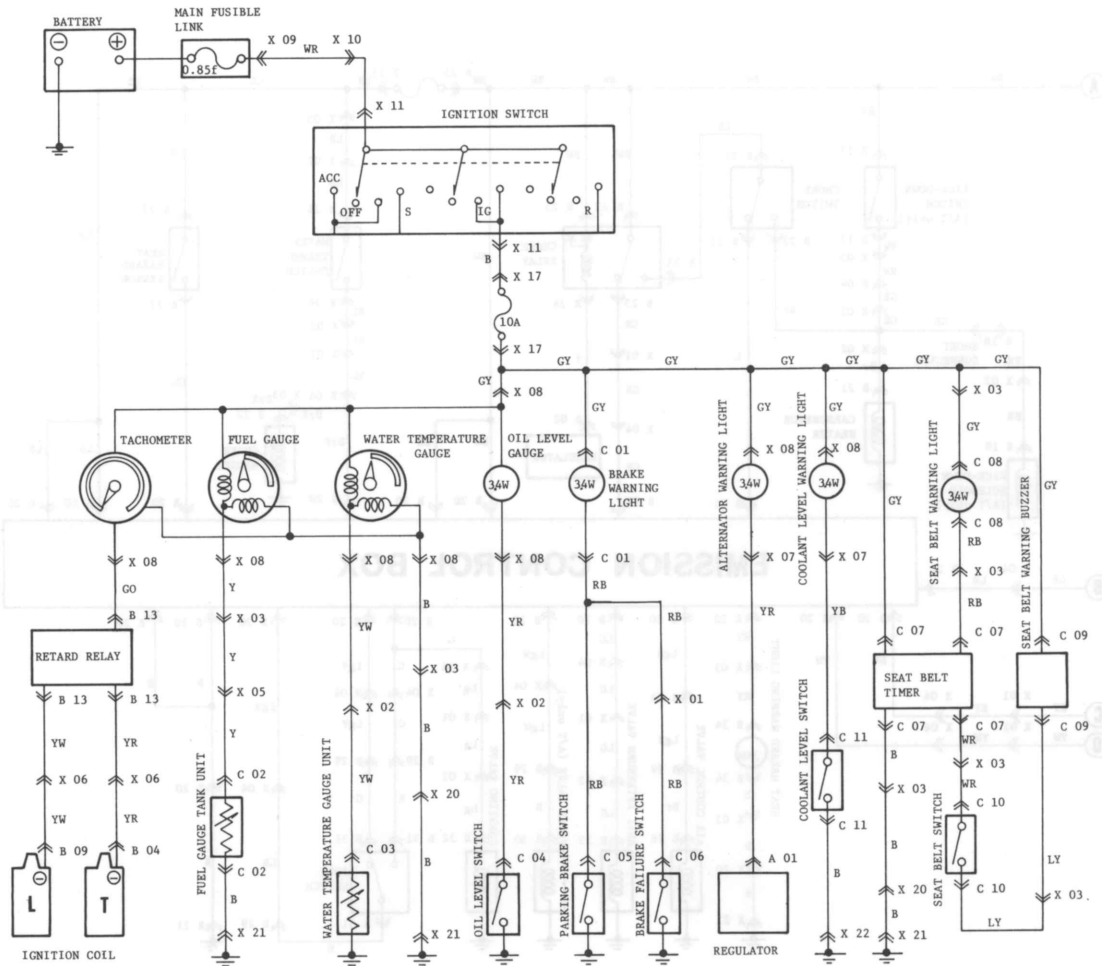


 
 

 



 






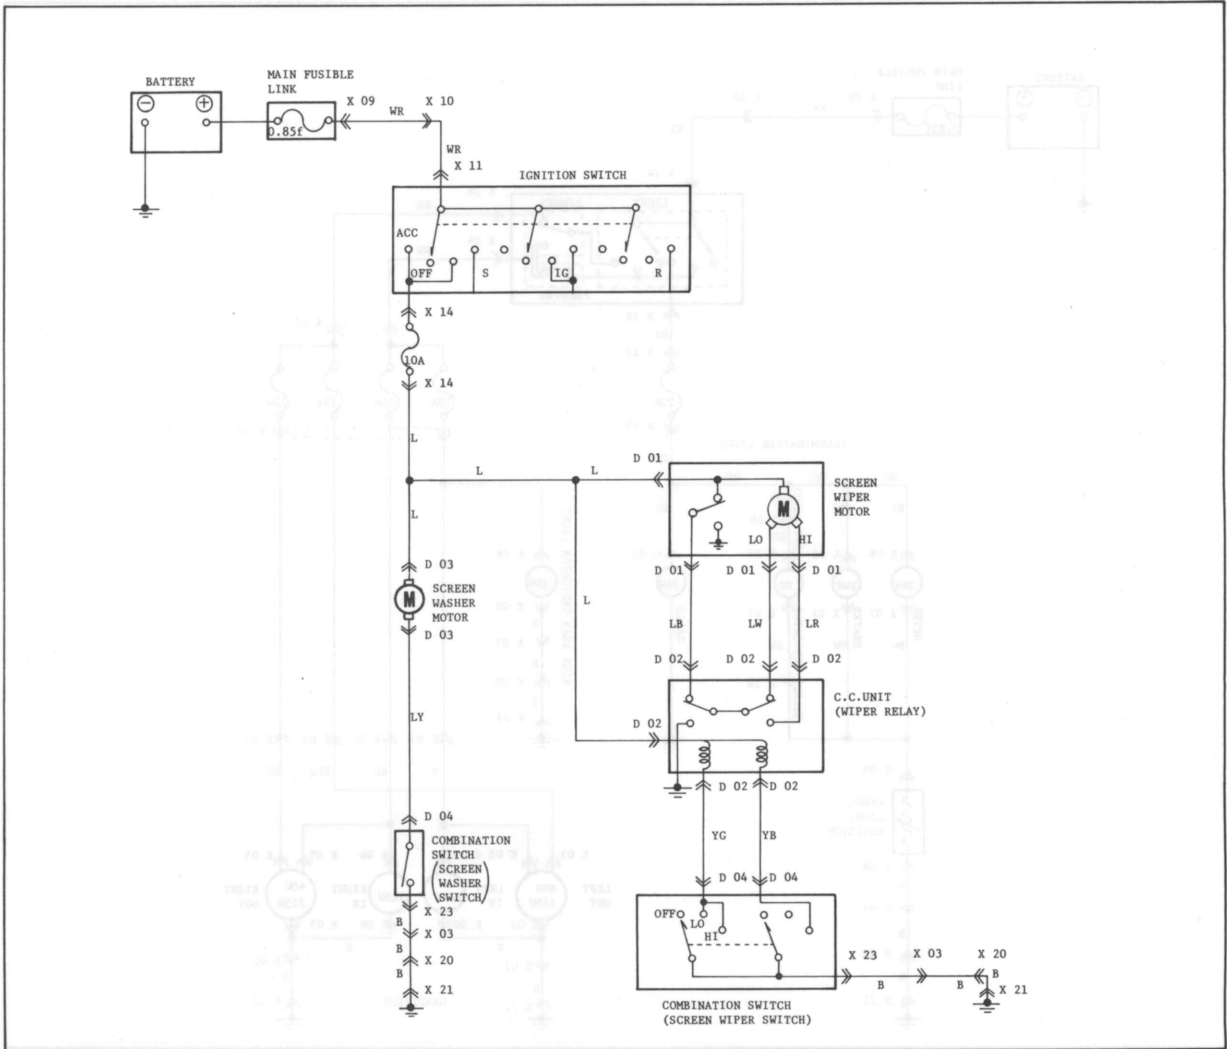

| | | | |
|---|---|---|--|
| <p>C 01 BRAKE WARNING LIGHT</p> <p>BEHIND METER SET RIGHT</p> | <p>C 02 FUEL GAUGE TANK UNIT</p> <p>AT FUEL TANK</p> | <p>C 03 WATER TEMPERATURE GAUGE UNIT</p> <p>LEFT SIDE OF REAR HOUSING</p> | <p>C 04 OIL LEVEL SWITCH</p> <p>LEFT UNDER OF INTERMEDIATE HOUSING</p> |
| <p>C 05 PARKING BRAKE SWITCH</p> <p>NEAR TURN SIGNAL RELAY</p> | <p>C 06 BRAKE FAILURE SWITCH</p> <p>AT BRAKE FAILURE SWITCH</p> | <p>C 07 SEAT BELT TIMER</p> <p>UNDER DASHBOARD RIGHT</p> | <p>C 08 SEAT BELT WARNING LIGHT</p> <p>BEHIND BACK SEAT LEFT</p> |
| <p>C 09 SEAT BELT WARNING BUZZER</p> <p>UNDER DASHBOARD LEFT</p> | <p>C 10 SEAT BELT SWITCH</p> <p>BEHIND BACK SEAT LEFT</p> | <p>C 11 COOLANT LEVEL SWITCH</p> <p>ON LEFT FRONT FENDER APRON</p> | <p>A 01 REGULATOR</p> <p>NEAR REGULATOR</p> |
| <p>B 04 ⊖ TERMINAL OF IGNITION COIL (T)</p> <p>AT IGNITION COIL</p> | <p>B 09 ⊖ TERMINAL OF IGNITION COIL (I)</p> <p>AT IGNITION COIL</p> | <p>B 13 RETARD RELAY</p> <p>AT RETARD RELAY</p> | |

• SCREEN WIPER SYSTEM •

HEADLIGHT SYSTEM

D




| D 01 SCREEN WIPER MOTOR  NEAR SCREEN WIPER MOTOR | D 02 C.C.UNIT (WIPER RELAY)  UNDER DASHBOARD LEFT END | D 03 SCREEN WASHER MOTOR  AT SCREEN WASHER MOTOR | D 04 COMBINATION SWITCH  IN STEERING COLUMN COVER |
|---|--|---|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

E

• HEADLIGHT SYSTEM

• ILLUMINATION LIGHT SYSTEM

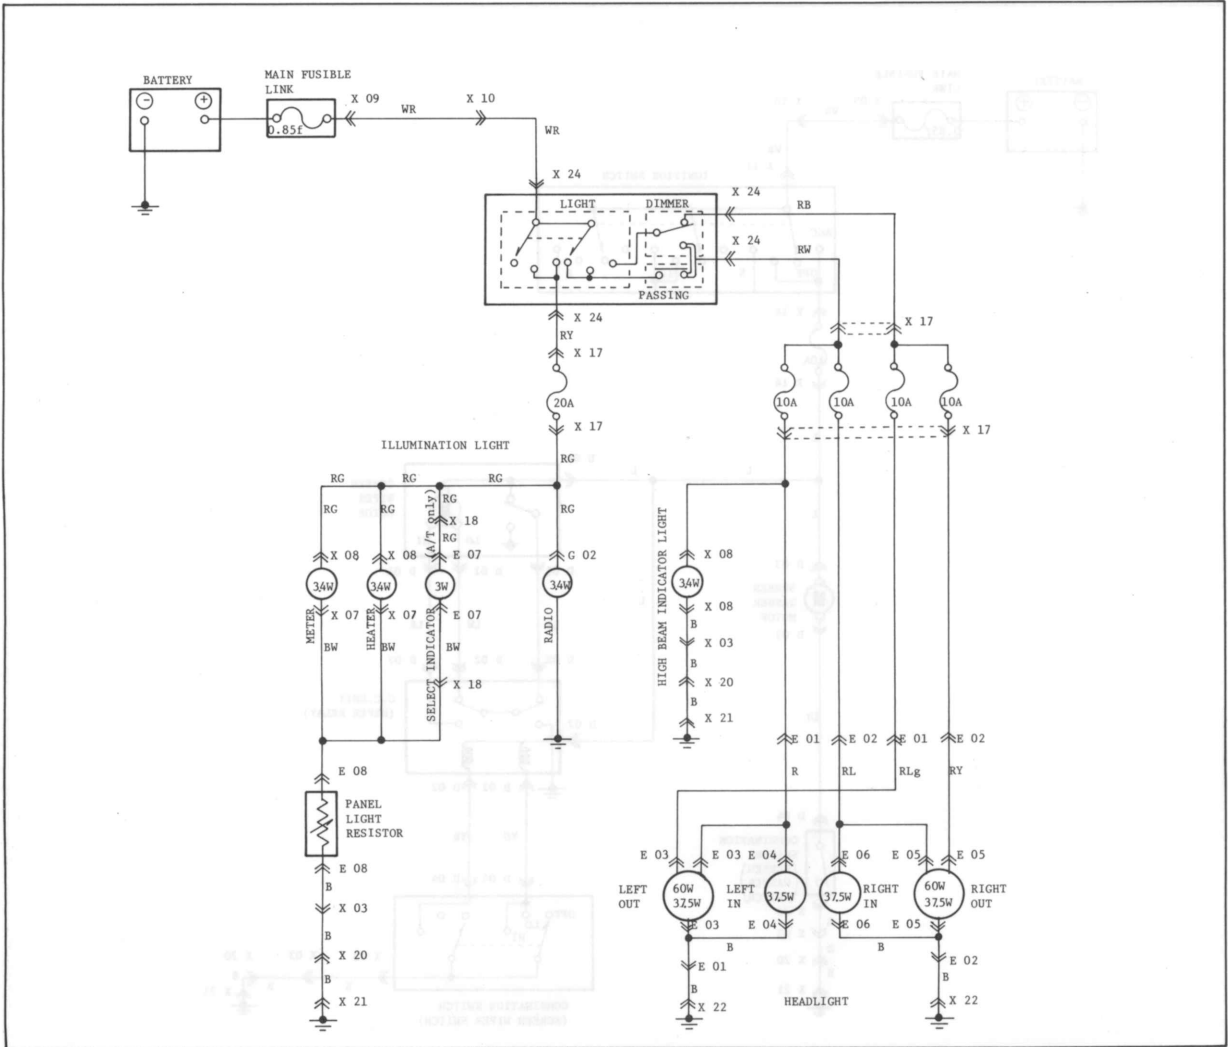


| | | | |
|---|---|---|--|
| <p>E 01 CONNECTOR TO HEADLIGHT (LEFT)</p> <p>ON LEFT FRONT FENDER</p> | <p>E 02 CONNECTOR TO HEADLIGHT (RIGHT)</p> <p>ON RIGHT FRONT FENDER</p> | <p>E 03 HEADLIGHT OUT (LEFT)</p> <p>AT HEADLIGHT OUT</p> | <p>E 04 HEADLIGHT IN (LEFT)</p> <p>AT HEADLIGHT IN</p> |
| <p>E 05 HEADLIGHT OUT (RIGHT)</p> <p>AT HEADLIGHT OUT</p> | <p>E 06 HEADLIGHT IN (RIGHT)</p> <p>AT HEADLIGHT IN</p> | <p>E 07 SELECT INDICATOR ILLUMINATION LIGHT (A/T only)</p> <p>NEAR INHIBITOR SWITCH</p> | <p>E 08 PANEL LIGHT RESISTOR</p> <p>BEHIND METER SET RIGHT</p> |
| <p>G 02 RADIO</p> <p>AT RADIO</p> | | | |
| | | | |

• LIGHT SYSTEM

• HORN

F

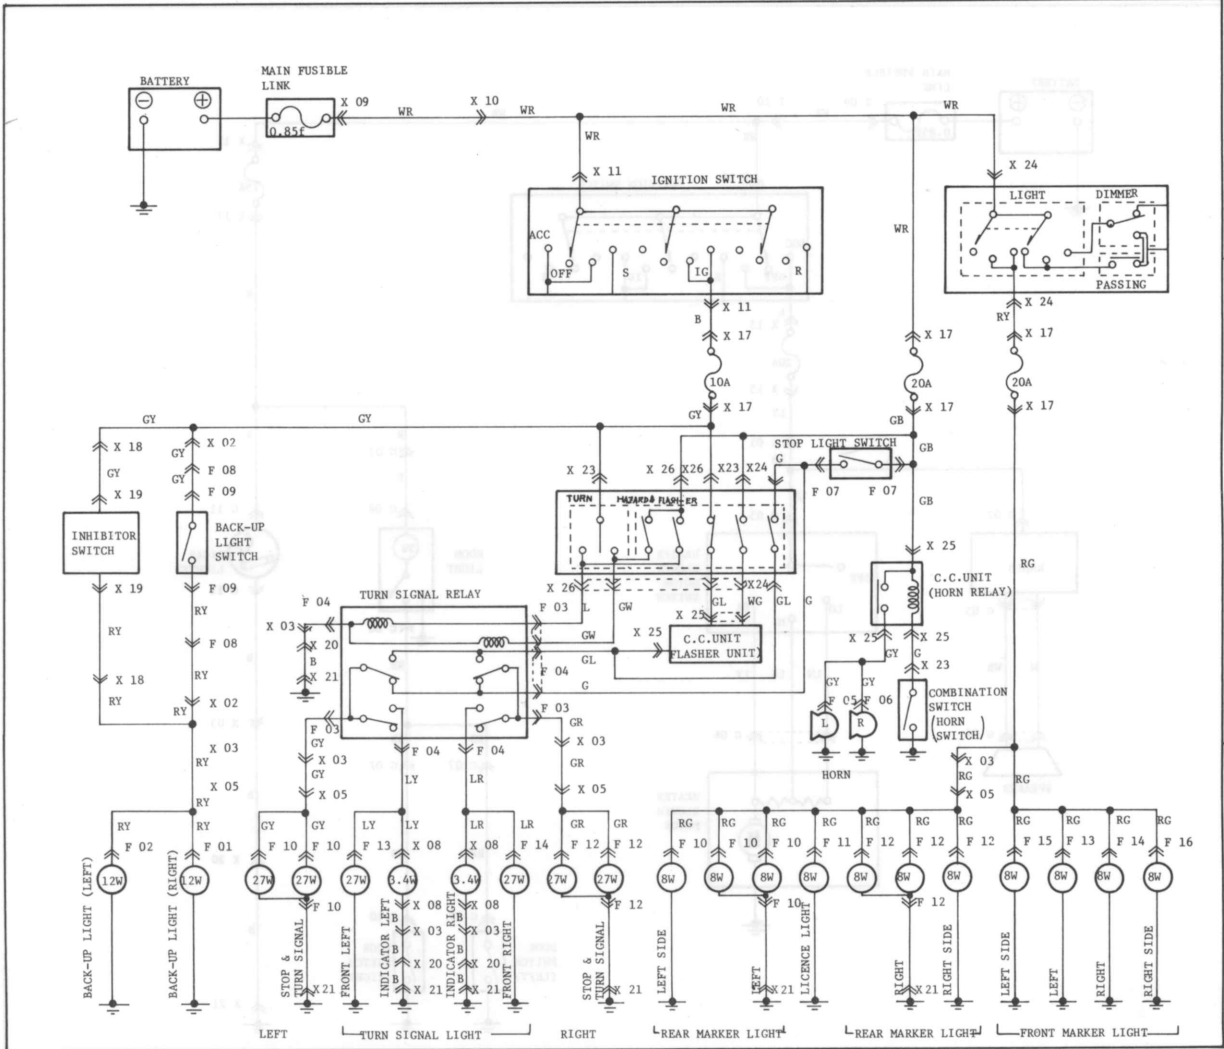


| | | | |
|---|--|--|---|
| <p>F 01 BACK-UP LIGHT (LEFT)</p> <p>BEHIND BACK-UP LIGHT</p> | <p>F 02 BACK-UP LIGHT (RIGHT)</p> <p>BEHIND BACK-UP LIGHT</p> | <p>F 03 TURN SIGNAL RELAY</p> <p>UNDER DASHBOARD LEFT</p> | <p>F 04 TURN SIGNAL RELAY</p> <p>UNDER DASHBOARD LEFT</p> |
| <p>F 05 HORN (LEFT)</p> <p>BEHIND HEADLIGHT</p> | <p>F 06 HORN (RIGHT)</p> <p>BEHIND HEADLIGHT</p> | <p>F 07 STOP LIGHT SWITCH</p> <p>ABOVE BRAKE PEDAL</p> | <p>F 08 CONNECTOR TO BACK-UP LIGHT SWITCH</p> <p>NEAR OIL FILTER</p> |
| <p>F 09 BACK-UP LIGHT SWITCH</p> <p>AT BACK-UP LIGHT SWITCH</p> | <p>F 10 REAR COMBINATION LIGHT (LEFT)</p> <p>BEHIND REAR COMBINATION LIGHT</p> | <p>F 11 LICENCE LIGHT</p> <p>BEHIND LICENCE LIGHT</p> | <p>F 12 REAR COMBINATION LIGHT (RIGHT)</p> <p>BEHIND REAR COMBINATION LIGHT</p> |
| <p>F 13 FRONT TURN SIGNAL & MARKER LIGHT (LEFT)</p> <p>BEHIND HEADLIGHT</p> | <p>F 14 FRONT TURN SIGNAL & MARKER LIGHT (RIGHT)</p> <p>BEHIND HEADLIGHT</p> | <p>F 15 FRONT SIDE MARKER LIGHT (LEFT)</p> <p>BEHIND HEADLIGHT</p> | <p>F 16 FRONT SIDE MARKER LIGHT (RIGHT)</p> <p>BEHIND HEADLIGHT</p> |

G

- HEATER SYSTEM
- CIGAR LIGHTER

- RADIO
- ROOM LIGHT

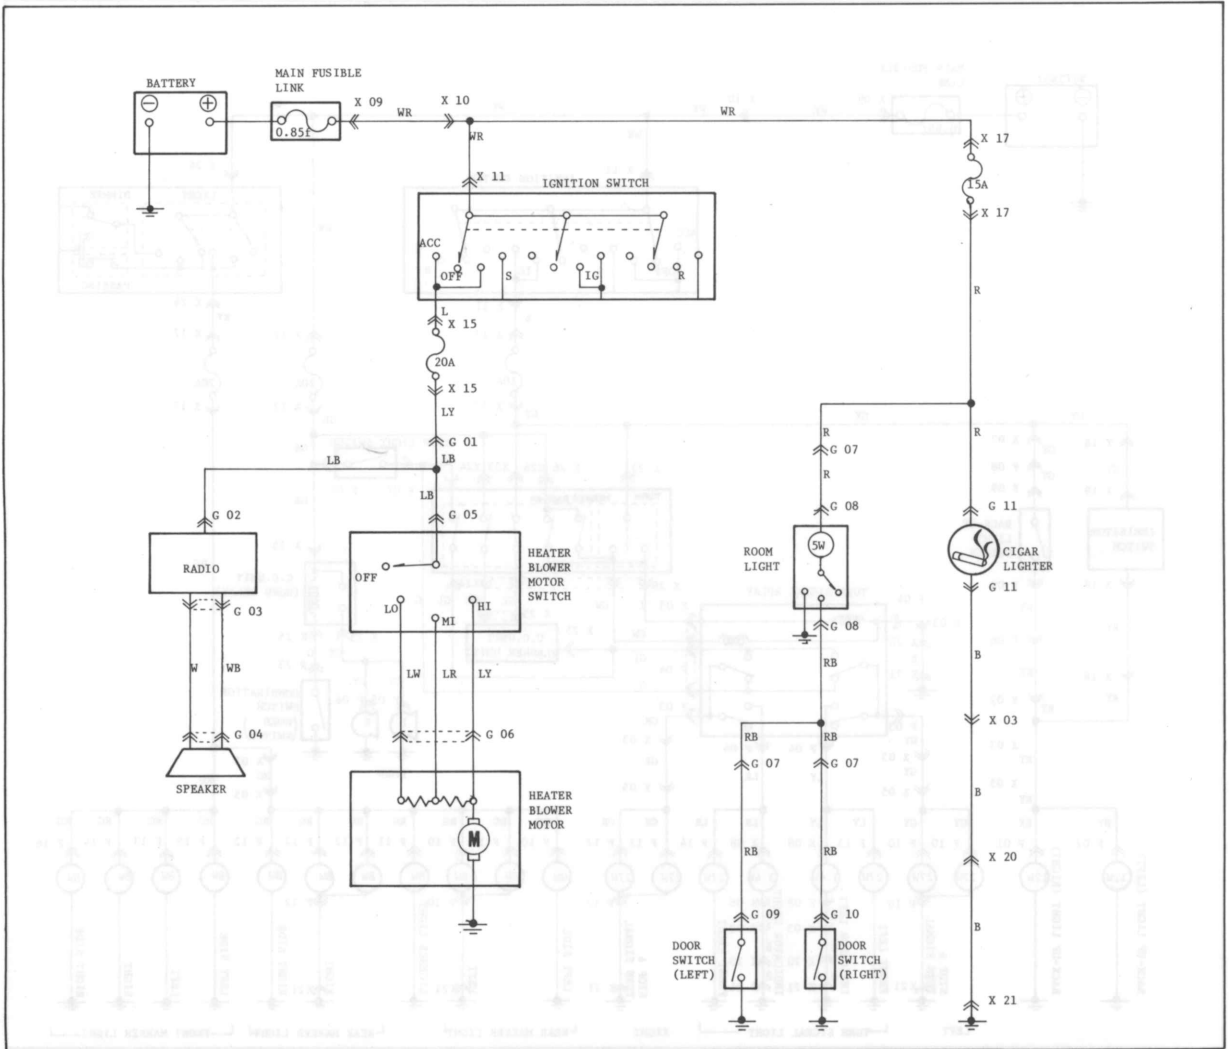

| | | | |
|--|--|--|---|
| <p>G 01 CONNECTOR TO IGNITION SWITCH</p> <p>RIGHT OF STEERING COLUMN SHAFT</p> | <p>G 02 RADIO</p> <p>AT RADIO</p> | <p>G 03 RADIO</p> <p>AT RADIO</p> | <p>G 04 SPEAKER</p> <p>AT SPEAKER</p> |
| <p>G 05 HEATER BLOWER MOTOR SWITCH</p> <p>BEHIND METER SET RIGHT</p> | <p>G 06 HEATER BLOWER MOTOR</p> <p>NEAR BLOWER MOTOR</p> | <p>G 07 CONNECTOR TO ROOM LIGHT</p> <p>BEHIND BACK SEAT LEFT</p> | <p>G 08 ROOM LIGHT</p> <p>BEHIND ROOM LIGHT</p> |
| <p>G 09 DOOR SWITCH (LEFT)</p> <p>BEHIND BACK SEAT</p> | <p>G 10 DOOR SWITCH (RIGHT)</p> <p>BEHIND BACK SEAT</p> | <p>G 11 CIGAR LIGHTER</p> <p>BEHIND METER SET RIGHT</p> | |
| | | | |

| | | | |
|--|---|--|--|
| <p>X 01 CONNECTOR TO RIGHT FRONT HARNESS</p> <p>NEAR BRAKE FAILURE SWITCH</p> | <p>X 02 CONNECTOR TO ENGINE HARNESS</p> <p>ON LEFT FRONT FENDER APRON</p> | <p>X 03 CONNECTOR TO EMISSION HARNESS</p> <p>UNDER LEFT OF DASHBOARD</p> | <p>X 04 CONNECTOR TO EMISSION HARNESS</p> <p>UNDER LEFT OF DASHBOARD</p> |
| <p>X 05 CONNECTOR TO REAR HARNESS</p> <p>BEHIND BACK SEAT LEFT</p> | <p>X 06 CONNECTOR TO IGNITION HARNESS</p> <p>ON LEFT FRONT FENDER APRON</p> | <p>X 07 COMBINATION METER</p> <p>AT METER SET</p> | <p>X 08 COMBINATION METER</p> <p>AT METER SET</p> |
| <p>X 09 MAIN FUSIBLE LINK</p> <p>AT MAIN FUSIBLE LINK</p> | <p>X 10 CONNECTOR TO EMISSION HARNESS</p> <p>UNDER LEFT OF DASHBOARD</p> | <p>X 11 IGNITION HARNESS</p> <p>RIGHT OF STEERING COLUMN SHAFT</p> | <p>X 15 FUSE HOLDER</p> <p>RIGHT OF STEERING COLUMN SHAFT</p> |
| <p>X 12 FUSIBLE LINK</p> <p>RIGHT OF STEERING COLUMN SHAFT</p> | <p>X 13 FUSIBLE LINK</p> <p>RIGHT OF STEERING COLUMN SHAFT</p> | <p>X 14 FUSE HOLDER</p> <p>RIGHT OF STEERING COLUMN SHAFT</p> | <p>X 15 FUSE HOLDER</p> <p>RIGHT OF STEERING COLUMN SHAFT</p> |
| <p>X 16 CONNECTOR TO IGNITION SWITCH</p> <p>RIGHT OF STEERING COLUMN SHAFT</p> | <p>X 18 CONNECTOR TO INHIBITOR SWITCH</p> <p>UNDER LEFT OF DASHBOARD</p> | <p>X 17 FUSE BOX</p> <p>LEFT REAR CORNER OF ENGINE ROOM</p> | |
| <p>X 19 INHIBITOR SWITCH (A/T only)</p> <p>AT INHIBITOR SWITCH</p> | <p>X 20 CONNECTOR TO REAR HARNESS</p> <p>BEHIND BACK SEAT LEFT</p> | <p>X 21 EARTH</p> <p>AT FUEL PUMP BRACKET</p> | <p>X 24 COMBINATION SWITCH</p> <p>IN STEERING COLUMN COVER</p> |
| <p>X 21 EARTH</p> <p>AT FUEL PUMP BRACKET</p> | <p>X 22 EARTH</p> <p>AT IGNITION COIL BRACKET</p> | <p>X 23 COMBINATION SWITCH</p> <p>IN STEERING COLUMN COVER</p> | <p>X 24 COMBINATION SWITCH</p> <p>IN STEERING COLUMN COVER</p> |
| <p>X 25 COMBINATION SWITCH</p> <p>IN STEERING COLUMN COVER</p> | <p>X 26 C.C. UNIT</p> <p>UNDER DASHBOARD LEFT END</p> | | |

How to use this visitor display

This display shows a simplified system are shown left and right systems, such as starting system, ignition system, and the wiring diagram of each system is shown in the page respectively for your easy reference.

When you have the trouble in your car, please refer to the page.

1. OPEN THE PAGE OF "STARTING SYSTEM" FOR THE LIGHT BULBS AND THE WIRING DIAGRAM

2. READ THE CHECK POINTS ABOUT THE SYSTEM IN THE SYSTEM



3. READ THE CHECK POINTS OF THE SYSTEM IN THE SYSTEM AND THE WIRING DIAGRAM IN THE LAST PAGE. CHECK IF THE SYSTEM IS THE SYSTEM OF THIS PAGE.



4. THE DIRECTOR OF THE SYSTEM IS THE SYSTEM IN THE SYSTEM

