

# INDEX

## A

Air cleaner	65, 230
Air cleaner element	8
Air control system (1974)	
Altitude compensator test	93
Deceleration control valve test	92
Air injection system	
Air control valve	87-89
Air pump	87
Check valve	89
Description	87
Air pump and fan belts, maintenance	9
Alternator	109, 233
Axle, rear	
Installation	196
Oil change	13
Removal and inspection	193
Wheel bearing replacement	193

## B

Ball-joints	14, 210
Battery	109
Body	
Bumpers and grille	243
Doors	228
Glove box	222
Hood	236
Nose panel (RX-3)	243
Quarter trim panel	236
Seats	222
Tailgate, station wagon	241
Trunk lid and lock	238
Windows	229
Brake adjustment	183
Brake backing plate	176
Brake bleeding	183
Brake lines and warning switch	184
Brake master cylinder	
Assembly	179
Disassembly	177
Fluid level	10
Inspection	178
Removal and installation	176, 237
Brake pedal adjustment	183
Brakes, disc	
Assembly	172
Caliper disassembly	170-172
Caliper removal and installation	170
Disc inspection	173
Disc removal and installation	173
Inspection and repair	172
Pad replacement (RX-2)	168
Pad replacement (RX-3)	170

## Brakes, drum

Adjuster servicing	175
Drum inspection	173
Drum removal and installation	173
Shoe removal, inspection and installation	175
Wheel cylinder overhaul	176
Wheel cylinder removal and installation	175
Brake troubleshooting	26
Brake vacuum booster	
Booster test	179
Check valve test	179
Disassembly	180
Inspection and assembly	182
Removal and installation	180
Breaker points and condenser	15
Bumpers and grille	243

## C

Carburetor	
Assembly	75
Disassembly	66
Fast idle adjustment	76, 226-228, 231
Float adjustment	75, 230
Float level	11
Inspection	73
Removal and installation	66
Tune-up	18
Charging system troubleshooting	24
Clutch	
Bleeding the clutch	150
Disc	144
Fluid level	10
Installation	151
Master cylinder	148
Pedal adjustment	144
Release cylinder	148, 236
Release fork adjustment	144
Release mechanism	151
Removal and inspection	150
Specifications	152
Troubleshooting	26
Coil spring replacement	208
Cooling system	
Coolant hoses and clamps	13
Expansion tank	107
Fan and hub	106
Flushing	104, 232
Radiator	107
Thermostat	106
Water pump	107
Cover and oil seal, front	33

- D**
- Deceleration control system (1971-1973)
- Air supply valve ..... 92
  - Anti-afterburn valve ..... 90-91
  - Coasting valve ..... 91
  - Description ..... 90
  - Idle switch ..... 91
- Differential
- Inspection ..... 196
  - Removal and installation ..... 196
  - Specifications ..... 204
- Distributor ..... 125
- Distributor cap and rotor tune-up ..... 15
- Doors ..... 228
- Drive shaft
- Assembly ..... 193
  - Disassembly ..... 190
  - Inspection ..... 192
  - Removal and installation ..... 190
- E**
- Eccentric shaft ..... 57, 62
- Electrical system
- Alternator ..... 109, 233
  - Battery ..... 109
  - Distributors ..... 125
  - Fuses ..... 118
  - Horns ..... 120
  - Ignition control system ..... 126-131
  - Ignition system ..... 122-125
  - Instruments ..... 117
  - Lighting system ..... 114-116
  - Regulator ..... 110
  - Starter ..... 111-114, 233
  - Windshield washer and wipers ..... 120
  - Wiring diagrams ..... 132-143
- Emission control system
- Additional air control system (1974) .... 92
  - Air injection system ..... 87
  - Controls, maintenance ..... 12
  - Deceleration control system (1971-1973) 90
  - Evaporative emission control system .... 93
  - Exhaust gas recirculation system ..... 231
  - Thermal reactor ..... 85
- Engine
- Assembly ..... 57-62, 229
  - Cover and oil seal, front ..... 33
  - Eccentric shaft end-play ..... 62-63
  - Flywheel ..... 39-41
  - General information ..... 30
  - Installation ..... 32
  - Oil change ..... 8
  - Oil pan and strainer ..... 32
  - Oil pumps ..... 34-39, 229
  - Removal ..... 30
  - Rotor and housing disassembly ..... 41-49
  - Rotor and housing inspection and repair .. 57
  - Specifications ..... 64
  - Tightening torques ..... 64
  - Torque converter drive plate ..... 41
  - Troubleshooting ..... 24
- Evaporative emission canister ..... 14
- Evaporative emission control system ..... 93
- Evaporative emission hoses ..... 12
- Exhaust pipes and mufflers ..... 85
- Expansion tank ..... 107
- F**
- Fan and hub ..... 106
- Flywheel ..... 39
- Fuel pump ..... 76, 229
- Fuel system (see also Emission control system)
- Air cleaner ..... 65
  - Carburetor ..... 66-76
  - Filler cap ..... 12
  - Filter maintenance ..... 11
  - Fuel lines, maintenance ..... 8
  - Fuel pump ..... 25, 26, 76
  - Fuel tank ..... 93
  - Intake manifold ..... 77
  - Throttle linkage ..... 95
- Fuel tank ..... 93
- Fuses ..... 118
- G**
- General information ..... 1
- Glove box ..... 222
- H**
- Handbrake ..... 184
- Headlight ..... 114
- Hood ..... 236
- Horns ..... 120
- I**
- Ignition control system
- Choke switch test ..... 130
  - Control unit test (1974) ..... 130
  - Control unit test (1975-1977) ..... 233-236
  - Description ..... 126, 233
  - No. 1 coolant thermosensor ..... 126-127
  - No. 1 control box ..... 128
  - No. 2 control box ..... 129-130
  - No. 2 thermosensor ..... 127
  - Thermodetector test ..... 127
  - Vacuum switch test ..... 127
- Ignition system
- Coil replacement ..... 125
  - Coils ..... 12
  - Description ..... 122
  - Switch replacement ..... 123
  - Timing (1971-1973) ..... 16

Timing (1974) .....	18
Timing (1975-1976) .....	225
Timing (1977) .....	226
Instruments .....	117
Intake manifold .....	77

## L

Lighting system	
Front parking/turn signal lights .....	114
Headlight .....	114
License plate light .....	116
Side marker lights .....	115
Tail, brake, and back-up lights .....	115
Lubrication (see Maintenance and lubrication, periodic)	

## M

Maintenance and lubrication, periodic	
Air cleaner element .....	8, 13
Air pump and fan belts .....	9
Automatic transmission fluid .....	102
Ball-joints and idler arm .....	14
Battery .....	4, 109
Brake cylinders .....	176
Brake fluid level .....	10
Brake shoes, rear .....	175
Breaker points and condenser .....	15, 223
Carburetor .....	18
Carburetor float level .....	11, 75
Clutch fluid level .....	10
Clutch free-play .....	144
Coolant .....	104
Coolant hoses and clamps .....	13
Disc brake pads .....	168
Distributor cap and rotor .....	15
Downshift solenoid (automatic transmission) .....	12
Emission controls .....	12
Engine compression .....	22
Engine oil change .....	8
Evaporative emission canister .....	14
Evaporative emission hoses .....	12
Fuel filler cap .....	12
Fuel filter .....	11
Fuel lines .....	8
Handbrake .....	184
Idle speed and fuel mixture .....	18
Idle switch .....	91
Ignition coils .....	12
Ignition timing (1971-1973) .....	16
Ignition timing (1974) .....	18
Lubricants, recommended .....	7
Maintenance schedule .....	5-7, 224
Manual transmission oil change .....	13
Oil filter .....	11
Rear axle oil change .....	13
Routine checks .....	4

Spark plugs .....	15
Spark plug wires .....	12
Steering gear oil .....	13
Steering wheel play .....	10
Thermal reactor .....	12
Throttle and choke mechanism .....	11
Tire pressures .....	8
Tire rotation .....	11
Vacuum hoses .....	14
Ventilation system .....	12
Ventilation valve .....	14
Wheel bearings, front .....	211
Manual organization .....	2

## O

Oil filter maintenance .....	11
Oil pan and strainer .....	32
Oil pumps	
Description .....	34
Main pump inspection and repair .....	37
Oil metering pump .....	38, 39, 229
Removal and installation .....	35
Oil seal .....	33

## R

Radiator .....	107
Regulator, voltage .....	110
Rotor and housing	
Corner seal bores reaming .....	55
Disassembly .....	41-49
Eccentric shaft replacement .....	57
Intermediate and end housing inspection and repair .....	49
Main bearing replacement .....	52
Rotor and seal inspection .....	53
Rotor bearing replacement .....	56
Rotor housing inspection .....	52

## S

Stationary gear and main bearing inspection ..	49
Stationary gear removal and installation .....	51
Seats .....	222
Service hints .....	1
Shock absorbers, front .....	207
Spark plug tune-up .....	15
Spark plug wires .....	12
Specifications and data	
Clutch specifications .....	152
Differential and rear suspension specifications .....	204
Dimensions, general model .....	3
Engine specifications .....	64
Engine tightening torques .....	64
Governor pressure .....	164
Lubricants, recommended .....	7
Manual transmission specifications .....	167
Rear suspension tightening torques .....	204

- Suspension and steering specifications, front ..... 220
- Suspension and steering tightening torques, front ..... 221
- Tire pressures ..... 8
- Transmission line pressure ..... 167
- Voltage regulator resistance ..... 127
- Tune-up specifications ..... 15
- Speedometer ..... 117
- Stabilizer ..... 209
- Starter
  - Brush replacement ..... 113, 233
  - Removal and installation ..... 111
  - Troubleshooting ..... 23
- Steering
  - Column removal and installation (RX-2) .. 214
  - Gear and column removal and installation (RX-3) ..... 216
  - Gear oil ..... 13
  - Gear removal and installation (RX-2) .... 214
  - Specifications ..... 220
  - Steering wheel play ..... 10
  - Steering wheel removal and inspection .... 212
  - Tightening torques ..... 201
  - Troubleshooting ..... 27
- Steering linkage
  - Center link ..... 220
  - Idler arm ..... 216
  - Pitman arm ..... 220
  - Tie rod ..... 220
  - Tightening torques ..... 221
- Stoplight switch replacement ..... 184
- Suspension, front
  - Ball-joints ..... 210
  - Ball-joints and idler arm maintenance .... 14
  - Coil spring replacement ..... 208
  - Shock absorber replacement ..... 207
  - Specifications ..... 220
  - Stabilizer ..... 209
  - Suspension arms ..... 209
  - Tightening torques ..... 221
  - Troubleshooting ..... 27
- Suspension, rear
  - Link and lateral rod removal and installation (RX-2) ..... 201
  - Rear spring disassembly inspection and repair (RX-3) ..... 203
  - Shock absorber replacement (RX-2) .... 197
  - Shock absorber replacement ..... 202
  - Spring replacement (RX-2) ..... 201
  - Spring removal and installation (RX-3) .. 202
  - Specifications ..... 204
  - Tightening torques ..... 204, 238
- Thermal reactor
  - Maintenance, periodic ..... 12
  - Removal and installation ..... 85
- Thermostat ..... 106
- Throttle and choke mechanism maintenance 11
- Throttle linkage ..... 95
- Tire rotation ..... 11
- Tire wear analysis ..... 27
- Torque converter drive plate ..... 41
- Transmission, automatic
  - Checking procedures ..... 162
  - Downshift solenoid ..... 12
  - Governor pressure ..... 167
  - Inhibitor switch ..... 164
  - Installation ..... 166
  - Linkage adjustment ..... 163
  - Line pressure ..... 167
  - Removal and installation ..... 164
  - Troubleshooting ..... 26
- Transmission, manual
  - Assembly ..... 160
  - Disassembly ..... 156
  - Governor pressure ..... 167
  - Inspection and repair ..... 159
  - Oil change ..... 13
  - Removal and installation ..... 153, 237
  - Specifications ..... 167
  - Troubleshooting ..... 26
- Troubleshooting
  - Brakes ..... 26
  - Charging system ..... 24
  - Clutch ..... 26
  - Engine ..... 24
  - Fuel pump ..... 25, 26
  - Instruments ..... 21
  - Starter ..... 23
  - Steering and suspension ..... 27
  - Tire wear analysis ..... 27
  - Transmission ..... 26
  - Wheel balancing ..... 27
- Trunk lid and lock ..... 238
- Tune-up, engine
  - Breaker points and condenser ..... 15
  - Distributor cap and rotor ..... 15
  - Ignition timing (1971-1973) ..... 16
  - Ignition timing (1974) ..... 18
  - Spark plugs ..... 15
  - Specifications ..... 15

## V

- T**
- Tachometer ..... 117
- Tailgate, station wagon ..... 241
- V**
- Vacuum hoses ..... 14
- Ventilation system maintenance ..... 12
- Ventilation valve ..... 14

W

Water pump ..... 107

Wheel alignment

- Caster and camber ..... 207
- Pre-alignment check ..... 205
- Steering axis inclination ..... 207
- Steering lock angles ..... 207, 238
- Toe-in ..... 207

Wheel balancing ..... 27

Wheel bearings ..... 211

Windows ..... 229

Windshield washer and wipers ..... 120

Wiring diagrams

- 1972 RX-2 .....132-133
- 1972 RX-2 emission control system  
(early models) ..... 134
- 1972 RX-2 emission control system  
(late models) ..... 135
- 1972 RX-3 ..... 138-140
- 1973 RX-2 ..... 136
- 1973 RX-2 emission control system ..... 137
- 1973 RX-3 ..... 141-143

# NOTES

---

*[Faint, illegible text, likely bleed-through from the reverse side of the page.]*

*[Faint, illegible text, likely bleed-through from the reverse side of the page.]*

## NOTES

---

# NOTES

---

[Faint, illegible text in the left column]

[Faint, illegible text in the right column]



## NOTES

---