


WHEEL AND TIRE

DIRECTIONAL TIRE	12— 2
STORING TEMPORARY SPARE TIRE	12— 2
STORING STANDARD TIRE	12— 2

57G12X-501

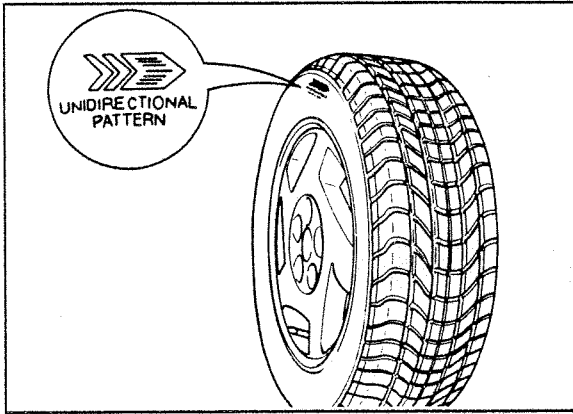

57G12X-502

DIRECTIONAL TIRE


The directional tire drains water out to both sides of the tread while rotating.

Note:

Rotation (forward rolling) direction is marked on the tire.

Warning!


Using directional tires in the wrong direction may cause slippage during wet road conditions.

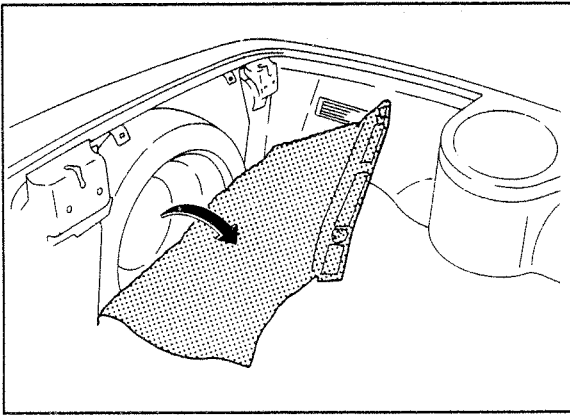

57G12X-503

STORING TEMPORARY SPARE TIRE

The temporary spare tire is stored at the rear of the luggage space.

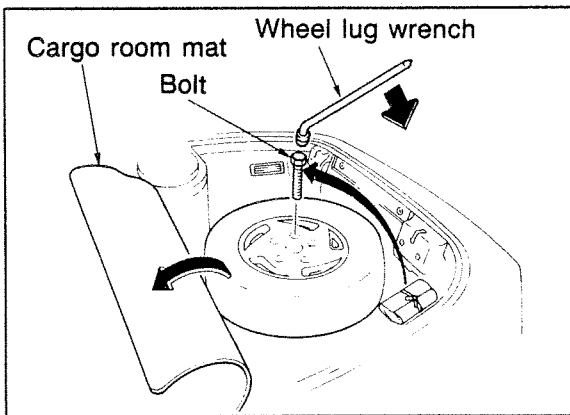

57G12X-504

STORING STANDARD TIRE

When the temporary spare tire is used, the standard tire which has been removed can be stored in the luggage space using the fixing bolt.