

EXHAUST SYSTEM

EXHAUST SYSTEM REMOVAL/INSTALLATION


X5U116W03

Warning

- When the engine and exhaust system are hot, they can badly burn. Turn off the engine and wait until they are cool before removing or installing the exhaust system.

1. Disconnect the negative battery cable.
2. Remove in the order indicated in the table.
3. Install in the reverse order of removal.

EXCEPT CALIFORNIA EMISSION REGULATIONS APPLICABLE MODEL

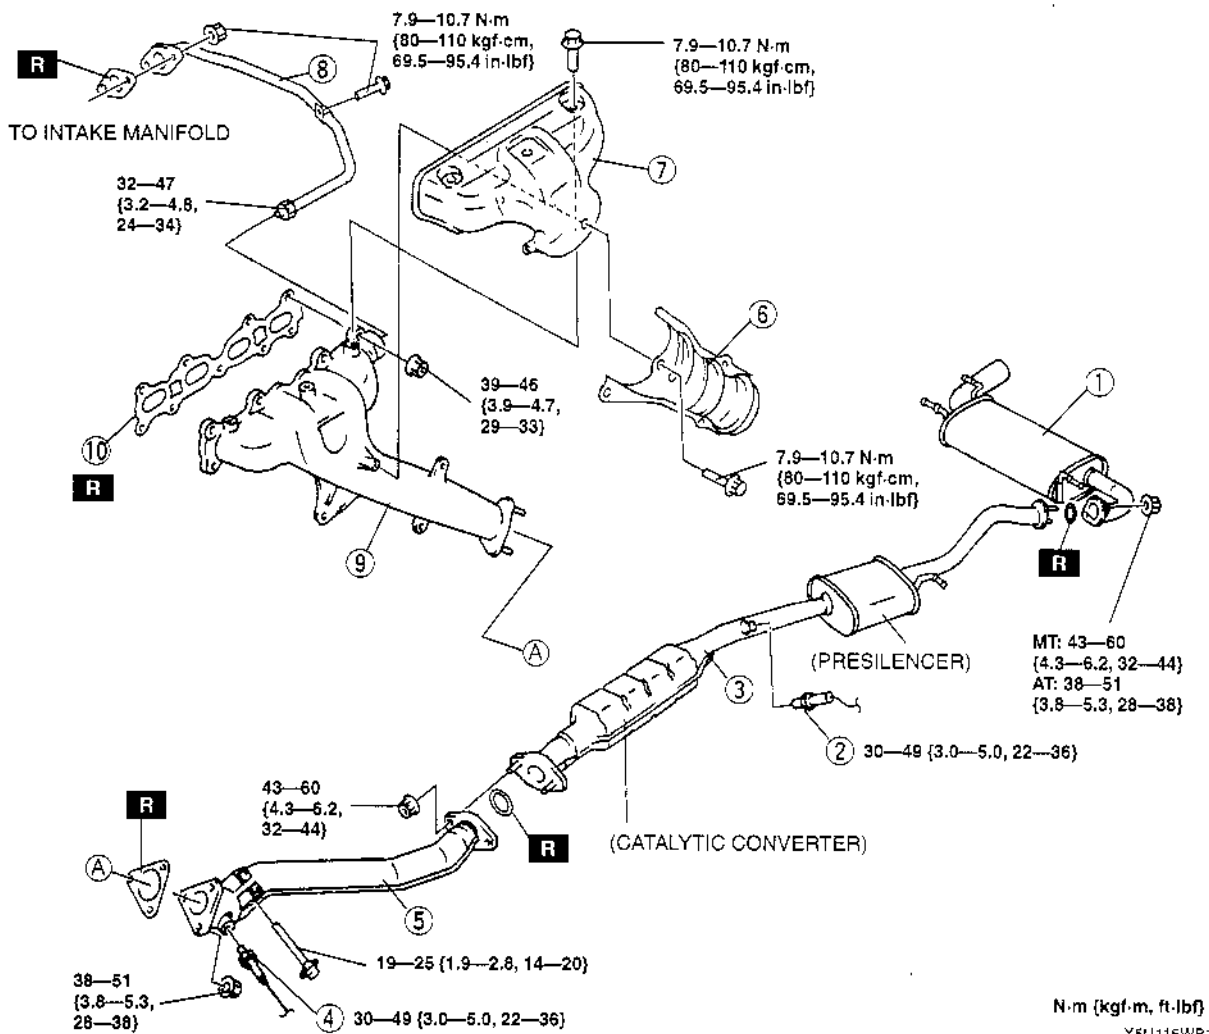

1	Main silencer
2	Heated oxygen sensor (Rear)
3	Middle pipe
4	Heated oxygen sensor (Front)
5	Front pipe
6	Exhaust manifold insulator No1 ☞ Removal Note

7	Exhaust manifold insulator No2
8	EGR pipe
9	Exhaust manifold
10	Exhaust manifold gasket ☞ Installation Note