


INSTRUMENTATION/DRIVER INFO.

WARNING AND INDICATOR LIGHT BULB REMOVAL/INSTALLATION

A5U092255431W01

1. Disconnect the negative battery cable.
2. Remove the instrument cluster. (See 09-22-3 INSTRUMENT CLUSTER REMOVAL/INSTALLATION.)
3. Turn the socket counterclockwise to remove the bulb as shown in the figure.
4. Install in the reverse order of removal.

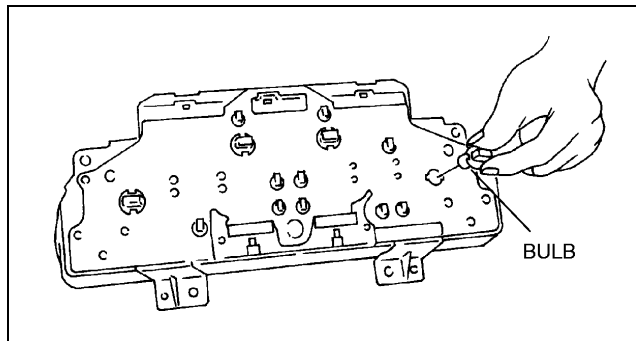


X5U922WAC

FUEL GAUGE SENDER UNIT INSPECTION

A5U092260960W01

1. Remove the fuel pump. (See 01-14-10 FUEL PUMP (FP) REMOVAL/INSTALLATION.)
2. Move the float to the topmost and bottommost positions, and verify that the resistance between terminals A and B of the unit and the position of the float are as indicated in the figure.
 - If they are not as indicated, replace the fuel gauge sender unit. (See 01-14-10 FUEL PUMP (FP) REMOVAL/INSTALLATION.)

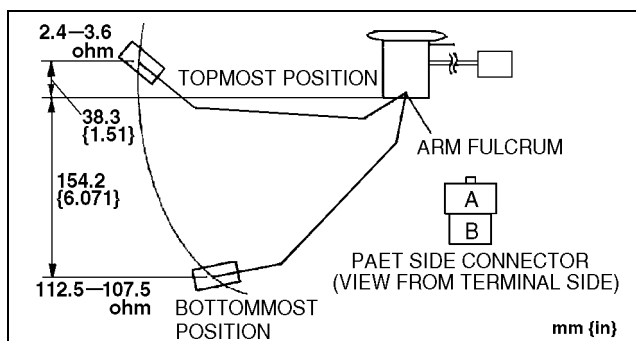

A5U0922W101

OIL PRESSURE SWITCH INSPECTION


A5U092218500W01

1. Verify that the oil pressure gauge needle moves to H when the engine is started.
2. Verify that the oil pressure gauge needle moves to L when the engine is stopped.
 - If the oil pressure gauge needle does not move, inspect the oil pressure gauge and related wiring harness.
 - If the oil pressure gauge and related wiring harness are normal, inspect the oil pressure. (See 01-11-3 OIL PRESSURE INSPECTION.)
 - If the oil pressure is normal, replace the oil pressure switch. (See 01-11-3 OIL PRESSURE INSPECTION.)

HORN REMOVAL/INSTALLATION

A5U092266790W01

1. Disconnect the negative battery cable.
2. Remove the upper seal board.
3. Disconnect the horn connector.
4. Remove the bolt.
5. Remove the horn.
6. Install in the reverse order of removal.

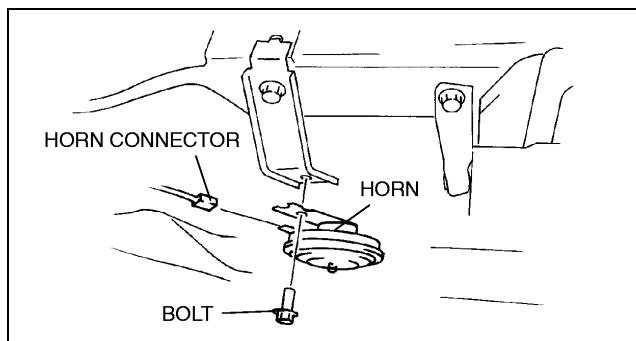

X5U922WAE