


EMISSION SYSTEM

EMISSION SYSTEM DIAGRAM [LF]

E5U01160000W02

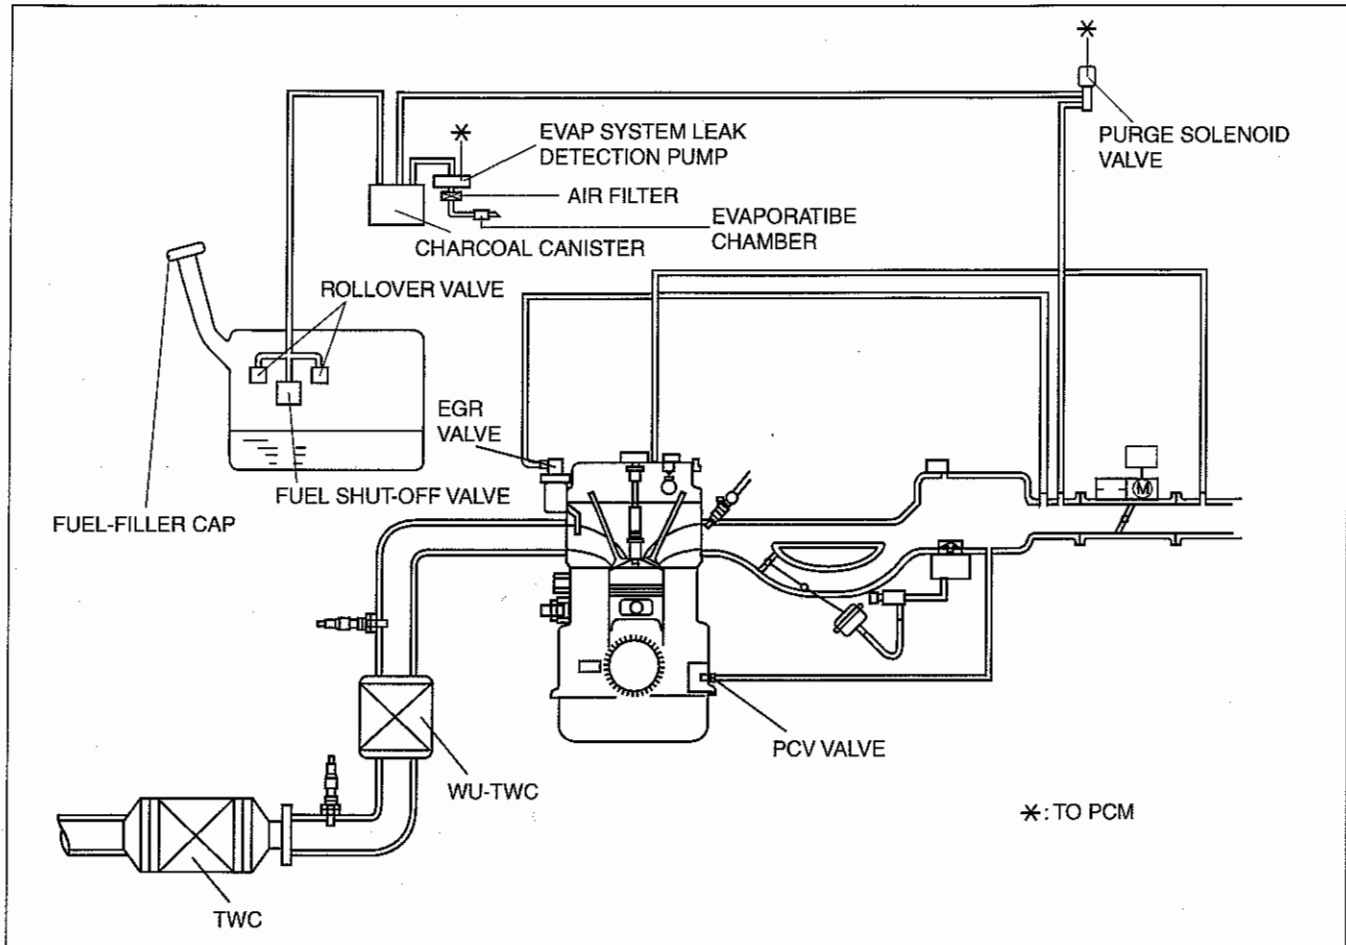

E5U116ZS5003

FUEL-FILLER CAP INSPECTION [LF]

E5U011642250W01


Leakage Inspection

1. Perform the following **SST** (Evaporative Emission System Tester 134-01049) self-test:

Note

- If the tester does not work correctly during self-test, refer to the tester operators manual for more detailed procedures.

- (1) Verify the gas cylinder valve is closed and the control valve located on the tester is in the TEST position. All tester display should be off at this time.
- (2) Connect the long hose (part of **SST**) to the tester.
- (3) Connect the manifold assembly (part of **SST**) to the long hose as shown.
- (4) Open the gas cylinder valve and verify the gas cylinder regulator left gauge reads **10 to 12 psi** (preset at factory).
 - If not, refer to the tester operators manual to contact tester manufacturer.
- (5) Press the ON/OFF switch to turn on the **SST** and make sure the left display reads **0.0**.
- (6) Turn the control valve on the tester to the FILL position.
- (7) Verify the left display reading is **within 13.9 to 14.0 in of water**.
 - If not, adjust the pressure using the regulator knob located on the right side of the tester.
- (8) Turn the control valve to TEST position and press the START switch.

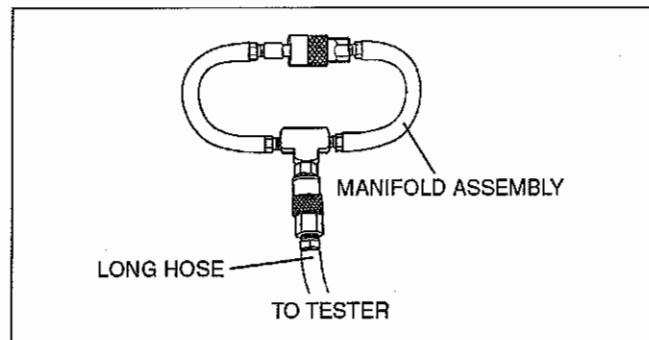

ZMU116WA6