

### INTAKE AIR SYSTEM

#### COMPONENTS

#### Removal / Inspection / Installation


##### Warning

- Before removing the intake manifold, release the fuel pressure from the fuel system to reduce the possibility of injury or fire. (Refer to page F-101.)

##### Note

- Before disconnecting the water hoses, drain the engine coolant.
- Use new gaskets during reassembly.

1. Remove in the order shown in the figure.
2. Check the components for damage and repair or replace as necessary.
3. Install in the reverse order of removal.

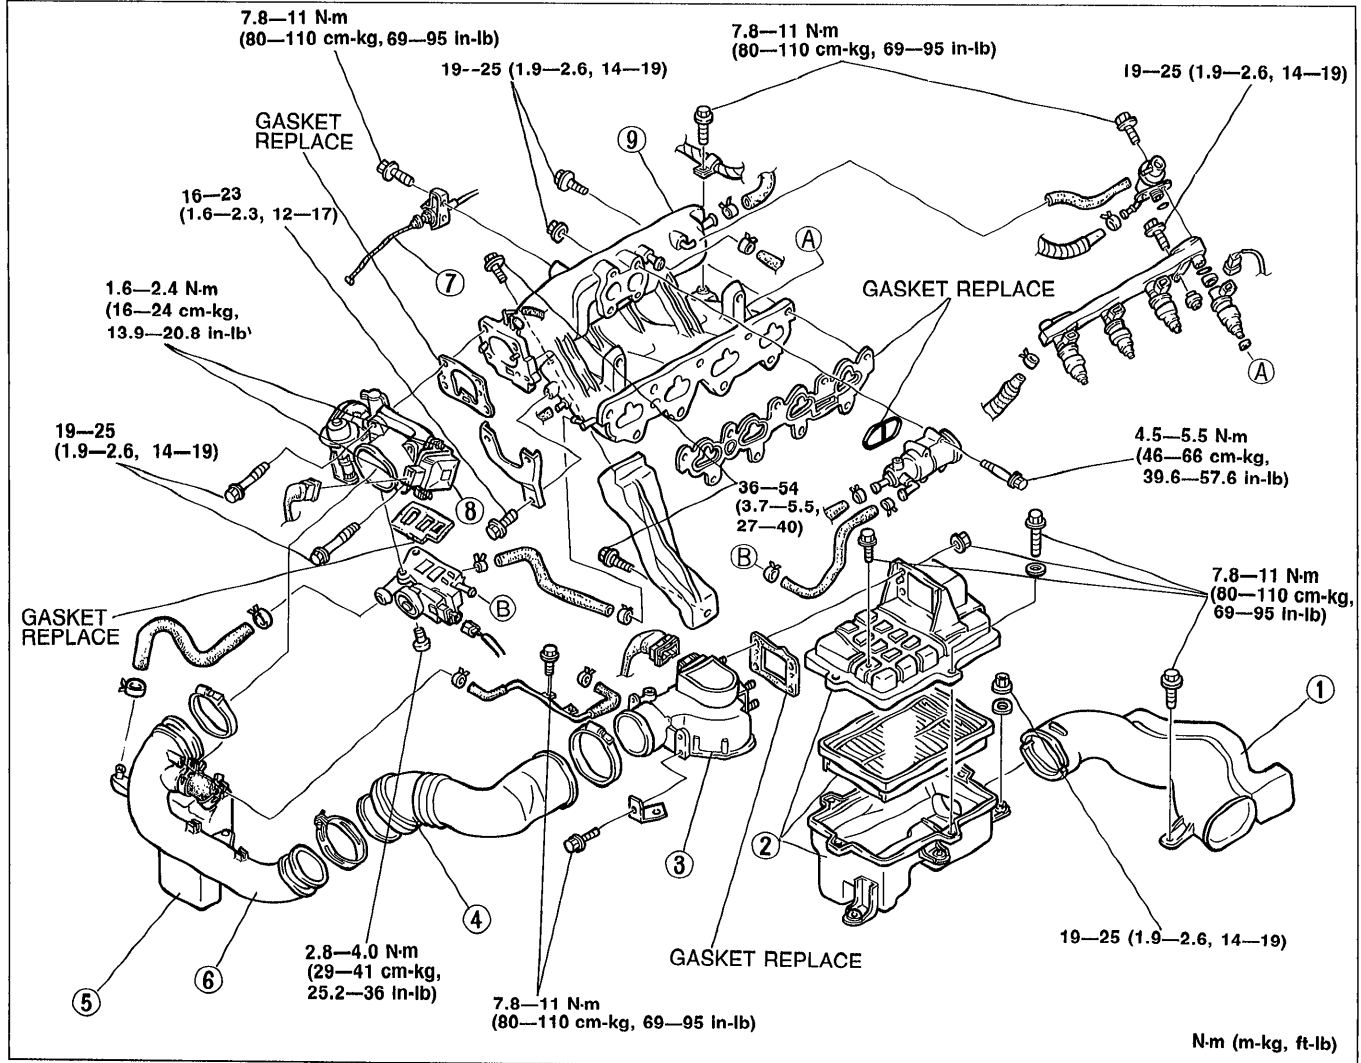

05U0FX-105

- |   |   |
|---|---|
| 1. Air duct                             | 7. Accelerator pedal/cable              |
| 2. Air cleaner                          | Inspection / Replacement..... page F-96 |
| Inspection ..... page F-73              | 8. Throttle body                        |
| 3. Airflow meter                        | Removal / Inspection /                  |
| Inspection / Replacement..... page F-92 | Installation ..... page F-94            |
| 4. Air hose                             | 9. Intake manifold                      |
| 5. Resonance chamber                    | Removal / Installation ..... page F-95  |
| 6. Air pipe                             |   |