


# CONVENTIONAL BRAKE SYSTEM

## Disc Pad Installation Note

1. Push the piston inward by using the SST.
2. Install the new pads in the mounting support.

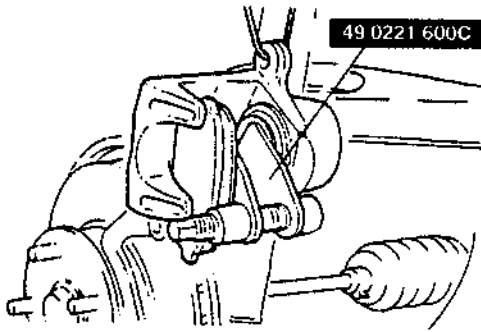


U5U41132

## DISC PAD (FRONT) REPLACEMENT

X5U411W13

1. Remove in the order indicated in the table.
2. Install in the reverse order of removal.

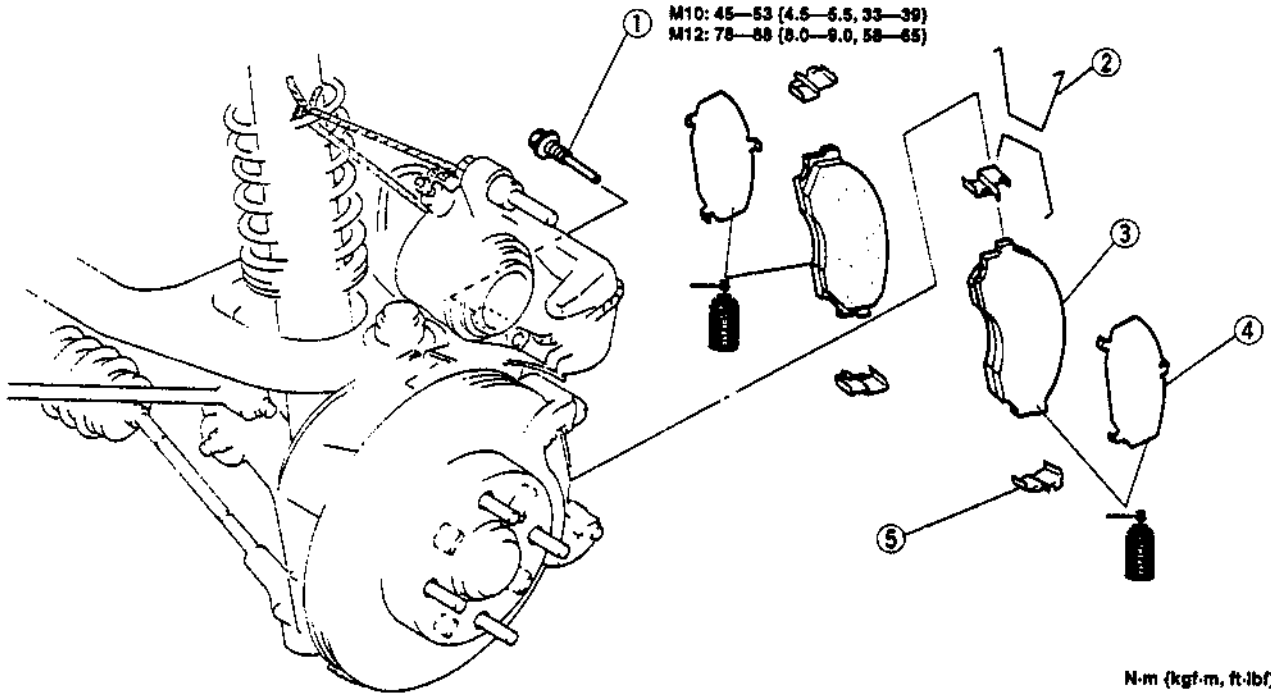

N·m (kgf·m, ft·lbf)

X5U411WC1

1	Lock bolt
2	Spring
3	Disc pad ↳ 04-11 FRONT BRAKE (DISC) REMOVAL/INSTALLATION, Disc Pad Installation Note

4	Shim
5	Guide plate