


INTERIOR TRIM

DASHBOARD DISASSEMBLY/ASSEMBLY

X5U917W02

1. Disassemble in the order indicated in the table.
2. Assemble in the reverse order of disassembly.

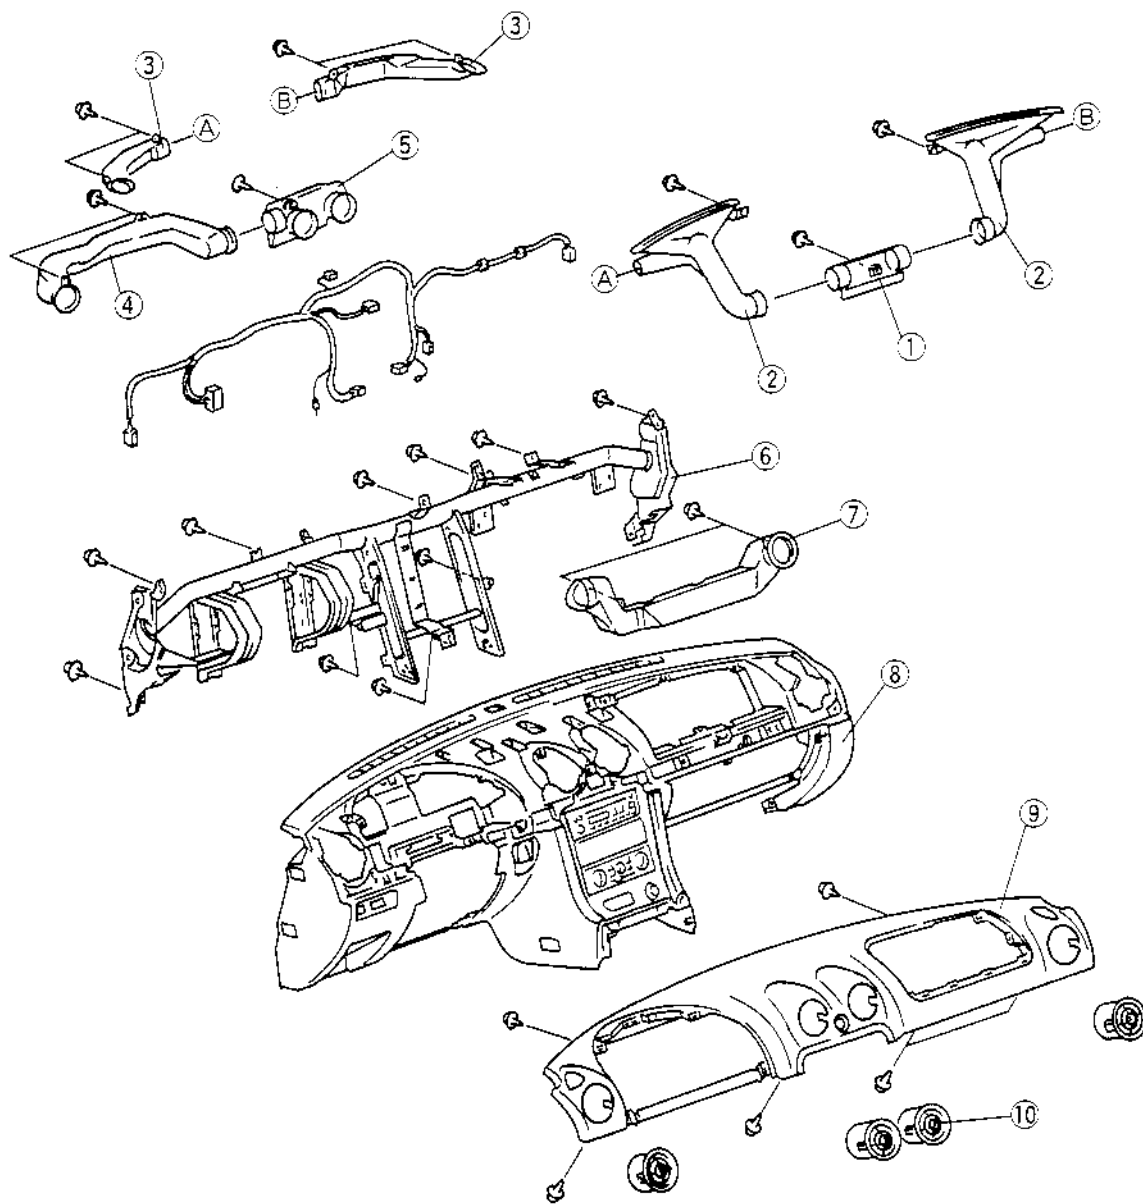

X5U917WA1

1	Defroster duct
2	Defroster nozzle
3	Side demister nozzle
4	Duct
5	Center duct

6	Dashboard member
7	Duct
8	Dashboard
9	Pad
10	Ventilator grille