



ELECTRICAL COMPONENT LOCATOR

SWITCHES

Component

A/C Pressure Switch

Back-Up Light Switch

Clutch Switch

Neutral Switch

Parking Brake Switch

Power Steering Pressure Switch

Seat Belt Buckle Switch

Stoplight Switch

MISCELLANEOUS

Component

Diagnostic Check Connector

Power Steering Pressure Switch
On power steering housing assembly.

