

ALPHABETICAL INDEX

ALPHABETICAL INDEX

PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION
*** A ***				BEARING							
ABSORBER (L) SHOCK		5000A -1	2 - D 3		6140B -2	2 - E 8			19398	1920A -1	1 - C 7
ABSORBER (R) SHOCK	50100	5000A -1	2 - D 3		6142B -1	2 - F 8			19706	1950A -1	1 - H 7
ABSORBER SHOCK RR	50200A	5010A -1	2 - F 3		15940J	1580A -1	1 - K 5		19737	1920A -1	1 - C 7
ACCESSORY KIT		6142B -1	2 - F 8		247222	1840A -1	1 - K 6		19838B	1950A -1	1 - H 7
ACTUATOR	13290	1380A -1	1 - N 4		247432	1840A -1	1 - K 6		21255	1920A -2	1 - D 7
	76430A	6120A -1	2 - K 7		26151	2600A -1	1 - D 9		24729	1840A -1	1 - K 6
	76440B	6110A -1	2 - I 7		27305	2700AA -1	1 - I 9		25123	2500A -1	1 - C 9
ACTUATOR ACC	66310B	6640A -1	2 - N 9		27305	2700A -1	1 - G 9		26113	2600A -1	1 - D 9
ACTUATOR V.P.V.	13170I	1380AA -1	1 - C 5		32182	3210A -1	1 - N 9		26132B	2610A -1	1 - E 9
ADAPTER	19925S	1810A -1	1 - N 6	BEARING BALL	17201J	1710A -1	1 - C 6		26132B	2610AA -1	1 - F 9
ADAPTER (L) MOUNTING		3300A -1	1 - E10		17204	1710A -1	1 - C 6		26680	2610AA -1	1 - F 9
ADAPTER (R) MOUNTING	3326G	3300A -1	1 - E10		17221J	1710A -1	1 - C 6		26699	2610AA -1	1 - F 9
ADAPTER AIR FLOW	13216	1330AA -1	1 - F 4		17297	1710A -2	1 - D 6		28111	2800A -1	1 - K 9
ADJUSTER (L)		2610A -1	1 - E 9		17297A	1710A -2	1 - D 6		28113A	2800A -1	1 - K 9
ADJUSTER (R)	26630	2610A -1	1 - E 9		17301J	1710A -2	1 - D 6		32429	3210A -1	1 - N 9
ADJUSTER NO 1	88102	5700A -3	2 - E 6	BEARING FRONT WHEEL	24503	1830A -1	1 - J 6		32611	3240A -1	1 - D10
ADJUSTER NO 2	88103	5700A -3	2 - E 6		24514	1830A -1	1 - J 6		32616	3240A -1	1 - D10
ADJUSTER NO 3	88152	5700A -5	2 - G 6	BEARING MAIN	33047	3300A -1	1 - E10		39055	3900A -1	1 - K10
ADJUSTER NO 4	88153	5700A -5	2 - G 6	BEARING NEEDLE	33075	3300A -1	1 - E10		46016	4600A -1	1 - N11
AIR SEAL PIPE		6152B -1	2 - K 8		10502I	1030A -1	1 - D 3		50015C	5000A -1	2 - D 3
ALTERNATOR	18300	1830A -1	1 - J 6		11403I	1100A -1	1 - G 3		50015D	5010A -1	2 - F 3
AMPLIFIER	76510A	6115A -1	2 - J 7		11505I	1100A -1	1 - G 3		64903D	5560A -1	2 - J 5
AMPLIFIER MAIN	66920A	6680A -1	2 - C10		17274	1710A -1	1 - C 6		24731	1840A -1	1 - K 6
AMPLIFIER POWER-REAR	66920F	6680A -1	2 - C10		19621	1930A -2	1 - F 7		32460B	3210A -1	1 - N 9
ANTENNA	66930	6682A -1	2 - D10		19623	1930A -2	1 - F 7		15966	1580A -1	1 - K 5
ARM & BALL JOINT (L)		3400A -1	1 - F10	BEARING PINION-FRONT	19624	1930A -2	1 - F 7				
ARM & BALL JOINT (R)	49310A	3400A -1	1 - F10		27141	2700AA -1	1 - I 9	BOLT ADJUST			
ARM (L) KNUCKLE		3400A -1	1 - F10	BEARING PINION-REAR	27141A	2700A -1	1 - G 9	BOLT ADJUSTING			
ARM (L) REGULATOR		5830A -1	2 - J 6		27141A	2700AA -1	1 - I 9	BOLT AIR CLEANER	13201	1320A -1	1 - M 3
ARM (R) KNUCKLE	32301A	3400A -1	1 - F10	BEARING ROLLER	17205	1710A -1	1 - C 6	BOLT ARM	34313	3410A -1	1 - G10
ARM (R) REGULATOR	58560A	5830A -1	2 - J 6	BEARING ROTOR	111111	1110A -1	1 - H 3	BOLT BAND HOLDER	66124	6611A -1	2 - G 9
ARM IDLER	32320	3230A -1	1 - C10	BELT 'A' (L) FRT. SEAT	57920A	5790A -1	2 - H 6	BOLT CALIPER BRAKE	33699	3300A -1	1 - E10
ARM PITMAN	32220	3210A -1	1 - N 9	BELT 'A' (R) FRT. SEAT	57900A	5790A -1	2 - H 6	BOLT CLAMP	70985A	1850A -1	1 - M 6
ARM WIPER	67321	6730A -1	2 - K10	BELT 'B' (L) FRT. SEAT	57680A	5790A -1	2 - H 6	BOLT COMP. (USE W/67-D00B-3A)		6132B -1	2 - C 8
	67421A	6750A -1	2 - M10	BELT 'B' (R) FRT. SEAT	57630A	5790A -1	2 - H 6	BOLT COMP. (USE W/67-D00A-3A)		6132B -1	2 - C 8
ARMATURE	24720	1840A -1	1 - K 6	BELT AIR PUMP	137151	1371A -1	1 - L 4	BOLT CONNECTOR	13377	1320AA -1	1 - C 4
ATTACHMENT-PAD	49290A	2610AA -1	1 - F 9		137151	1371AA -1	1 - M 4		146031	1400AA -1	1 - F 5
	49290B	3300A -1	1 - E10	BELT ALTERNATOR	18381	1580A -1	1 - K 5		146311	1400AA -1	1 - F 5
AUTO CRUISE CONTROL SET	99063	6640A -1	2 - N 9	BELT COMPRESSOR	15906	1580A -1	1 - K 5		146351	1400AA -1	1 - F 5
*** B ***				BELT COMPRESSOR DRIVE		6140B -2	2 - E 8		21666	1910A -1	1 - N 6
BACK (L) FRONT SEAT	88160	5700A -5	2 - G 6	BELT DRIVE (17385)		6142B -1	2 - F 8	BOLT CONTROL VALVE			
BACK (R) FRONT SEAT	88130	5700A -4	2 - F 6	BELT P/S PUMP	15907	1580A -1	1 - K 5		19831	1920A -2	1 - D 7
BAFFLE	51819	6720A -1	2 - J10	BEZEL (L) LAMP	50760	5005A -1	2 - E 3		19832	1920A -2	1 - D 7
BAFFLE COWL	50795	5180A -1	2 - E 4	BEZEL (R) LAMP	50740	5005A -1	2 - E 3		19833	1920A -2	1 - D 7
BAG SUNROOF	68090	6900A -1	2 - K11	BLADE	76631	6730A -1	2 - K10	BOLT GEAR HOUSING	32359	3210A -1	1 - N 9
BAG TOOL	68670	6870A -1	2 - J11	BLADE WIPER	76631A	6750A -1	2 - M10	BOLT HAND BRAKE LEVER	44053	4400A -1	1 - J11
BALANCER STICK	66920G	6680A -1	2 - C10		67330	6730A -1	2 - K10	BOLT HEX		6132B -1	2 - C 8
BALL NUT WORM	32130	3210A -1	1 - N 9		67330A	6750A -1	2 - M10	BOLT HEX ZINC		6132B -1	2 - C 8
BALL STEEL	11411J	1100A -1	1 - G 3	BLOCK FUSE	66730	6700A -1	2 - E10	BOLT HINGE	51431A	5103A -1	2 - K 3
	13781	1360A -1	1 - J 4	BLOCK MOUNTING	34380	3400A -1	1 - F10	BOLT JOINT	49652	4340A -1	1 - F11
	26610J	2610A -1	1 - E 9	BLOWER UNIT	61140	6100A -1	2 - H 7	BOLT LOCK	1117J	1400AA -1	1 - F 5
	41920J	4140A -1	1 - N10	BODY (L) FRON. DOOR		5800A -1	2 - I 6	BOLT LOCK	141171	1400A -1	1 - E 5
BAND	14726	1580A -1	1 - K 5	BODY (R) FRONT DOOR	58010	5800A -1	2 - I 6	BOLT OIL PAN	19837	1920A -2	1 - D 7
	66946	6682A -1	2 - D10	BODY OIL FILTER	14310A	1400AA -1	1 - F 5	BOLT PULLEY	11376	1100A -1	1 - G 3
	87956	6730A -1	2 - K10	BOLT	108451	1040A -2	1 - F 3	BOLT REAMER	931371	1380A -1	1 - N 4
BAND (L) TANK FIXTURE	42420A	4200A -1	1 - D11		17313C	1720A -1	1 - G 6	BOLT RING GEAR	27235	2700A -1	1 - G 9
BAND (R) TANK FIXTURE	42410C	4200A -1	1 - D11		189121	6600A -1	2 - D 9		27235	2700AA -1	1 - I 9
BAND AIR DUCT		6150B -2	2 - J 8		19064	1910A -1	1 - N 6	BOLT SERVICE VALVE		6145B 2	2 - H 8
BAND BRAKE	19360	1930A -1	1 - E 7		19216	1910A -1	1 - N 6	BOLT SET	14125	1400AA -1	1 - F 5
BASE (L) MIRROR	69176	6900A -2	2 - L11		19255	1910A -1	1 - N 6		14125	1400A -1	1 - E 5
BASE (R) MIRROR	69116	6900A -1	2 - K11		19338	1920A -1	1 - C 7	BOLT STABILIZER	34157A	3410A -1	1 - G10
BATTERY	18520	1850A -1	1 - M 6		19397	1920A -1	1 - C 7	BOLT STARTER	18401	1800A -1	1 - H 6
BEAM SEALED	84851A	5100A -1	2 - J 3		19397A	1940A -1	1 - G 7	BOLT STOPPER	32315A	3400A -1	1 - F10
								BOLT TENSION	10451	1040A -1	1 - E 3
									104521	1040A -1	1 - E 3

ALPHABETICAL INDEX

PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION
BOLT, TENSION ROD	34134A	3410A -1	1 - G10	BRACKET NO. 1	60431A	5560A -1	2 - J 5	BRACKET, TUBE CLAMP			6130B -2 2 - N 7
BOLT, THROUGH		6145B -2	2 - H 8	BRACKET NO. 2	60432A	5560A -1	2 - J 5				6130B -2 2 - N 7
BOLT, W. RUBBER CUSHION		6130B -2	2 - N 7	BRACKET NO. 2, HOOD	60357	5520A -1	2 - F 5	BRACKET, TUNER	66903		6680A -1 2 - C10
		6130B -2	2 - N 7	BRACKET SET	23377A	1360A -1	1 - J 4	BRACKET, WASHER TANK	67521		6720A -1 2 - J10
BOLT, W. WASHER		6140B -2	2 - E 8	BRACKET, ACTUATOR	13241	1380A -1	1 - N 4	BRACKET, WATT LINK	28180A		2800A -1 1 - K 9
		6140B -2	2 - E 8	BRACKET, ADJUSTMENT NO. 1		6142B -1	2 - F 8	BRACKET, WIPER MOTOR	76624		6750A -1 2 - M10
BOLT, WHEEL	32062	3300A -1	1 - E10	BRACKET, ADJUSTMENT NO. 2		6142B -1	2 - F 8	BRAKE SHOE SET	26310		2610A -1 1 - E 9
BOLT, WHEEL SET	33165	3700A -1	1 - H10	BRACKET, AIR CLEANER		13310	1330AA -1	BREATHER	26060		2600A -1 1 - D 9
BOLT, ZINC		6142B -1	2 - F 8			13315A	1330AA -1	BREATHER, AIR	17530		1700A -1 1 - M 5
BOOT	51938	5103A -1	2 - K 3			13325B	1330AA -1		19344		1920A -1 1 - C 7
	64331A	5570A -1	2 - K 5	BRACKET, ALTERNATOR	18371	1800A -1	1 - H 6	BRUSH	24522		1830A -1 1 - J 6
BOOT KIT	49250A	2610AA -1	1 - F 9	BRACKET, ANTENNA NO. 1	66535	6682A -1	2 - D10		76617		6750A -1 2 - N10
	49250B	3300A -1	1 - E10	BRACKET, ANTENNA NO. 2	66536	6682A -1	2 - D10	BRUSH, YOKE	24753		1840A -1 1 - K 6
BOOT SET	26681S	2610A -1	1 - E 9	BRACKET, CANISTER	13960	1320A -1	1 - M 3	BULB	51060J		5105A -1 2 - L 3
BOOT, CHANGE	64331	5570A -1	2 - K 5		13960	1320AA -1	1 - C 4		51120J		5105A -1 2 - L 3
BOOT, DUST	17475	1720A -1	1 - G 6	BRACKET, CENTER	24706	1840A -1	1 - K 6		51150J		5110A -1 2 - M 3
BOSS, STEERING WHEEL	32980	3200A -1	1 - M 9	BRACKET, CHECK VALVE	42750	4200A -1	1 - D11		51150K		5110A -1 2 - M 7
BOSS, WATER PUMP PULLEY	15117	1500A -1	1 - H 5	BRACKET, CLUSTER SWITCH	60358	5550A -1	2 - F 5		51270J		5120A -1 2 - N 3
	15117	1500AA -1	1 - I 5	BRACKET, COMPRESSOR		6140B -2	2 - E 8		51440J		5125A -1 2 - C 4
BOX (L), TORQUE	54391	5370A -1	2 - L 4		15920	1580A -1	1 - K 5		51550J		5120A -1 2 - N 3
BOX (R), TORQUE	53391	5370A -1	2 - L 4	BRACKET, COMPRESSOR MTG		6142B -1	2 - F 8		55220J		5500A -1 2 - C 5
BOX, ACC	66320	6640A -1	2 - N 9	BRACKET, COMPUTER	18883	6600A -1	2 - D 9		55240J		5570A -1 2 - K 5
BOX, BULB	64050B	5560A -1	2 - J 5		18885B	6600A -1	2 - D 9		55280J		5500A -1 2 - C 5
BOX, COIN	66350D	6615A -1	2 - J 9	BRACKET, CONDENSER		6130B -2	2 - N 7		55890J		5560A -1 2 - J 5
BOX, GEAR	76610	6760A -1	2 - N10	BRACKET, CONTROL LINK	28120	2810A -1	1 - L 9		69170J		6900A -2 2 - L11
BOX, STORAGE	69760A	6900A -3	2 - M11	BRACKET, CONTROL UNIT	18702B	6600A -1	2 - D 9		69170K		6900A -2 2 - L11
BRACKET	13081	1350A -1	1 - G 4		18885A	6600A -1	2 - D 9		75115		5540A -1 2 - H 5
	13153	1380AA -1	1 - C 5	BRACKET, COOLING UNIT		6150B -2	2 - J 8		75115A		5540A -1 2 - H 5
	132411	1380A -1	1 - N 4	BRACKET, CUT VALVE	45131A	4500A -1	1 - L11		75139C		6115A -1 2 - J 7
	132411	1380AA -1	1 - C 5	BRACKET, DAMPER	62631	6230A -1	2 - L 8		76195		6115A -1 2 - J 7
	13251	1380A -1	1 - N 4	BRACKET, DECK	56560A	5370A -1	2 - L 4		76196		6115A -1 2 - J 7
	13585	1380AA -1	1 - C 5	BRACKET, DEF. NOZZLE	60124	5580A -1	2 - M 5		76552C		6115A -1 2 - J 7
	13757A	1380A -1	1 - N 4	BRACKET, ENGINE MTG.	39020	3900A -1	1 - K10	BULB & CAP	76551B		6115A -1 2 - J 7
	19960	1910A -1	1 - N 6	BRACKET, FIXING	32420A	3210A -1	1 - N 9	BULB & SOCKET	55240A		5570A -1 2 - K 5
	20502	1320AA -2	1 - D 4	BRACKET, FRONT	24550	1830A -1	1 - J 6		55280		5500A -1 2 - C 5
	32555A	3240A -1	1 - D10		24710	1840A -1	1 - K 6		55280F		5500A -1 2 - C 5
	40070B	4000A -1	1 - L10		64350	5570A -1	2 - K 5	BULB, CIGAR LIGHTER	66254		6610A -1 2 - F 9
	40081	4000A -1	1 - L10	BRACKET, FUEL PUMP	45121	4500A -1	1 - L11	BULB, LOCK CYLINDER	58485		0900A -1 2 - C 3
	40630	4000A -2	1 - M10	BRACKET, FUSE BOX	55610A	5560A -1	2 - J 5	BUMPER, BOUND	34111		3400A -1 1 - F10
	40640	4000A -2	1 - M10	BRACKET, FUSIBLE LINK	67980	6630A -1	2 - L 9	BUMPER, FRONT	50031		5000A -1 2 - D 3
	55970	6630A -1	2 - L 9	BRACKET, HOSE CLAMP		6132B -1	2 - C 8	BUMPER, REAR	50221		5010A -1 2 - F 3
	60381	5500A -2	2 - D 5	BRACKET, IGNITION	18810	1800A -1	1 - H 6	BUSHING	13184		1300AA -1 1 - J 3
	66890B	6680A -1	2 - C10	BRACKET, IGNITION COIL	181901	1800A -1	1 - H 6		22333		1700A -1 1 - M 5
	76191	6115A -1	2 - J 7	BRACKET, JACK	53045	5370A -1	2 - L 4		32071		3210A -1 1 - N 9
	76192	6115A -1	2 - J 7	BRACKET, LEVER	46110	4600A -1	1 - N11		32329		3230A -1 1 - C10
	76193	6115A -1	2 - J 7	BRACKET, LOWER PANEL	55313A	5500A -1	2 - C 5		32412B		3210A -1 1 - N 9
	76504	6115A -1	2 - J 7	BRACKET, MASTER CYLINDER	43070	4300A -1	1 - E11		32414		3210A -1 1 - N 9
BRACKET 'A'	51357	6900A -1	2 - K11	BRACKET, MTG. THERMOSTAT		6152B -1	2 - K 8		34156		3410A -1 1 - G10
BRACKET 'A', CONTROL UNIT	53420	5340A -1	2 - J 4	BRACKET, OIL HOSE	147401	1500AA -1	1 - I 5		41644		4160A -1 1 - C11
BRACKET 'B'	51358	6900A -1	2 - K11	BRACKET, OIL PIPE	14744	1400A -1	1 - E 5		41644A		4300A -1 1 - E11
BRACKET 'B', CONTROL UNIT	54630	5370A -1	2 - L 4	BRACKET, PIPE	19940	1910A -1	1 - N 6		46085		4600A -1 1 - N11
BRACKET 'C', CONTROL UNIT	54640A	5370A -1	2 - L 4	BRACKET, RADIATOR GRILLE	50715A	5005A -1	2 - E 3		46684		4600A -1 1 - N11
BRACKET 'D', CONTROL UNIT	54690	5370A -1	2 - L 4	BRACKET, REAR	18W51	1830A -1	1 - J 6		58411		5830A -1 2 - J 6
BRACKET (U)		5103A -1	2 - K 3		24560	1830A -1	1 - J 6		67717		6630A -1 2 - L 9
BRACKET (U), DUCT	60369	5580A -1	2 - M 5		24740	1840A -1	1 - K 6		76129		6110A -1 2 - L 7
BRACKET (U), FENDER	54290A	5320A -1	2 - H 4		64370	5570A -1	2 - K 5		76164		6115A -1 2 - J 7
BRACKET (U), INST.	71260C	5330A -1	2 - I 4	BRACKET, RECEIVER-DRIER		6132B -1	2 - C 8		76415A		6115A -1 2 - J 7
BRACKET (U), PULL HANDLE		5840A -4	2 - F 7	BRACKET, RELAY	13745	6630A -1	2 - L 9		76427A		6110A -1 2 - L 7
BRACKET (U), TENSION ROD		3410A -1	1 - G10		18702A	6600A -1	2 - D 9		76481A		6120A -1 2 - K 7
BRACKET (R)	51932	5103A -1	2 - K 3	BRACKET, STAB. SUPPORT	28155	2810A -1	1 - L 9		76606		6750A -1 2 - M10
BRACKET (R), DUCT	60368A	5580A -1	2 - M 5	BRACKET, STARTER	18401C	1800A -1	1 - H 6		88105		5700A -3 2 - E 6
BRACKET (R), FENDER	53290A	5320A -1	2 - H 4		18402A	1800A -1	1 - H 6	BUSHING SET, CHANGE LEVER	17481S		1720A -1 1 - G 6
BRACKET (R), INST.	70260E	5330A -1	2 - I 4	BRACKET, SUB TANK	15251	1500AA -1	1 - I 5	BUSHING, ARM	34460		3400A -1 1 - F10
BRACKET (R), PULL HANDLE	68465	5840A -4	2 - F 7	BRACKET, SUPPORT, EVAP.		6152B -1	2 - K 8	BUSHING, CLUTCH PEDAL	41023		4300A -1 1 - E11
BRACKET (R), TENSION ROD	34850A	3410A -1	1 - G10	BRACKET, TANK	135151	1350AA -1	1 - H 4	BUSHING, ELBOW JOINT	49686B		4340A -1 1 - F11
BRACKET CTR. REAR	64430	5570A -2	2 - L 5		135151	1350A -1	1 - G 4		49686B		4340AA -1 1 - G11

ALPHABETICAL INDEX

PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION	
BUSHING, ELBOW JOINT	49686D	4140A	1 - N10	CAP. REGULATOR HANDLE	58585A	5830A	2 - K 6		76425B	6110A	2 - I 7	
BUSHING, HINGE BOLT	51432	5102A	2 - K 3	CAP. RUBBER	33693	3300A	1 - E10		76466A	6120A	2 - K 7	
BUSHING, INNER	76625A	6730A	2 - K10	CAP. SEAL	66371	6750A	2 - M10	CLAMP, BATTERY	56030	1850A	1 - M 6	
	76607	6730A	2 - K10		76604	6730A	2 - K10	CLAMP, BULB		6152B	2 - K 8	
	76607A	6750A	2 - M10	CAP. SERVICE VALVE		6145B	2 - H 8	CLAMP, CABLE	76407A	6115A	2 - J 7	
	76623	6750A	2 - M10	CAP. SPRING	17474A	1720A	1 - G 6	CLAMP, CODE		6130B	2 - N 7	
BUSHING, OUTER	76604A	6730A	2 - K10		17491B	1720A	1 - G 6	CLAMP, FUEL FILTER	13481	1320A	1 - M 3	
BUSHING, PEDAL	43022	4300A	1 - E11	CAP. SUB TANK	15355A	1500A	1 - H 5	CLAMP, HOSE		6130B	2 - N 7	
BUSHING, RUBBER		6130B	2 - N 7		15355A	1500AA	2 - J 5			6130B	2 - N 7	
	28102	2810A	1 - L 9	CAP. TANK	76672A	6750A	2 - M10			6130B	2 - N 7	
	28775	2800A	1 - K 9	CAP. TRUNK SIDE TRIM	68851	6840A	2 - G11			6130B	2 - N 7	
BUSHING, RUBBER - STAB.	28775A	2810A	1 - L 9	CAP. WHEEL	37170	3700A	1 - H10	CLAMP, MAIN JET PLUG	23357A	1360A	1 - J 4	
BUSHING, STABILIZER	34153A	3410A	1 - G10	CARBURETOR	13600	1359A	1 - I 4	CLAMP, RELEASE WIRE	52302	5230A	2 - F 4	
BUTTON, RELEASE	44033	4400A	1 - J11	CARRIER, BATTERY	53260	1850A	1 - M 6	CLAMP, SPARE TIRE	56210B	3700A	2 - I10	
				CARRIER, DIFFERENTIAL	27150	2700AA	1 - I 9	CLAMP, TUBE		6130B	2 - N 7	
					27150	2700A	1 - G 9			6130B	2 - N 7	
				CARRIER, FRONT	19540	1930A	1 - E 7			6130B	2 - N 7	
CABLE (L), REAR-PARK	44410A	4400A	1 - J11	CARRIER, OVER DRIVE	21540	1930A	2 - I 7	CLAMP, WIRE HARNESS	146641	1400AA	1 - F 5	
CABLE (R), REAR-PARK	44410	4400A	1 - J11	CARRIER, REAR	19570	1930A	2 - I 7			6130B	2 - N 7	
CABLE, FRONT-PARK BRAKE	44150	4400A	1 - J11	CARTRIDGE, DAMPER	49790A	3400A	1 - F10			6130B	2 - N 7	
CABLE, GROUND BATTERY	67260	1850A	1 - M 6	CARTRIDGE, OIL FILTER	23802	1400A	1 - E 5	CLEANER, AIR	13320	1330A	1 - E 4	
CABLE, POSITIVE-BATTERY	67250	1850A	1 - M 6		23802	1400AA	2 - I 5		13320	1330AA	1 - F 4	
CABLE, SPEEDOMETER	60070	5530A	2 - G 5	CASE	27230	2700AA	1 - I 9	CLIP		6132B	2 - C 8	
CALIPER (L), FRT. BRAKE		3300A	1 - E10		27230	2700A	1 - G 9			1320AA	1 - C 4	
CALIPER (L), REAR BRAKE		2610AA	1 - F 9		66760	6700A	2 - E10			4500A	1 - L11	
		2610AA	1 - F 9	CASE HEATER	76425	6110A	2 - I 7			13445F	1380A	1 - N 4
CALIPER (R), FRT. BRAKE	33980	3300A	1 - E10	CASE, BOTTOM, W/ DRAIN PLATE	76406	6152B	2 - K 8			13446	1350A	1 - G 4
CALIPER (R), REAR BRAKE		2610AA	1 - F 9	CASE, CHANGE CONTROL	17470	1720A	1 - G 6			13446A	6720A	2 - J10
		2610AA	1 - F 9	CASE, CONTROL UNIT	67571	6630A	2 - L 9			13447	1320AA	1 - C 4
	26980	2610AA	1 - F 9	CASE, COOLING UNIT LOWER		6150B	2 - J 8			13447J	1380AA	1 - C 5
CAM, CANCEL	60253	6611A	2 - G 9	CASE, COOLING UNIT UPPER		6120A	2 - K 7			13448I	1320AA	1 - C 4
CANISTER	13970	1320AA	1 - C 4	CASE, FAN	76423	6110A	2 - I 7			13448B	1380AA	1 - C 5
	13970	1320A	1 - M 3	CASE, HEATER	76401	5500A	2 - D 5			146621	1500A	1 - H 5
CAP	13104B	1380AA	1 - C 5	CASE, LAMP	60245A	6700A	2 - E10			55303B	5580A	2 - M 5
	13104B	1390A	1 - N 4	CASE, MAIN FUSE	66760A	5540A	2 - H 5			15303D	5500A	2 - C 5
	42307A	1380A	1 - N 4	CASE, METER	55441A	1920A	1 - D 7			18111L	1800A	1 - H 6
	44043	4400A	1 - J11	CASE, OVER DRIVE	21320	1700A	2 - I 5			18272C	5530A	2 - G 5
	45961G	6704A	2 - I10	CASE, T/MISSION	17100	1920A	1 - C 7			18861	1800A	1 - H 6
	75014	6115A	2 - J 7		19310	1920A	1 - C 7			18863C	1500A	1 - H 5
	76194	5840A	2 - F 7	CASE, THERMOSTAT	23502A	1360A	2 - I 4			19917	1910A	1 - N 6
CAP (L), ASSIST GRIP		5840A	2 - G 7	CASE, TOP		6152B	2 - K 8			19941	1910A	1 - N 6
CAP (L), PULL HANDLE		5840A	2 - G 7	CASE, TRANSITION		6152B	2 - K 8			32107	3210A	1 - N 9
CAP (R), ASSIST GRIP	69367B	5840A	2 - G 7	CASING (L), STOPPER	39045	3900A	1 - K10			32492	3240A	1 - D10
CAP (R), PULL HANDLE	69374	5840A	2 - G 7	CASING, REAR AXLE	26010	2600A	1 - D 9			43666A	6640A	2 - N 9
CAP SET, RESERVE TANK	41552S	4140A	1 - N10	CASING, STOPPER	39080B	3900A	1 - K10			44173	4400A	1 - J11
	43552S	4340AA	1 - G11	CEILING, TOP	68030	6800A	1 - 2 - C11			44189	4400A	1 - J11
	43552S	4340A	1 - F11	CHAIN, OIL PUMP	68080	6800A	1 - 2 - C11			44436	4400A	2 - I - K11
CAP TANK	87992A	6720A	2 - J10		14151	1400AA	1 - F 5			44471	4400A	2 - I - K11
CAP, AIR ADJUST	20503	1320AA	1 - D 4	CHAMBER SET, DIAPHRAGM	14151	1400A	1 - E 5			45903A	4360AA	1 - I11
CAP, ARM REST	69373	5840A	2 - G 7	CHAMBER, AIR	23271	1360A	1 - J 4			45903A	4360A	1 - H11
CAP, BLEEDER	33693B	4140A	1 - N10	CHAMBER, DRAIN HOSE	13283	1380AA	1 - C 5			45903B	1910A	1 - N 6
CAP, BLEEDER SCREW	33693A	2610AA	1 - F 9	CHAMBER, DYNAMIC	56841A	5370A	2 - L 4			45903B	4500A	2 - I - M11
	33693A	2610A	1 - E 9	CHAMBER, THROTTLE	13110C	1300AA	1 - J 3			45903E	6230A	2 - L 8
CAP, CENTER	37190	3700A	1 - H10		20500D	1320AA	2 - I 4			58866	5830A	2 - K 6
CAP, DAMPER	34019	3400A	1 - F10	CHAMBER, VACUUM	23311	1360A	1 - J 4			66365A	6640A	2 - N 9
CAP, DISTRIBUTOR	24310	1820A	1 - I 6	CHANNEL, GLASS	13775A	1380AA	2 - I 5			67011C	6704A	2 - I10
CAP, FASTENER	58922	5840A	2 - D 7	CHILD RESISTANT SEAT CLIP	58605A	5800A	2 - I 6			67043A	6704A	2 - I10
CAP, FILLER	42250	4200A	1 - D11	CHOKE SET, RETURN	23534	1360A	2 - I 4			67051E	6704A	2 - I10
CAP, HORN	32890	3200A	1 - M 9	CHOKE SET, SEMI AUTO	23500	1360A	2 - I 4			67051J	6682A	2 - D10
CAP, HUB	33071	3300A	1 - E10	CIRCUIT	67561A	6630A	2 - L 9			67054A	6704A	2 - I10
CAP, IDLE LIMITER	23436	1359A	1 - I 4	CLAMP		6130B	2 - N 7			67191A	6704A	2 - I10
CAP, IDLE SWITCH	13205B	1320AA	1 - C 4		24304	1820A	1 - I 6			68151B	5500A	3 - E 5
	13205B	1320A	1 - M 3		24305	1820A	1 - I 6			68712D	6840A	2 - G11
CAP, OIL FILLER	102501	1030A	1 - D 3		76173	6110A	2 - I 7			68713B	6840A	2 - G11
CAP, PULL HANDLE	69872	5840A	2 - G 7									
CAP, RADIATOR	15205	1500A	1 - H 5									
	15205	1500AA	1 - I 5									

ALPHABETICAL INDEX

PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION
CLIP	76419	6110A-1	2-17	CONDENSOR	24334	1820A-1	1-15	COVER, DUST (R)	26130	2610AA-1	1-F9
	76434	6120A-1	2-K7		66992	6682A-1	2-D10	COVER, FILTER	45141	4503A-1	1-L11
	76435	6110A-1	2-17	CONNECTING SHELL	21565	1930A-2	1-F7	COVER, FRONT	106001	1040A-1	1-E3
CLIP, AIR HOSE	76512F	6110A-1	2-17	CONNECTOR SET, FUEL	234091	1360A-1	1-J4		16220	1600A-1	1-L5
	13242	1380AA-1	1-C5	CONNECTOR, AIR TUBE	14617	1400AA-1	1-F5	COVER, HEATER	61145	6110A-1	2-17
	13726	1371A-1	1-L4	CONNECTOR, FRT. WIRING	67049	6700A-1	2-E10	COVER, HOLE	55225B	5500A-1	2-C5
	13726	1371AA-1	1-M4	CONNECTOR, FUEL	13265A	1320AA-1	1-C4		56051	5390A-1	2-M4
	13726B	1380AA-1	1-C5		20237	1320AA-1	1-C4		56051B	5390A-1	2-M4
	137461	1371AA-1	1-M4	CONNECTOR, FUEL FILTER	13484	1320AA-1	1-C4	COVER, HOLE-SW. PANEL	66600	5500A-3	2-E5
	147451	1500AA-1	1-15	CONNECTOR, SHORT	67741	6630A-1	2-L9	COVER, INNER HANDLE	55225C	5500A-1	2-C5
CLIP, CABLE	44439	4400A-2	1-K11		67985	6701A-1	2-F10	COVER, MOTOR	58303B	5830A-1	2-J6
	67290	1850A-1	1-M6	CONNECTOR, STRAIGHT	19332	1920A-1	1-C7	COVER, ROD	76421C	6120A-1	2-K7
	67293	1850A-1	1-M6	CONNECTOR, TUBE	13945	1380AA-2	1-D5	COVER, SASH GUIDE	17490A	1720A-1	1-G6
CLIP, COIL SCREEN		6152B-1	2-K8	CONSOLE, REAR	64410	5570A-1	2-K5	COVER, SERVICE HOLE	57631	5790A-1	2-H6
CLIP, D. TOP CEILING	70335B	6800A-1	2-C11	CONTACT	24496	1820A-1	1-16		50310	5010A-1	2-F3
CLIP, DRAIN HOSE	13305B	5360A-1	2-K4	CONTACT, HORN	60267	6611A-1	2-G9		56061	5390A-1	2-M4
	13305B	6330A-1	2-C9	CONTROL UNIT	18701	6600A-1	2-D9		56231A	5390A-1	2-M4
CLIP, ENGINE HARNESS	18994A	1800A-1	1-H6	CONTROL UNIT (EMISSION)	189401	6600A-1	2-D9		56639	5390A-1	2-M4
CLIP, FLEXIBLE HOSE	43635	4360AA-1	1-111	CONTROL, HEATER	61190	6100A-1	2-H7		56639D	6100A-1	2-H7
	43635	4360A-1	1-111	CONTROL, HEATER TEMP.	61180	6100A-1	2-H7	COVER, SERVO	19392	1920A-1	1-C7
	43635A	4140A-1	1-N10	CONTROLLER	32400	3210A-1	1-N9	COVER, SET	33049	3300A-1	1-E10
	43635B	4360AA-1	1-111	CONVERTER NO. 1, PRE	40780A	4000A-2	1-M10	COVER, TERMINAL	67011E	6701A-1	2-F10
	43635B	4360A-1	1-111	CONVERTER NO. 2, PRE	40400A	4000A-1	1-L10	COVER, THERMOSTAT	15172	1500A-1	1-H5
CLIP, HEATER HOSE	15545	6100A-1	2-H7	CONVERTER, MONOLITH	404001	4000A-1	1-L10		15172	1500AA-1	1-15
CLIP, HOSE	43635C	4360AA-1	1-111	CONVERTER, TORQUE	19100A	1910A-1	1-N6	COVER, TOP	19029	1910A-1	1-N6
CLIP, INST. HARNESS	67031E	6702A-1	2-G10	COOLER, OIL	147001	1500AA-1	1-15	COVER, UNDER	19027A	1910A-1	1-N6
CLIP, M. OIL TUBE	14668A	1400AA-2	1-G5		147002	1400A-1	1-E5		56111	5390A-1	2-M4
CLIP, MOULDING	50506A	5030A-1	2-G3	CORD, ALTERNATOR	183151	6701A-1	2-F10	COVER, VENT	16146	1600A-1	1-L5
CLIP, OIL PIPE	14745A	1400A-1	1-E5	CORD, DIN	66910A	6682A-1	2-D10	COVER, WHEEL CORE	32049	3200A-1	1-M9
CLIP, OIL TUBE	14296	1400A-1	1-E5		66910B	6682A-1	2-D10	COVER, WIPER ARM	76641	6730A-1	2-K10
	146411	1400AA-1	1-F5	CORD, RR. DEF.	67051C	6700A-1	2-E10	COVER, WIPER MOTOR	67435A	6750A-1	2-M10
CLIP, PIPE	45901	4500A-1	1-L11		67051D	6700A-1	2-E10	COVER, WIPER, ARM	76641A	6750A-1	2-M10
	45903	4500A-1	1-L11	CORD, SHORT	66970G	6682A-1	2-D10	COWLING, RADIATOR	15210A	1500A-1	1-H5
	45903D	4500A-1	1-L11	CORE, HEATER	76405	6110A-1	2-17		15210A	1500AA-1	1-15
	45904A	4500A-2	1-M11	COUPLING SET	2434C	1820A-1	1-16	CUP, FLOATING	49635	4340A-1	1-F11
	45931	4500A-2	1-M11	COVER	13187	1300AA-1	1-J3		49635	4340AA-1	1-G11
	67519	6720A-1	2-J10		19240	1910A-1	1-N6	CUP, PRIMARY	41461	4140A-1	1-N10
CLIP, RETAINER-BUMPER	50064	5010A-1	2-F3		236731	1330A-1	1-E4		49626	4340A-1	1-F11
CLIP, TUBULAR	51782	5170A-1	2-D4		236731	1330AA-1	1-F4		49626	4340AA-1	1-G11
CLIP, WIRE	58559B	6704A-1	2-110		24368	1820A-1	1-16	CUP, SECONDARY	41451	4140A-1	1-N10
CLIPS, RETAINER		6152B-1	2-K8		40551	4000A-1	1-L10		49625	4340A-1	1-F11
CLOCK, AUTO	55710	5500A-2	2-D5		44061A	4400A-1	1-J11		49625	4340AA-1	1-G11
CLUTCH		6142B-1	2-F8		44062	4400A-1	1-J11	CUSHION	34136	3410A-1	1-G10
CLUTCH ASSY., MAGNETIC		6140B-2	2-E8		66732	6700A-1	2-E10		56785	5230A-1	2-F4
CLUTCH, DIRECT	21510	1930A-2	1-F7		76609	6730A-1	2-K10	CUSHION (L), FRONT SEAT	88160	5700A-5	2-G6
CLUTCH, FRONT	19460	1930A-1	1-E7	COVER (L), KNUCKLE	88166	5700A-5	2-G6	CUSHION (R), FRONT SEAT	88110	5700A-4	2-F6
CLUTCH, ONE-WAY	19595	1940A-1	1-G7	COVER (R), KNUCKLE	88116	5700A-4	2-F6	CUSHION, DOOR	58906	5830A-2	2-K6
CLUTCH, OVER RUNNING	24722	1840A-1	1-K6	COVER KIT, END	32150	3210A-1	1-N9	CUSHION, RUBBER		6130B-2	2-N7
CLUTCH, REAR	19510	1930A-1	1-E7	COVER KIT, SIDE	32170A	3210A-1	1-N9	CYLINDER (L), WHEEL		2610A-1	1-E9
COCK, DRAIN	15207	1500A-1	1-H5	COVER LATCH	62882	6330A-1	2-C9	CYLINDER (R), WHEEL	26610A	2610A-1	1-E9
	15207	1500AA-1	1-15	COVER SET	24741A	1840A-1	1-K6	CYLINDER HEAD		6142B-1	2-F8
COIL, EVAPORATOR		6152B-1	2-K8	COVER SET, LEV. GAUGE	23340	1360A-1	1-J4	CYLINDER, CLUTCH MASTER	41990	4140A-1	1-N10
COIL, IGNITION	18100	1800A-1	1-H6	COVER SET, WATER PUMP	151305	1500A-1	1-H5	CYLINDER, CLUTCH RELEASE	41920	4140A-1	1-N10
COLLAR	15933	1580A-1	1-K5		151305	1500AA-1	1-15	CYLINDER, TANDEM MASTER	43990	4340AA-1	1-G11
	15933A	1580A-1	1-K5	COVER, BEARING	17325	1700A-1	1-M5		43990	4340A-1	1-F11
	15942	1580A-1	1-K5	COVER, BLIND	17486A	1720A-1	1-G6	* * * * *			
	23615B	1330AA-1	1-F4	COVER, CLUTCH	16410	1600A-1	1-L5	DAM, FRT W/SHIELD GLASS	63902	6300A-1	2-M8
COLLAR, BEARING	26152	2600A-1	1-D9	COVER, COLUMN-LOWER	60210A	5500A-2	2-D5	DAM, SIDE WINDOW	63942B	6300A-1	2-M8
COLLAR, CLUTCH RELEASE	16510	1600A-1	1-L5	COVER, COLUMN-UPPER	60210	5500A-2	2-D5	DAMPER	34910A	3400A-1	1-F10
COMPENSATOR	236931	1330A-1	1-E4	COVER, CONTROL UNIT	67566	6630A-1	2-L9		64625A	5500A-2	2-D5
COMPRESSOR		6142B-1	2-F8	COVER, DUST	103051	1040A-1	1-E3		287005	2800A-1	1-K9
COMPRESSOR MOUNT KIT (5444)		6142B-1	2-F8		10351	1040A-1	1-E3	DAMPER SET, REAR	13290C	1320AA-1	1-C4
COMPRESSOR, ASSY.		6140B-2	2-E8		16214	1600A-1	1-L5	DAMPER, PULSATION	20190A	1360A-1	1-J4
COMPRESSOR, CLUTCH		6142B-1	2-F8		32411	3210A-1	1-N9	DASH POT	20190C	1320AA-1	1-C4
CONDENSER		6130B-2	2-N7		34015	3400A-1	1-F10		20190C	1320AA-1	1-C4
CONDENSER ASSEMBLY		6132B-1	2-C8	COVER, DUST (L)	26140	2610AA-1	1-F9				

ALPHABETICAL INDEX

PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION
DECK (L), FLOOR	56540A	5370A -1	2 - L 4	FAN & FAN DRIVE	152501	1500AA -1	1 - I 5	FUNNEL	40560	4000A -2	1 - M10
DECK (R), FLOOR	56510	5370A -1	2 - L 4		152501	1500A -1	1 - H 5	FUNNEL, AIR	13341	1330AA -1	1 - F 4
DECK, TAPE-CASSETTE	66900D	6680A -1	2 - C10	FAN DRIVE	152101	1500A -1	1 - H 5	FUSE (10A)	66495	6700A -1	2 - E10
DEFLECTOR	62801A	6330A -1	2 - C 9		152101	1500AA -1	1 - I 5	FUSE (15A)	66496	6700A -1	2 - E10
DIAPHRAGM, CARBURETOR	23322	1330A -1	1 - J 4	FAN, COOLING	15140	1500AA -1	1 - I 5	FUSE (20A)	66497	6700A -1	2 - E10
DIAPHRAGM, SHUTTER VALVE	13130A	1380A -1	1 - N 4		15140	1500A -1	1 - H 5				
DIAPHRAGM, VACUUM	19823	1920A -2	1 - D 7		15140	1500A -1	1 - H 5	*** G ***			
DIPSTICK	10450	1030A -1	1 - D 3	FASTENER	50036C	5000A -1	2 - D 3	GARNISH (L), CTR. TRIM		6820A -1	2 - D11
	19880	1920A -2	1 - D 7		50036D	5010A -1	2 - F 3	GARNISH (L), SIDE WINDOW	51891A	6300A -1	2 - M 8
	32612B	3240A -1	1 - D10		50037C	5000A -1	2 - D 3	GARNISH (L), TOP-SIDE		6800A -1	2 - C11
DISC, CLUTCH	16460	1600A -1	1 - L 5		50242A	5180A -1	2 - E 4	GARNISH (R), CTR. TRIM	68220	6820A -1	2 - D11
DISC, FRICTION	79977	2760AA -2	1 - J 9		58762	5800A -1	2 - I 6	GARNISH (R), SIDE WINDOW	51881A	6300A -1	2 - M 8
DISTRIBUTOR	18200	1820A -1	1 - I 6		58921	5840A -2	2 - D 7	GARNISH (R), TOP-SIDE	68050A	6800A -1	2 - C11
DISTRIBUTOR, OIL	19650	1940A -1	1 - G 7		58921D	6840A -1	2 - F11	GARNISH, TOP-FRONT	68021F	6800A -1	2 - C11
DOWEL, TUBULAR	101111	1030A -1	1 - D 3		68031B	6900A -1	2 - K11	GASKET	13135	1380A -1	1 - N 4
DRIVE & DIFFERENTIAL	27100	2700A -1	1 - G 9		68032B	5310A -1	2 - G 4		13135C	1300AA -1	1 - J 3
	27100	2700AA -1	1 - I 9		68965A	6800A -1	2 - C11		131711	1380AA -1	1 - C 5
DRUM, BRAKE	26251	2610A -1	1 - E 9	FASTENER, AIR DUCT	69885A	6860A -1	2 - I11		13211	1330AA -1	1 - F 4
DRUM, CLUTCH	19470	1930A -1	1 - E 7		688651	1330AA -1	1 - F 4		13212	1330AA -1	1 - F 4
DRUM, CONNECTING	19590	1940A -1	1 - G 7	FASTENER, FRT. PILLAR TRIM	68172B	6820A -1	2 - D11		13291	1320AA -1	1 - C 4
	19591	1940A -1	1 - G 7	FASTENER, PROTECTOR	69885K	5390A -1	2 - M 4		13483A	1320AA -1	1 - C 4
DRUM, DIRECT	21520	1930A -2	1 - F 7	FASTENER, QTR. GARNISH	68865R	6840A -2	2 - G11		13541	1350AA -1	1 - H 4
DRUM, REAR CLUTCH	19511	1930A -1	1 - E 7	FASTENER, RR. PILLAR TRIM	68865P	6820A -2	2 - E11		13761	1380AA -1	1 - C 5
DUCT	61150	6100A -1	2 - H 7	FASTENER, TOP CEILING	68865V	6800A -1	2 - C11		148231	1500AA -1	1 - I 5
DUCT (L), AIR	56830B	5310A -1	2 - G 4	FASTENER, WINDOW MLDG.	50608B	5030A -1	2 - G 3		15081	1500AA -1	1 - I 5
DUCT (L), SIDE DEMISTER	60182	5580A -1	2 - M 5	FEEDER, ANTENNA	66944A	6682A -1	2 - D10		15081	1500A -1	1 - H 5
DUCT (R), AIR	56820A	5310A -1	2 - G 4	FEEDER-ANTENNA	66935	6682A -1	2 - D10		15082	1500AA -1	1 - I 5
DUCT (R), SIDE DEMISTER	60181A	5580A -1	2 - M 5	FIELD COIL		6142B -1	2 - F 8		15082	1500A -1	1 - H 5
DUCT NO. 1 (L)	64771B	5580A -1	2 - M 5	FILLER, REAR BUMPER	50311A	5010A -1	2 - F 3		15173	1500A -1	1 - H 5
DUCT NO. 2 (L)	64772B	5580A -1	2 - M 5	FILTER, FUEL	13470	1320A -1	1 - M 3		15173	1500AA -1	1 - I 5
DUCT NO. 2 (R)	64772C	5580A -1	2 - M 5		13480	1320AA -1	1 - C 4		15611	6600A -1	2 - D 9
DUCT NO. 3 (L)	64773B	5580A -1	2 - M 5	FILTER, FUEL TANK	42113	4200A -1	1 - D11		18763A	4000A -1	1 - L10
DUCT NO. 3 (R)	64773A	5580A -1	2 - M 5	FILTER, GAS	20308	1380AA -2	1 - D 5		19396A	1920A -1	1 - C 7
DUCT, AIR	13305D	1330AA -1	1 - F 4	FINISHER, REAR	50850	5180A -1	2 - E 4		207711	1380A -1	1 - N 4
	133251	1330AA -1	1 - F 4	FLANGE	19580	1940A -1	1 - G 7		23303A	1360A -1	1 - J 4
	13360	1330AA -1	1 - F 4		76453	6120A -1	2 - K 7		23481	1360A -2	1 - K 4
DUCT, CENTER	64750A	5580A -1	2 - M 5	FLANGE, COMPANION	27020	2700A -1	1 - G 9		40078	4000A -1	1 - L10
DUCT, HOT AIR	13390	1310A -1	1 - K 3		27020	2700AA -1	1 - I 9		40325	4000A -1	1 - L10
	13390	1310AA -1	1 - L 3	FLANGE, DRIVE	19581	1940A -1	1 - G 7		40356	4000A -1	1 - L10
DUM 'A' (L)	50526C	5030A -1	2 - G 3	FLAP	15411	1500AA -2	1 - J 5		40375	4000A -1	1 - L10
DUM 'A' (R)	50514B	5030A -1	2 - G 3	FLATWASHER, 1/2, SAE		6142B -1	2 - F 8		40668	4000A -2	1 - M10
DUM 'B' (L)	50527B	5030A -1	2 - G 3	FLATWASHER, 10MM, 22MM OD, ZINC		6142B -1	2 - F 8		41443	4140A -1	1 - N10
DUM 'B' (R)	50517B	5030A -1	2 - G 3	FLATWASHER, 10MM, W/ 708 OD		6132B -1	2 - C 8		41443A	4300A -1	1 - E11
				FLATWASHER, 10MM, ZINC		6132B -1	2 - C 8		43443	4340AA -1	1 - G11
**** E ****				FLATWASHER, 6 X 18 X 1.6 ZI		6152B -1	2 - K 8		43443	4340A -1	1 - F11
ELBOW, RETURN	32607B	3240A -1	1 - D10	FLATWASHER, 6MM, ZINC		6132B -1	2 - C 8		51902F	6300A -1	2 - M 8
ELEMENT, AIR CLEANER	23603	1330A -1	1 - E 4	FLOAT	43542	4340A -1	1 - F11		56793	5330A -1	2 - I 4
	23603	1330AA -1	1 - F 4		43542	4340AA -1	1 - G11		76124	6120A -1	2 - K 7
EMBLEM	37192	3700A -1	1 - H10	FLOAT SET, FRONT	23328B	1360A -1	1 - J 4		76455A	6120A -1	2 - K 7
	37192B	3700A -1	1 - H10	FLOAT SET, REAR	23329C	1360A -1	1 - J 4		76464A	6120A -1	2 - K 7
END, CONTROL ROD	17461A	1720A -1	1 - G 6	FLYWHEEL	11500	1100A -1	1 - G 3	GASKET & SEAL KIT	22900	1960A -1	1 - I 7
END, SHIFT	17432	1720A -1	1 - G 6	FORK, BRAKE	43140	4300A -1	1 - E11	GASKET (L)	64727	5580A -1	2 - I A 5
END, SHIFT ROD (1ST & 2ND)	17410A	1720A -1	1 - G 6	FORK, CLUTCH	41140	4300A -1	1 - E11	GASKET (L), MIRROR	69196	6900A -2	2 - L11
END, SHIFT ROD (3RD & 4TH)	17422A	1720A -1	1 - G 6	FORK, CLUTCH RELEASE	16520	1600A -1	1 - L 5	GASKET (L), REAR COMB.		5110A -1	2 - M 3
ENGINE, SHORT	23800	1000A -1	1 - C 3	FORK, SHIFT	17406	1720A -1	1 - G 6	GASKET (R)	64728A	5580A -1	2 - M 5
EQUALIZER, GRAPHIC	66920D	6680A -1	2 - C10	FORK, SHIFT (1ST & 2ND)	17402	1720A -1	1 - G 6	GASKET (R), MIRROR	69136	6900A -2	2 - L1
ESCUTCHEON	58375	5830A -1	2 - J 6	FORK, SHIFT (3RD & 4TH)	17404	1720A -1	1 - G 6	GASKET (R), REAR COMB.	51164	5110A -1	2 - M 3
EVAPORATOR	6150B -2	2 - J 8		FRAME	76602	6730A -1	2 - K10	GASKET KIT, OVERHAUL		6145B -2	2 - H 8
EVAPORATOR ASSEMBLY	6152B -1	2 - K 8		FRAME (L), REAR SIDE	54810	5370A -1	2 - L 4	GASKET SET	23510	1359A -1	1 - I 4
EXPANSION VALVE	6152B -1	2 - K 8		FRAME (L), SIDE-FRONT	54300	5320A -1	2 - H 4		236801	1330A -1	1 - E 4
EXTENSION, AIR VALVE	37600H	3700A -2	1 - I10	FRAME (R), REAR SIDE	53810	5370A -1	2 - L 4	GASKET SET, ENGINE	102715	1000A -1	1 - C 3
EXTENSION, FEEDER	66936	6682A -1	2 - D10	FRAME (R), SIDE-FRONT	53300	5320A -1	2 - H 4	GASKET SET, SUB-ENGINE	131115	1000A -1	1 - C 3
EXTRACTOR (L)	5180A -1	5180A -1	2 - E 4	FRAME, GLOVE BOX-LWR.	60532	5560A -1	2 - J 5	GASKET, A/C VALVE	137241	1371A -1	1 - L 4
EXTRACTOR (R)	51911	5180A -1	2 - E 4	FRAME, INST. PANEL	60420A	5560A -1	2 - J 5		137241	1371AA -1	1 - M 4
				FRONT PLATE & ROTOR		6142B -1	2 - F 8	GASKET, CAP	42462	4200A -1	1 - D11

ALPHABETICAL INDEX

PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION
KNOB, STOP	66903C	6680A	-1 2-C 10	LEVER, CONTROL	17461	1720A	-1 1-G 6	MOTOR (L)		5103A	-1 2-K 3
KNOB, TRIPMETER	55472	5540A	-1 2-H 5		7640B	6110A	-1 2-I 7	MOTOR (L), WINDOW		5830A	-2 2-K 6
KNOB, VENTILATOR	70362	5580A	-1 2-M 5		76411	6110A	-1 2-I 7	MOTOR (R)	51931	5103A	-1 2-K 3
KNOB, VOLUME	66914	6680A	-1 2-C 10		76412	6110A	-1 2-I 7	MOTOR (R), WINDOW	58580	5830A	-2 2-K 6
KNUCKLE (L), RECLINING	88151	5700A	-5 2-G 6		76501	6115A	-1 2-J 7	MOTOR, FAN	76424	6120A	-1 2-K 7
KNUCKLE (R), RECLINING	88101	5700A	-3 2-E 6	LEVER, LIFTER	88076P	5700A	-3 2-E 6		76424A	6120A	-1 2-K 7
	*** L ***				88141P	5700A	-5 2-G 6	MOTOR, WIPER	67350	6730A	-1 2-K 10
LABEL, BATTERY	69064	6930A	-1 2-N 11	LEVER, PARKING BRAKE	44010	4400A	-1 1-J 11	MOULDING (L), DRIP	50451	5040A	-1 2-H 3
LABEL, CAUTION-MVSS	69034A	6930A	-1 2-N 11	LEVER, SELECT	19031	1950A	-1 1-H 7	MOULDING (L), GLASS	63980	6300A	-1 2-M 8
LABEL, EMISSION	69041	6930A	-1 2-N 11		46010	4600A	-1 1-N 11	MOULDING (R), DRIP	50441	5040A	-1 2-H 3
LABEL, EMISSION DECAL	69047	6930A	-1 2-N 11	LID (L), LAMP		5103A	-1 2-K 3	MOULDING (R), GLASS	63970	6300A	-1 2-M 8
LABEL, GASOLINE	69038A	6930A	-1 2-N 11	LID (R), LAMP		5103A	-1 2-K 3	MOULDING SET (L), SIDE FRONT	50504S	5030A	-1 2-G 3
LABEL, INDICATOR	60222C	5500A	-2 2-D 5	LID, CONSOLE	64450	5570A	-2 2-L 5	MOULDING SET (L), UPPER FRONT	50502S	5030A	-1 2-G 3
LABEL, OIL	69013	6930A	-1 2-N 11	LID, FUEL FILLER	42410	4200A	-1 1-D 11	MOULDING SET (R), SIDE FRONT	50503S	5030A	-1 2-G 3
LABEL, TEMPORARY TIRE	69014A	6930A	-1 2-N 11	LID, GLOVE POCKET	64030	5560A	-1 2-J 5	MOULDING SET (R), UPPER FRONT	50501S	5030A	-1 2-G 3
LABEL, TIRE	69014	6930A	-1 2-N 11	LID, STORAGE BOX	69780A	6900A	-3 2-M 11	MOULDING SET, LOWER FRONT	50505T	5030A	-1 2-G 3
LABEL, VAC. DIAPHRAGM	69044A	6930A	-1 2-N 11	LIGHTER, CIGAR	66250	6610A	-1 2-F 9	MOULDING, REAR WINDOW	63935	6300A	-1 2-M 8
LAMP SET (L) SIDE TURN	51120T	5105A	-1 2-L 3	LINK	28200A	2800A	-1 1-K 9	MOUNTING, COMPRESSOR		6140B	-2 2-E 8
	51550T	5120A	-1 2-N 3	LINK (L), WATT	28170A	2800A	-1 1-K 9	MTR	66870E	6680A	-1 2-C 10
LAMP SET (L), FRONT COMB.	51060T	5105A	-1 2-L 3	LINK (R), WATT	28160A	2800A	-1 1-K 9		*** N ***		
LAMP SET (L), HEAD	51030T	5100A	-1 2-J 3	LINK, FUSIBLE	18055	6701A	-1 2-F 10	NAME, SIDE	51721	5170A	-1 2-D 4
LAMP SET (L), REAR COMB.	51150T	5110A	-1 2-M 3		67099	6700A	-1 2-E 10	NIPPLE	32613	3240A	-1 1-D 10
LAMP SET (R) SIDE TURN	51120S	5105A	-1 2-L 3	LINK, LOWER	67099A	6700A	-1 2-E 10	NOZZLE (L), DEFROSTER	60140	5580A	-1 2-M 5
	51550S	5120A	-1 2-N 3	LINK, WIPER	67099B	6700A	-1 2-E 10	NOZZLE (L), WASHER-FRONT	67510	6720A	-1 2-J 10
LAMP SET (R), FRONT COMB.	51060S	5105A	-1 2-L 3	LINK, CENTER	28300B	2800A	-1 1-K 9	NOZZLE (R), DEFROSTER	60120	5580A	-1 2-M 5
LAMP SET (R), HEAD	51030S	5100A	-1 2-J 3	LOCK (L), DOOR	76601	3230A	-1 1-C 10	NOZZLE (R), WASHER-FRONT	67510E	6720A	-1 2-J 10
LAMP SET (R), REAR COMB.	51150S	5110A	-1 2-M 3	LOCK (R), DOOR	58310	5830A	-1 2-J 6	NOZZLE SET, ACCEL.	234901	1360A	-2 1-K 4
LAMP SET, LICENSE	51270S	5120A	-1 2-N 3	LOCK, BACK DOOR	62310	6230A	-1 2-L 8	NOZZLE, WASHER-RR WINDOW	67490A	6750A	-1 2-M 10
LAMP, CARGO ROOM	51440A	5125A	-1 2-C 4	LOCK, HOOD	56620	5230A	-1 2-F 4	NUT			
LAMP, SPOT	51355A	6900A	-1 2-K 11	LOCKWASHER, 1/2, ZINC		6142B	-1 2-F 8		13461	1340A	-2 2-E 8
LATCH, ROTARY	62881	6330A	-1 2-C 9	LOCKWASHER, 10MM		6132B	-1 2-C 8		13461	1310AA	-1 1-L 3
LENS	51441	5125A	-1 2-C 4	LOCKWASHER, 10MM, ZINC		6142B	-1 2-F 8		19389	1920A	-1 1-C 7
	55172	5500A	-1 2-C 5	LOCKWASHER, 5/16, ZINC		6142B	-1 2-F 8		25125	2500A	-1 1-C 9
	55174	5500A	-1 2-C 5	LOUVER	64850	5500A	-3 2-E 5		32621	3240A	-1 1-D 10
	55218A	5500A	-1 2-C 5	LOUVER (L)	64815G	5580A	-1 2-M 5		33042	3300A	-1 1-E 10
LENS (L), FRONT COMB.		5105A	-1 2-L 3	LOUVER (R)	64815	5580A	-1 2-M 5		34222	3410A	-1 1-G 10
LENS (L), REAR COMB.		5110A	-1 2-M 3	LOUVER, CENTER PANEL	55220B	5500A	-1 2-C 5		40355A	4000A	-1 1-L 10
LENS (L), SIDE TURN		5105A	-1 2-L 3		*** M ***				46061	4600A	-1 1-N 11
		5120A	-1 2-N 3	MANIFOLD, EXHAUST	13450	1310AA	-1 1-L 3		60052A	5500A	-2 2-D 5
LENS (R), FRONT COMB.	51063	5105A	-1 2-L 3		13450	1310A	-1 1-K 3		62635A	6750A	-1 2-M 10
LENS (R), REAR COMB.	51161	5110A	-1 2-M 3	MANIFOLD, INTAKE	13100	1300AA	-1 1-J 3		66372B	6750A	-1 2-M 10
LENS (R), SIDE TURN	51122	5105A	-1 2-L 3		13100	1300A	-1 1-L 3		87134	6730A	-1 2-K 10
LENS, COLUMN COVER	60246	5500A	-2 2-D 5	MARK, REAR	51771A	5170A	-1 2-D 4	NUT SET	24511	1830A	-1 1-J 6
LENS, CONTROL KNOB	76507E	6115A	-1 2-J 7	MAT, FRONT FLOOR	68674	6860A	-1 2-I 11		24533	1830A	-1 1-J 6
LENS, INTERIOR MIRROR	69223	6900A	-2 2-L 11	MAT, REAR FLOOR	68677A	6860A	-1 2-I 11	NUT, 10-32 HH KEPS BZ		6152B	-1 2-K 8
LENS, LICENSE LAMP	51273	5120A	-1 2-N 3	MAT, TRUNK ROOM	68695	6860A	-1 2-I 11	NUT, 10MM X 1.25, HEX		6132B	-1 2-C 8
LENS, SMOKE	55443B	5540A	-1 2-H 5	MEMBER NO. 3, CROSS	53900	5370A	-1 2-L 4	NUT, 10MM X 1.25, ZINC		6142B	-1 2-F 8
LENS, STORAGE BOX	64245A	6900A	-1 2-K 11	MEMBER NO. 4, CROSS	53940	5370A	-1 2-L 4	NUT, 12MM X 1.50, ZINC		6142B	-1 2-F 8
LENS, WARNING	55447C	5540A	-1 2-H 5	MEMBER NO. 5, CROSS	53960	5370A	-1 2-L 4	NUT, 6 X 1.0 HFHSK Z2		6152B	-1 2-K 8
LEVER	24730	1840A	-1 1-K 6	MEMBER, CROSS	34800	3410A	-1 1-G 10	NUT, 6MM FLANGE, ZINC		6132B	-1 2-C 8
	46150	4600A	-1 1-N 11		53162	5370A	-1 2-L 4	NUT, CAP	13742B	1330AA	-1 1-F 4
LEVER (L), LINK		5103A	-1 2-K 3	MEMBER, T/MISSION MTG.	39380	3900A	-1 1-K 10		76603	6730A	-1 2-K 10
LEVER (L), OPERATING		2610A	-1 1-E 9	METER, AIR FLOW	13210A	1330AA	-1 1-F 4	NUT, CLIP	50825	5310A	-1 2-G 4
LEVER (L), PAWL	26818	2610A	-1 1-E 9	MIRROR (L), DOOR	69110Y	6900A	-1 2-K 11		50825C	5000A	-1 2-D 3
LEVER (R), LINK	51935	5103A	-1 2-K 3	MIRROR (L), REAR VIEW	69130	6900A	-2 2-L 11	NUT, CLIP-FRT. FENDER	52841	5320A	-1 2-H 4
LEVER (R), OPERATING	26800	2610A	-1 1-E 9	MIRROR (R), DOOR	69110A	6900A	-1 2-K 11	NUT, CLIP-PROTECTOR	50825A	5390A	-1 2-M 4
LEVER (R), PAWL	26808	2610A	-1 1-E 9	MIRROR (R), REAR VIEW	69110	6900A	-1 2-K 11	NUT, CROSS MEMBER	39349A	3410A	-1 1-G 10
LEVER CONTROL	76506	6115A	-1 2-J 7	MIRROR, INTERIOR	69170	6900A	-2 2-L 11	NUT, DAMPER	62635	6230A	-1 2-L 8
LEVER NO. 1, CONTROL	76407	6110A	-1 2-I 7	MOTOR	13083	1350A	-1 1-G 4	NUT, EXPANSION	64996	5560A	-1 2-J 5
LEVER NO. 2, CONTROL	76409	6110A	-1 2-I 7	MOTOR & LINK (L)	67450A	6750A	-1 2-M 10	NUT, FLANGE	40355	4000A	-1 1-L 10
LEVER SET, FRONT	234201	1360A	-2 1-K 4	MOTOR & LINK (R)	51930A	5103A	-1 2-K 3	NUT, HEATER CONTROL	61209A	6100A	-1 2-H 7
LEVER SET, REAR	234301	1360A	-2 1-K 4			5103A	-1 2-K 3	NUT, HEX		6140B	-2 2-E 8
LEVER, CHANGE	17510	1720A	-1 1-G 6			5103A	-1 2-K 3			6140B	-2 2-E 8

ALPHABETICAL INDEX

PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION
NUT, HEXAGON	234521	1360A	-2 1-K 4	PAD (R), FLOOR-FRONT	68652A	6860A	-1 2-I 11	PEDAL, CLUTCH	41030	4300A	-1 1-E 11
NUT, HUB	26161A	3700A	-1 1-H 10	PAD SET, FRONT CALIPER	49280B	3300A	-1 1-E 10	PELLET, THERMO	148101	1500AA	-1 1-I 5
NUT, LOCK	117111	1100A	-1 1-G 3	PAD SUB SET, REAR	49280A	2610AA	-1 1-F 9	PICK-UP SET	24314A	1820A	-1 1-I 6
	17524	1720A	-1 1-G 6	PAD, CHOKE WIRE	56942B	5500A	-2 2-D 5	PIECE, DISTANCE	27171	2700A	-1 1-G 9
	17629	1710A	-3 1-E 6	PAD, CRUSH	60350	5560A	-1 2-J 5		27171	2700AA	-1 1-I 9
	27030	2700AA	-1 1-I 9	PAD, FOOT REST	86202	4300A	-1 1-E 11	PIECE, SIDE	113021	1110A	-1 1-H 3
	27030	2700A	-1 1-G 9	PAD, FUEL TANK	42523	4200A	-1 1-D 11	PILLAR (L), FRT.-INNER	71260	5340A	-1 2-J 4
NUT, LOCK PLATE	76626	6750A	-1 2-M 10	PAD, PEDAL	43028	4300A	-1 1-E 11	PILLAR (L), HINGE	71210A	5340A	-1 2-J 4
NUT, LOCK-COUNTER SHAFT BRG.	17309B	1710A	-2 1-D 6	PAD, PROTECTOR	67059C	5800A	-1 2-I 6	PILLAR (L), HINGE-OUT	74120	5340A	-1 2-J 4
NUT, SHAFT	19443	1950A	-1 1-H 7	PAD, STORAGE BOX	68658A	6860A	-1 2-I 11	PILLAR (R), FRT.-INNER	70260	5340A	-1 2-J 4
NUT, SHOCK ABSORBER	34222G	5010A	-1 2-F 3	PAD, TRUNK	68665C	6860A	-1 2-I 11	PILLAR (R), HINGE	70210A	5340A	-1 2-J 4
NUT, SPEED	69049D	6300A	-1 2-M 8	PAD, TRUNK SIDE	68667D	6860A	-1 2-I 11	PILLAR (R), HINGE-OUT	74090	5340A	-1 2-J 4
NUT, SPEED-STEERING LOCK	66158	0900A	-1 2-C 3	PAN, FLOOR-FRONT	53600	5370A	-1 2-I 4	PIN	27262	2700A	-1 1-G 9
NUT, SPRING	56905A	5560A	-1 2-J 5	PAN, FLOOR-REAR	53700	5370A	-1 2-I 4		33698A	3300A	-1 1-E 10
	56905C	5500A	-2 2-D 5	PAN, OIL	10400	1040A	-1 1-E 3		44054	4400A	-1 1-I 11
NUT, STOPPER	148221	1500AA	-1 1-I 5		19836	1920A	-2 1-D 7		46683A	4300A	-1 1-E 11
NUT, STRIKER	62365	6230A	-1 2-I 8	PANEL (L), COWL SIDE	71020	5340A	-1 2-J 4		46785A	4300A	-1 1-E 11
NUT, TENSION ROD	34133A	3410A	-1 1-G 10	PANEL (L), FENDER-FRT.	52210	5320A	-1 2-H 4	PIN & WASHER SET	13717A	1360A	-1 1-J 4
	o			PANEL (L), FENDER-REAR	74130	5340A	-1 2-J 4	PIN (L)		2610A	-1 1-E 9
O-RING		6132B	-1 2-C 8	PANEL (L), FENDER-REAR	55321A	5500A	-1 2-C 5	PIN (R)		2610A	-1 1-E 9
		6142B	-1 2-F 8	PANEL (L), LWR.-NO. 1	55331C	5500A	-1 2-C 5	PIN, BRAKE SHOE	26391	2610A	-1 1-E 9
		6152B	-1 2-K 8	PANEL (L), LWR.-NO. 2	55341B	5500A	-1 2-C 5	PIN, COTTER	13717	1360A	-1 1-J 4
	101731	1030A	-1 1-D 3	PANEL (L), LWR.-NO. 3		5800A	-1 2-I 6	PIN, DAMPER	62621	6230A	-1 2-I 8
	101741	1040A	-1 1-E 3	PANEL (L), OUT.-FRT. DOOR	71100	5340A	-1 2-J 4	PIN, DOWEL	10203A	1040A	-1 1-E 3
	105551	1030A	-1 1-D 3	PANEL (L), QUARTER	55404	5500A	-2 2-D 5	PIN, DRIVEN GEAR	146231	1400A	-1 1-E 5
	13100J	1300A	-1 1-I 3	PANEL (L), SIDE	56380	5310A	-1 2-G 4		146231	1400AA	-1 1-F 5
	13253	1320AA	-1 1-C 4	PANEL (L), SIDE SEAL	54950	5370A	-1 2-I 4	PIN, GUDE	33694	3300A	-1 1-E 10
	13265	1320AA	-1 1-C 4	PANEL (L), SIDE SILL	71270	5340A	-1 2-J 4	PIN, GUIDE	26695	2610AA	-1 1-F 9
	13282A	1320AA	-1 1-C 4	PANEL (L), WHEEL APRON	54210	5320A	-1 2-H 4		46022B	4600A	-1 1-N 11
	14300J	1400AA	-1 1-F 5	PANEL (R), WHEEL APRON	70020	5340A	-1 2-J 4	PIN, INTER LOCK	17351A	1720A	-1 1-G 6
	14300J	1400A	-1 1-E 5	PANEL (R), COWL SIDE	52110	5320A	-1 2-H 4	PIN, PIVOT	16102	1600A	-1 1-L 5
	146041	1400AA	-1 1-F 5	PANEL (R), FENDER-FRT.	74100	5340A	-1 2-J 4	PIN, SPRING	106091	1040A	-1 1-E 3
	17442J	1700A	-1 1-M 5	PANEL (R), FENDER-REAR	55311C	5500A	-1 2-C 5	PIN, TOP INDICATOR	10503	1040A	-1 1-E 3
	18201	1800A	-1 1-H 6	PANEL (R), LOWER	58020	5800A	-1 2-I 6	PIN, TUBULAR	103091	1040A	-1 1-E 3
	19395	1920A	-1 1-C 7	PANEL (R), OUT.-FRT. DOOR	70100	5340A	-1 2-J 4	PINION	24709	1840A	-1 1-K 6
	19432	1950A	-1 1-H 7	PANEL (R), QUARTER	55403	5500A	-2 2-D 5	PINION, DIFFERENTIAL	27255	2700A	-1 1-G 9
	19442J	1920A	-1 1-C 7	PANEL (R), SIDE	56370A	5310A	-1 2-G 4		27255	2700AA	-1 1-I 9
	19446	1950A	-1 1-H 7		53950	5370A	-1 2-I 4	PIPE	13945Q	6640A	-1 2-N 9
	19870J	1920A	-2 1-D 7	PANEL (R), SIDE SILL	70270	5340A	-1 2-J 4		18107	1800A	-1 1-H 6
	21212	1920A	-2 1-D 7	PANEL (R), WHEEL APRON	53210	5320A	-1 2-H 4		40070	4000A	-1 1-I 10
	21277	1920A	-2 1-D 7	PANEL NO. 1, DECO.	55213C	5500A	-1 2-C 5		66945	6682A	-1 2-D 10
	21292	6600A	-2 2-E 9	PANEL NO. 2, DECO.	55214B	5500A	-1 2-C 5		76416B	6110A	-1 2-I 7
	21294	6600A	-2 2-E 9	PANEL, CENTER	55221	5500A	-1 2-C 5	PIPE (L), BRAKE-FRONT	45320	4360AA	-1 1-I 11
	21295	6600A	-2 2-E 9	PANEL, COWL	74040	5330A	-1 2-I 4		45320	4360A	-1 1-H 11
	21395	1920A	-2 1-D 7	PANEL, COWLING UP	56391A	5330A	-1 2-I 4	PIPE (L), BRAKE-REAR	43650A	4360A	-1 1-H 11
	21677	1910A	-1 1-N 6	PANEL, DASH-LOWER	53400	5330A	-1 2-I 4		43650A	4360AA	-1 1-I 11
	34731	3400A	-1 1-F 10	PANEL, DASH-UPPER	53510	5330A	-1 2-I 4	PIPE (R), BRAKE-FRONT	45280	4360AA	-1 1-I 11
O-RING #4, CAP SEAL		6152B	-1 2-K 8	PANEL, NOSE	52810	5310A	-1 2-G 4		45280	4360A	-1 1-H 11
O-RING SET	230401	1000A	-1 1-C 3	PANEL, RAD. SHROUD	53100	5310A	-1 2-G 4	PIPE (R), BRAKE-REAR	43660A	4360A	-1 1-H 11
O-RING, INNER	113411	1110A	-1 1-H 3	PANEL, REAR END	70750	5340A	-1 2-J 4		43660A	4360AA	-1 1-I 11
O-RING, OUTER	113431	1110A	-1 1-H 3	PANEL, ROOF	74030	5360A	-1 2-K 4	PIPE SET, VACUUM	23509	1360A	-2 1-K 4
O-RING, SAE 114 (DISCH)		6142B	-1 2-F 8	PANEL, SKIRT-RR.	70791A	5340A	-1 2-J 4	PIPE, AIR	13705	1380AA	-1 1-C 5
O-RING, SAE 116 (SUCTION)		6142B	-1 2-F 8	PANEL, SWITCH	64345	5570A	-1 2-K 5		40720	4000A	-2 1-M 10
OIL FILTER PLUG		6142B	-1 2-F 8	PARTS KIT, BRAKE MAST	49610	4340AA	-1 1-G 11		40720B	4000A	-2 1-M 10
OPENER, FILLER LID	42480	4200A	-1 1-D 11	PARTS KIT, BRAKE MASTER	49610	4340A	-1 1-F 11	PIPE, AIR INTAKE	23615	1330A	-1 1-E 4
OPENER, REMOTE CONTROL	62315	6230A	-1 2-L 8	PARTS KIT, INNER	49460	4140A	-1 1-N 10		45250	4360AA	-1 1-I 11
ORNAMENT, FRONT	51771	5170A	-1 2-D 4		49520	4140A	-1 1-N 10	PIPE, BRAKE-FRONT	45350	4360A	-1 1-H 11
ORNAMENT, REAR	51781	5170A	-1 2-D 4		49640D	4340AA	-1 1-G 11		45350	4360A	-1 1-H 11
OSCILLATOR	67690B	6630A	-1 2-I 9		49640D	4340A	-1 1-F 11	PIPE, BRAKE-REAR	45350	4360AA	-1 1-I 11
	p			PARTS SET	76619	6740A	-1 2-L 10		45350	4360AA	-1 1-I 11
PACKING	68951C	5180A	-1 2-E 4		76619A	6760A	-1 2-N 10		45360A	4360AA	-1 1-I 11
PAD (C), FLOOR-FRONT	68651	6860A	-1 2-I 11	PASS, OIL	17540	1700A	-1 1-M 5	PIPE, BREATHER	42390B	4300A	-1 1-D 11
PAD (C), FLOOR-REAR	68654	6860A	-1 2-I 11	PAWL, PARKING	19732	1950A	-1 1-H 7	PIPE, CLUTCH	45510	4140A	-1 1-N 10
				PEDAL & ARM	41610B	4160A	-1 1-C 11	PIPE, DELIVERY	1320A	1320AA	-1 1-C 4
				PEDAL, ACCELERATOR	41710	4160A	-1 1-C 11		45711	4500A	-1 1-L 11
				PEDAL, BRAKE	43030	4300A	-1 1-E 11				

ALPHABETICAL INDEX

PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION
PIPE, EVAPORATION	45712	4500A-1	1-L11	PLATE, ADJUST	34013	3400A-1	1-F10		26051	2600A-1	1-D9
PIPE, FILLER	42210	4200A-1	1-D11	PLATE, CAUTION	69021A	6930A-1	2-N11	PLUG, MAIN JET	23354A	1360A-1	1-J4
PIPE, FUEL	132351	13200AA-1	1-C4	PLATE, CEILING-FRT.	68051	6800A-1	2-C11	PLUG, OIL	32190	3210A-1	1-N9
	42180	4200A-1	1-D11	PLATE, DISC	26251B	2610AA-1	1-F9	HUG, OIL JET	114111	1100A-1	1-G3
PIPE, FUEL MAIN	45111	4500A-1	1-L11	PLATE, DISHED	19498	1930A-1	1-E7	PLUG, OIL LEVEL	26041	2600A-1	1-D9
	45112	4500A-1	1-L11	PLATE, DRIVE	19020	1910A-1	1-N6	PLUG, SERVICE COVER	58868C	4000A-2	1-M10
PIPE, FUEL RETURN	45611	4500A-1	1-L11		19500	1930A-1	1-E7	PLUG, SPARK	18110	1800A-1	1-H6
PIPE, HEATER	61220	6100A-1	2-H7		19610	1940A-1	1-G7	PLUG, SQUARE HEAD	19331	1920A-1	1-C7
PIPE, HOT AIR DUCT	133751	1310A-1	1-K3	PLATE, DRIVEN	19499	1930A-1	1-E7	PLUNGER, CONTROL	14115	1400A-1	1-E5
PIPE, INLET-RESO. CHAM	131178	1300AA-1	1-J3		19609	1940A-1	1-G7		14115	1400AA-1	1-F5
PIPE, OIL	19920	1910A-1	1-N6	PLATE, FRICTION	27258	2700AA-1	1-I9		142751	1040A-2	1-F3
	19930	1910A-1	1-N6	PLATE, GASKET	64729	5580A-1	2-M5	POCKET (L), DOOR TRIM		5840A-3	2-E7
PIPE, OIL COOLER	147402	1400A-1	1-E5	PLATE, HANGER	40180B	4000A-1	1-L10	POC"ET (R), DOOR TRIM	68433	5840A-3	2-E7
PIPE, OIL FILLER	10410	1030A-1	1-D3	PLATE, HEATER UNIT	76511	6110A-1	2-I7	POLE, ANTENNA	66941	6682A-1	2-D10
PIPE, PEDAL	43061A	4300A-1	1-E11	PLATE, HOLDER-BRUSH	76612A	6760A-1	2-N10	PROTECTOR	107351	6000A-1	2-D9
PIPE, PRE AIR	40750A	4000A-2	1-M10	PLATE, HUB/DISC	33251B	3300A-1	1-E10		14746	1400A-1	1-E5
PIPE, PRESSURE	32520B	3240A-1	1-D10	PLATE, HUB/DISC	13186A	1300AA-1	1-J3		40814A	4000A-2	1-M10
PIPE, RETURN	32480	3240A-1	1-D10	PLATE, LOCATING	27302	2700AA-1	1-I9		40841C	4000A-2	1-M10
PIPE, RETURN (NO. 1)	32530B	3240A-1	1-D10	PLATE, LOCK	27302	2700A-1	1-G9		41692B	6720A-1	2-J10
PIPE, RETURN (NO. 2)	32540A	3240A-1	1-D10		42376	4200A-1	1-D11		50012A	5000A-1	2-D3
PIPE, RETURN (NO. 3)	32550B	3240A-1	1-D10		69762	6900A-3	2-M11		50013	5010A-1	2-F3
PIPE, SCREEN WASHER	67500C	6720A-1	2-J10	PLATE, MANUAL	19440	1950A-1	1-H7		50014	5000A-1	2-D3
		67511J	2-J10	PLATE, MAT SET	68696	6860A-1	2-I11		50014A	5010A-1	2-F3
PIPE, VACUUM	13650	1380A-1	1-N4	PLATE, MIDDLE	141181	1400A-1	1-E5		50016	5000A-1	2-D3
	13650	1380AA-1	1-C5		141181	1400AA-1	1-F5		50608C	5030A-1	2-G2
	19910	1910A-1	1-N6	PLATE, PRESSURE		6140B-2	2-E8		51051B	6682A-1	2-D10
	43830	4340AA-1	1-G11	PLATE, PRINT	55442A	5540A-1	2-H5		51403	5103A-1	2-K3
	43840C	4340A-1	1-F11	PLATE, RETAINER	19667	1940A-1	1-G7		51966	5180A-1	2-E4
	43840C	4340AA-1	1-G11		55214	5500A-1	2-C5		60721	6610A-1	2-F9
PIPE, VACUUM	43830	4340A-1	1-F11		55313	5500A-1	2-C5		66312A	6640A-1	2-N9
PIPE, VINYL	74030J	6330A-1	2-C9	PLATE, RETAINING	19503	1930A-1	1-E7		67056	6704A-1	2-I10
PISTON	26660	2610AA-1	1-F9		19503A	1930A-1	1-E7		67058	6704A-1	2-I10
	33651	3300A-1	1-E10		19506	1930A-1	1-E7		67059A	6704A-1	2-I10
PISTON, ACCUMULATOR	21271	1920A-2	1-D7		19613	1940A-1	1-G7	PROTECTOR 'A' (L), SIDE	50697D	5060A-1	2-I3
PISTON, BAND SERVO	19381	1920A-1	1-C7		19702	1950A-1	1-H7	PROTECTOR 'A' (R), SIDE	50692D	5060A-1	2-I3
	19381A	1920A-1	1-C7	PLATE, SET	32421	3210A-1	1-N9	PROTECTOR 'B' (L), SIDE	50686D	5060A-1	2-I3
PISTON, CLUTCH	19480	1930A-1	1-E7	PLATE, SET-FENDER	52151	5320A-1	2-H4	PROTECTOR 'B' (R), SIDE	50681D	5060A-1	2-I3
PISTON, LOW & REVERSE	19601	1940A-1	1-G7	PLATE, STABILIZER	34155	3410A-1	1-G10	PROTECTOR 'C' (L), SIDE	50682B	5060A-1	2-I3
PLATE	115011	1100A-1	1-G3	PLATE, THRUST	115041	1100A-1	1-G3	PROTECTOR 'C' (R), SIDE	50682A	5060A-1	2-I3
	32410	3210A-1	1-N9	PLATE, UPPER	64340	5570A-1	2-K5	PROTECTOR 'D' (L), SIDE	50688D	5060A-1	2-I3
	40170	4000A-1	1-L10	PLATE, WATER BAFFLE	15125	1500AA-1	1-I5	PROTECTOR 'D' (R), SIDE	50683D	5060A-1	2-I3
	43090	4300A-1	1-E11		15125	1500A-1	1-H5	PROTECTOR 'E' (L), SIDE	50689D	5060A-1	2-I3
	51356A	6900A-1	2-K11	PLATE, WINDOW	75011A	5540A-1	2-H5	PROTECTOR 'E' (R), SIDE	50684D	5060A-1	2-I3
	67562A	6630A-1	2-L9	PLATE, WIRE	76435B	6110A-1	2-I7	PROTECTOR (L), FRONT SIDE	50821D	5030A-1	2-G3
	76421A	6115A-1	2-J7	PLUG	142741	1040A-2	1-F3	PROTECTOR (R), FRONT SIDE	50811D	5030A-1	2-G3
	76434B	6110A-1	2-I7		26288C	2610A-1	1-E9	PROTECTOR NO. 2	40820	4000A-2	1-M10
	76438A	6110A-1	2-I7		61031B	6125B-1	2-L7	PROTECTOR, BRAKE PIPE	43605	4360A-1	1-H11
	76439A	6110A-1	2-I7	PLUG SET	23354	1360A-1	1-J4		43605	4360AA-1	1-I11
PLATE (L), BRAKE BACK		2610A-1	1-E9	PLUG, ACCUMULATOR	21273	1920A-2	1-D7	PROTECTOR, CORD	51516	5105A-1	2-L3
PLATE (L), CLOSING	54270A	5320A-1	2-H4	PLUG, BACK PLATE	26288	2610A-1	1-E9	PROTECTOR, COWL GRILL	50781	5180A-1	2-E4
PLATE (L), FRONT SCUFF		6840A-2	2-G11	PLUG, BLIND	10205A	1040A-1	1-E3	PROTECTOR, FUEL PUMP	45151	4500A-1	1-L11
PLATE (L), GLASS	63970A	6300A-1	2-M8		102061	1040A-1	1-E3	PROTECTOR, FUEL TANK	56970	5390A-1	2-M4
PLATE (L), SEAL	52946	5310A-1	2-G4		102071	1040A-1	1-F3	PROTECTOR, HOSE		6130B-2	2-N7
PLATE (R), BRAKE BACK	26280	2610A-1	1-E9		16241	1600A-1	1-L5	PROTECTOR, OIL HOSE	147161	1500AA-1	1-I5
PLATE (R), CLOSING	53270A	5320A-1	2-H4		23657	1360A-2	1-K4	PROTECTOR, PIPE	45715	4500A-1	1-L11
PLATE (R), FRONT SCUFF	68711	6840A-2	2-G11	PLUG, CORNER SEAL	113221	1110A-1	1-H3	PROTECTOR, REAR COMB.	51159A	5110A-1	2-M3
PLATE (R), GLASS	63960A	6300A-1	2-M8	PLUG, DRAIN	10404	1040A-1	1-E3	PROTECTOR, RR. FINISHER	50855A	5180A-1	2-E4
PLATE (RR., L), CLOSING	54222	5320A-1	2-H4		42046	4200A-1	1-D11	PROTECTOR, SUNROOF	62815A	6330A-1	2-C9
PLATE (RR., R), CLOSING	53222	5320A-1	2-H4		56241	5390A-1	2-M4	PROTECTOR, TUBE, NO. 18 DENSITY		6152B-1	2-K8
P-ATE ASSY., FRONT VALVE		6145B-2	2-H8		56241H	6125B-1	2-L7	PROTECTOR, WATER HOSE	13207	1320AA-1	1-C4
PLATE ASSY., REAR VALVE		6145B-2	2-H8		56242	5390A-1	2-M4		15543	1500A-1	1-H5
PLATE LOCK	62883	6330A-1	2-C9		56242L	5500A-2	2-D5	PROTECTOR, WIRE	58558B	6704A-1	2-I10
PLATE MODEL	69011	6930A-1	2-N11		56615	5390A-1	2-M4	PULLEY	15131	1500AA-1	1-I5
PLATE SET	50211A	5010A-1	2-F3	PLUG, JET	56615L	6704A-1	2-I10		15131	1500A-1	1-H5
PLATE, ABSORBER	133801	1310A-1	1-K3	PLUG, MAGNET DRAIN	103272	1030A-1	1-D3		24530	1830A-1	1-J6
	133801	1310AA-1	1-L3		17121	1700A-1	1-M5		32601	3240A-1	1-D10

ALPHABETICAL INDEX

PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION
PULLEY, AIR PUMP	237131	1371AA-1	1 - M 4	RELAY, CONTROL	18811A	6600A-1	2 - D 9	ROD & LINK SET	23480	1360A-2	1 - K 4
	237131	1371A-1	1 - L 4	RELAY, COOLING FAN	67740F	6630A-1	2 - L 9	ROD 'A'	51934	5103A-1	2 - K 3
PULLEY, CRANKSHAFT	11371	1100A-1	1 - G 3	RELAY, CUT-AIR CONTROL	67740Q	6630A-1	2 - L 9	ROD 'B'	51936	5103A-1	2 - K 3
PULLEY, IDLE	15940	1580A-1	1 - K 5	RELAY, FLASHER	67577	6630A-1	2 - L 9	ROD (L), INNER LOCK	5830A	5830A-1	2 - J 6
PUMP KIT	87993	6720A-1	2 - J10	RELAY, FUEL PUMP CUT	67740V	6600A-2	2 - E 9	ROD (R), INNER LOCK	58331	5830A-1	2 - J 6
PUMP SET, ACCEL.	23360B	1360A-1	1 - J 4	RELAY, HORN	66438	6630A-1	2 - L 9	ROD, CLUTCH PEDAL	41051	4300A-1	1 - E11
PUMP, AIR	13810	1371AA-1	1 - M 4	RELAY, LAMP CHECKER	67660	6630A-1	2 - L 9	ROD, CONNECTING	146511	1400AA-1	1 - F 5
	13810	1371A-1	1 - L 4	RELAY, MAIN	18811	6600A-1	2 - D 9		146511	1400A-1	1 - E 5
PUMP, FUEL	13350	1320AA-1	1 - C 4	REPAIR KIT	49720	4340A-1	1 - F11	ROD, DIAPHRAGM	19825	1920A-2	1 - D 7
	13350	1320A-1	1 - M 3		49720	4340AA-1	1 - G11	ROD, MOTOR	51933	5103A-1	2 - K 3
PUMP, METERING OIL	146001	1400AA-1	1 - F 5	REPAIR KIT, CARBURETOR	23410A	1359A-1	1 - F 4	ROD, PARKING	19450	1950A-1	1 - H 7
	146001	1400A-1	1 - E 5	RESISTOR	55610	5540A-1	2 - H 5	ROD, PUSH	41131	4300A-1	1 - E11
PUMP, OIL	14100	1400AA-1	1 - F 5		76433	6120A-1	2 - K 7	ROD, RELEASE	44032	4400A-1	1 - J11
	14100	1400A-1	1 - E 5	RESISTOR, VARIABLE	13790B	1320AA-1	1 - C 4	ROD, SHIFT	17431	1720A-1	1 - G 6
	19220	1910A-1	1 - N 6	REST, FOOT	43041	4300A-1	1 - E11	ROD, SHIFT (1ST & 2ND)	17410	1720A-1	1 - G 6
PUMP, VANE	32600	3240A-1	1 - D10	RESTRAINT, HEAD	88104A	5700A-3	2 - E 6	ROD, SHIFT (3RD & 4TH)	17420	1720A-1	1 - G 6
PUMP, WASHER	76672	6750A-1	2 - M10	RETAINER	19704	1950A-1	1 - H 7	ROD, TENSION	34131	3410A-1	1 - G10
PUMP, WATER	15010	1500AA-1	1 - I 5		28776	2800A-1	1 - K 9	ROD, TIE	3236A	3230A-1	1 - C10
	15010	1500A-1	1 - H 5		34137	3410A-1	1 - G10	ROTOR	23102A	1110A-1	1 - H 3
					34776B	3410A-1	1 - G10		24540	1830A-1	1 - J 6
	****			RETAINER, LOCK CYLINDER	58495A	0900A-1	2 - C 3		6760A	6760A-1	2 - N10
					62495	0900A-1	2 - C 3	ROTOR ASSY.		6140B-2	2 - E 8
RACE, BEARING	19639	1930A-2	1 - F 7	RETAINER, ROD	41640	4160A-1	1 - C11	ROTOR SET, OIL PUMP	238821	1400A-1	1 - E 5
RACE, BRG. HUB CLUTCH	21631	1930A-2	1 - F 7	RETAINER, SERVO	19391	1920A-1	1 - C 7		238821	1400AA-2	1 - G 5
RACE, BRG. PUMP COVER	19631	1930A-2	1 - F 7		21391	1920A-2	1 - D 7	ROTOR SET, SIGNAL	24316A	1820A-1	1 - F 6
RACE, BRG. RR. CLUTCH	19638	1930A-2	1 - F 7	RETAINER, SPRING	19487	1930A-1	1 - E 7	ROTOR, DISTRIBUTOR	24312	1820A-1	1 - F 6
RACE, INNER	17275	1710A-1	1 - C 6	RETAINER, STAB.	28776A	2810A-1	1 - L 9	ROTOR, FRONT	231021	1110A-1	1 - H 3
	17284	1710A-2	1 - D 6	RING	19676	1940A-1	1 - G 7	ROTOR, REAR	231121	1110A-1	1 - H 3
	19336	1920A-1	1 - C 7	RING SNAP	19534B	1930A-1	1 - E 7	RUBBER (L), ENGINE MTG.	39040	3900A-1	1 - K10
RACE, OUTER	19593	1940A-1	1 - G 7	RING, ILLUMINATION	66251	6610A-1	2 - F 9		39050	3900A-1	1 - K10
RACE, SHELL BEARING	19566	1930A-1	1 - E 7	RING, PRESSURE	27265	2700AA-1	1 - I 9	RUBBER (R), ENGINE MTG.	39040A	3900A-1	1 - K10
RADIATOR	15200	1500AA-1	1 - I 5	RING, RETAINING	17305A	1710A-2	1 - D 6	RUBBER, CUSHION	42459A	5180A-1	2 - E 4
	15200	1500A-1	1 - H 5		17626A	1710A-3	1 - E 6		43609	4360AA-1	1 - I11
RADIO	66900	6680A-1	2 - C10		66024	5100A-1	2 - J 3		52397	5230A-1	2 - F 4
RAIL (L), RAIN	71311	5340A-1	2 - J 4	RING, SEAL	19256A	1920A-1	1 - C 7		52451A	5103A-1	2 - K 3
RAIL (L), ROOF-INNER	71050	5340A-1	2 - J 4		19257A	1920A-1	1 - C 7		53771	5230A-1	2 - F 4
RAIL (L), ROOF-OUTER	71250	5340A-1	2 - J 4		19655	1940A-1	1 - G 7		62665B	5560A-1	2 - J 5
RAIL (R), RAIN	70311	5340A-1	2 - J 4	RING, SNAP		6140B-2	2 - E 8	RUBBER, DUST SEAL	53134B	6125B-1	2 - L 7
RAIL (R), ROOF-INNER	70050	5340A-1	2 - J 4			6145B-2	2 - H 8	RUBBER, HANGER	40061B	4006A-1	1 - L10
RAIL (R), ROOF-OUTER	70250	5340A-1	2 - J 4			1400A-1	1 - E 5	RUBBER, INSULATION	15312A	6682A-1	2 - D10
RECEIVER		6130B-2	2 - N 7			1400AA-1	1 - F 5	RUBBER, MOUNTING	13363N	1380AA-1	1 - C 5
RECEIVER-DRIER		6132B-1	2 - C 8			1710A-1	1 - C 6		45181A	1320AA-2	1 - D 4
RECTIFIER	24510	1830A-1	1 - J 6			19449	1950A-1	RUBBER, MTG.	42133	4500A-1	1 - L11
REFLECTOR, DOOR	51545	5170A-1	2 - D 4			19488	1930A-1		45132	4500A-1	1 - L11
REGULATOR	24520	1830A-1	1 - J 6			19509	1930A-1	RUBBER, PUMP MOUNTING	45130	4500A-1	1 - L11
REGULATOR (L), WINDOW		5830A-1	2 - J 6			19534	1930A-1	RUBBER, SEAL	16145	1600A-1	1 - L 5
REGULATOR (R), WINDOW	58560	5830A-1	2 - J 6			19567	1930A-2		42242	4200A-1	1 - D11
REGULATOR, FUEL PRESSURE	13280	1320AA-1	1 - C 4			19594	1940A-1		46083	4600A-1	1 - N11
REGULATOR, PRESSURE	142501	1400A-1	1 - E 5			19596	1940A-1		56791	5330A-1	2 - I 4
	142501	1400AA-1	1 - F 5			19598	1930A-2		56791B	5330A-1	2 - I 4
REINF. (L), HINGE	63876	6330A-1	2 - C 9			19607	1940A-1		66971A	5390A-1	2 - M 4
REINFORCEMENT	42299	4200A-1	1 - D11			19619	1940A-1	RUBBER, SEALING	13188	1300AA-1	1 - J 3
REINFORCEMENT (L), WHL. APRON	54285	5320A-1	2 - H 4			21567	1930A-2	RUBBER, SET	37192A	3700A-1	1 - H10
REINFORCEMENT (R), HINGE	62876	6330A-1	2 - C 9			76414	6115A-1	RUBBER, STOP	40108	4000A-1	1 - L10
REINFORCEMENT (R), WHL. APRON	53285	5320A-1	2 - H 4	RING, SQUARE	101711	1030A-1	1 - D 3	RUBBER, STOPPER	43029	4300A-1	1 - E11
REINFORCEMENT, BUMPER	50040	5000A-1	2 - D 3	RING, SQUARE-OUTER	10172A	1030A-1	1 - D 3		72941E	6630A-1	2 - L 9
	50230	5010A-1	2 - F 3	RING, SYNCHRONIZER	17265	1710A-1	1 - C 6	RUBBER, SUPPORT	5731B	5830A-1	2 - J 6
REINFORCEMENT, CONSOLE	60365B	5570A-1	2 - K 5	RING, SYNCHRONIZER	17245	1710A-1	1 - C 6	RUBBER, T-MISSION MTG.	39340	3900A-1	1 - K10
REINFORCEMENT, GLOVE TRAY	60440	5560A-1	2 - J 5	RING, THRUST WASHER	17652	1710A-4	1 - F 6				
RELAY		6130B-2	2 - N 7	RING, WHEEL	37180	3700A-1	1 - H10				
		6152B-1	2 - K 8	RIVET		13356A	1330AA-1				
	51939	5103A-1	2 - K 3			67056D	5010A-1	SACK KIT, BOLT		6142B-1	2 - F 8
RELAY, 3-POINT	67800	6630A-1	2 - L 9			67056F	5310A-1	SACK KIT, EVAPORATOR		6142B-2	2 - K 8
RELAY, AUTO ANTENNA	67740D	6630A-1	2 - L 9			41341	4140A-1	SCHRADER VALVE CAP		44187	4400A-1
RELAY, CHOKE & CHECK	67740C	6630A-1	2 - L 9	ROD		46021	4600A-1	SCREW	50950C	5180A-1	2 - E 4
RELAY, CIRCUIT OPEN	18821	6600A-1	2 - D 9			46571	4600A-1				

ALPHABETICAL INDEX

ALPHABETICAL INDEX

PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION	
SPACER	15145	1500AA-1	1 - I 5	SPRING COIL	28010A	2800A-1	1 - K 9	STRAP	15908	1580A-1	1 - K 5	
	17304	1710A-2	1 - D 6	SPRING CONICAL	27259B	2700AA-1	1 - I 9	STRAP 'A', CARGO ROOM	69570A	6900A-2	2 - L11	
	17304B	1710A-2	1 - D 6	SPRING CONSOLE LID	64513	5570A-1	2 - K 5	STRAP 'B', CARGO ROOM	69580	6900A-2	2 - L11	
	233131	1360A-1	1 - J 4	SPRING CORNER SEAL	113231	1110A-1	1 - H 3	STRAP, AIR PUMP	137141	1371A-1	1 - L 4	
	27401	2700AA-1	1 - I 9	SPRING DIAPHRAGM	17303C	1710A-2	1 - D 6		137141	1371AA-1	1 - M 4	
	27401	2700A-1	1 - G 9	SPRING FRT.-INNER	113511	1110A-1	1 - H 3	STRAP, ALTERNATOR	18361	1800A-1	1 - H 6	
	34135A	3410A-1	1 - G10	SPRING FRT.-OUTER	113531	1110A-1	1 - H 3	STRIKER	58570A	5830A-1	2 - J 6	
	34384	3400A-1	1 - F10	SPRING GLOVE LID	64086	5560A-1	2 - J 5		64101	5560A-1	2 - J 5	
	40073	4000A-1	1 - L10	SPRING GOVERNOR	19666	1940A-1	1 - G 7	STRIKER, LOCK	62361	6230A-1	2 - L 8	
	41084	4300A-1	1 - E11	SPRING HOLDING		6150B-2	2 - J 8	STRIKER, STORAGE BOX	84461A	6100A-1	2 - K11	
	43063	4300A-1	1 - E11	SPRING LID-LAMP	51401B	5103A-1	2 - K 3	STRUT, BAND	19361	1920A-1	1 - C 7	
	43221	4300A-1	1 - E11	SPRING PAWL RETURN	19733	1950A-1	1 - H 7	STUD	102081	1040A-1	1 - E 3	
	43608	4360AA-1	1 - I11	SPRING PELLET	148211	1500AA-1	1 - I 5		13173	1300AA-1	1 - J 3	
	45182A	1320AA-2	1 - D 4	SPRING PISTON	19606	1940A-1	1 - G 7		13456	1310A-1	1 - K 3	
	46084	4600A-1	1 - N11	SPRING, PISTON RETURN	19363A	1920A-1	1 - C 7		13456	1310AA-1	1 - L 3	
	67302	6730A-1	2 - K10		19486	1930A-1	1 - E 7		39382	3900A-1	1 - K10	
	67436	6750A-1	2 - M10	SPRING, PRESSURE		14116	1400A-1	1 - E 5	STUD, COVER	10619A	1040A-1	1 - E 3
	68861B	6300A-1	2 - M 8			14116	1400AA-1	1 - F 5	STUD, HOUSING	10219A	1040A-1	1 - E 3
SPACER 'C'	70449A	6300A-1	2 - M 8	SPRING, REAR-INNER	113611	1110A-1	1 - H 3	STUD, REACTOR	10105A	1030A-1	1 - D 3	
SPACER 'A'	70447A	6300A-1	2 - M 8	SPRING, REAR-OUTER	113631	1110A-1	1 - H 3	SUN VISOR (L)		6900A-2	2 - L11	
SPACER, BEARING	26155	2600A-1	1 - D 9	SPRING, RETURN	41081A	4300A-1	1 - E11	SUN VISOR (R)	69210	6900A-2	2 - L11	
SPACER, DOWEL	19734	1950A-1	1 - H 7		41308	4300A-1	1 - E11	SUNROOF	62820	6330A-1	2 - C 9	
SPACER, HINGE-LOWER	58245	5800A-1	2 - I 6		41619	4160A-1	1 - C11	SUPPORT, DRUM	21250	1920A-2	1 - D 7	
SPACER, HINGE-UPPER	58215	5800A-1	2 - I 6		44352	4400A-1	1 - J11	SUPPORT, FOOT	69910A	6850A-1	2 - I11	
SPACER, MOUNT RUBBER	45182	4500A-1	1 - I11		52672	5230A-1	2 - F 4	SUPPORTER	18111	1800A-1	1 - H 6	
SPACER, OIL PIPE	13331B	1910A-1	1 - N 6		52863	5230A-1	2 - F 4		18111H	1800A-1	1 - H 6	
SPACER, SPRING	55316	5500A-1	2 - C 5	SPRING, RETURN-LOWER	26342	2610A-1	1 - E 9		18114	1800A-1	1 - H 6	
SPACER, STAB.	28157	2810A-1	1 - L 9	SPRING, RETURN-UPPER	26341	2610A-1	1 - E 9	SUPPORTER, ACTUATOR	19701	1950A-1	1 - H 7	
SPACER, STABILIZER	34158	3410A-1	1 - G10	SPRING, SELECT	17465C	1720A-1	1 - G 6	SUPPORTER, FORK	16232A	1600A-1	1 - L 5	
SPEAKER, FRONT	66960C	6682A-1	2 - D10	SPRING, SIDE SEAL	113171	1110A-1	1 - H 3	SWITCH	1763C	6600A-1	2 - D 9	
SPEAKER, LOUD-REAR	66970	6682A-1	2 - D10	SPRING, SYNCHRONIZER KEY	17264	1710A-1	1 - C 6		24760	1840A-1	1 - K 6	
SPEEDOMETER	55471	5540A-1	2 - H 5		17724A	1710A-4	1 - F 6		76447	6115A-1	2 - J 7	
SPINDLE	46152	4600A-1	1 - N11	STABILIZER	28101	2810A-1	1 - L 9	SWITCH (L), CLUSTER	66180	6613A-1	2 - I 9	
SPINDLE, SELECT LOCK	17476	1720A-1	1 - G 6		34151	3410A-1	1 - G10	SWITCH (L), HANDLE	58490A	5830A-1	2 - J 6	
SPOILER, FRONT	50881	5310A-1	2 - G 4	STARTER	18400	1840A-1	1 - K 6	SWITCH (R), CLUSTER	66170A	6612A-1	2 - H 9	
SPOILER, REAR	51950	5180A-1	2 - E 4	STATOR	24501	1830A-1	1 - J 6	SWITCH, BACK-UP LAMP	17640	6600A-1	2 - D 9	
SPRING	114121	1100A-1	1 - G 3	STATOR ASSY.		6140B-2	2 - E 8	SWITCH, CLUSTER		6612A-1	2 - H 9	
	13087	1350A-1	1 - G 4	STAY (L), DAMPER	63610A	6230A-1	2 - L 8	SWITCH, CLUTCH	18660B	4300A-1	1 - E11	
	13087B	6640A-1	2 - N 9	STAY (L), FENDER	52250	5320A-1	2 - H 4	SWITCH, COMBINATION	66110	6611A-1	2 - G 9	
	142731	1040A-2	1 - F 3	STAY (L), MIRROR		6900A-2	2 - L11	SWITCH, CRUISE	66128	6611A-1	2 - G 9	
	17411	1720A-1	1 - G 6	STAY (R), DAMPER	62610A	6230A-1	2 - L 8	SWITCH, DOOR	66820	6620A-1	2 - K 9	
	17411A	1720A-1	1 - G 6	STAY (R), FENDER	52150	5320A-1	2 - H 4	SWITCH, FUEL LID OPENER	66700	6610A-1	2 - F 9	
	17477	1720A-1	1 - G 6	STAY (R), MIRROR	69120A	6900A-1	2 - K11	SWITCH, GLOVE TRAY	60690	5560A-1	2 - J 5	
	17483	1720A-1	1 - G 6		69120A	6900A-2	2 - L11	SWITCH, HEATER	61200	6100A-1	2 - H 7	
	19664	1940A-1	1 - G 7	STAY, DAMPER	62610	6230A-1	2 - L 8	SWITCH, IGNITION	66155	0900A-1	2 - C 3	
	32555	3230A-1	1 - C10	STAY, HOOD	52510	5230A-1	2 - F 4	SWITCH, INHIBITOR	19444	6600A-1	2 - D 9	
	41470	4140A-1	1 - N10	STEM, PISTON	19386	1920A-1	1 - C 7	SWITCH, KICK DOWN	18660	6620A-1	2 - K 9	
	44031	4400A-1	1 - J11	STEM, PISTON BAND	21386	1920A-2	1 - D 7	SWITCH, LEVEL	76673	6720A-1	2 - J10	
	46062	4600A-1	1 - N11	STOPPER	41682	4160A-1	1 - C11	SWITCH, LIGHT & DIMMER	66122A	6611A-1	2 - G 9	
	76135A	6110A-1	2 - I 7		44045	4400A-1	1 - J11	SWITCH, LOW PRESSURE, CUT-OFF		6132B-1	2 - C 8	
	76428A	6110A-1	2 - I 7	STOPPER (L), GLOVE LID		5560A-1	2 - J 5	SWITCH, MAIN	66340	6610A-1	2 - F 9	
SPRING (L), COIL		3400A-1	1 - F10	STOPPER (R), GLOVE LID	64036	5560A-1	2 - J 5	SWITCH, O/DRIVE CANCEL	66620D	5570A-2	2 - L 5	
SPRING (R), COIL	34011B	3400A-1	1 - F10	STOPPER SET	24712	1840A-1	1 - K 6	SWITCH, OIL PRESSURE	21291	6600A-2	2 - E 9	
SPRING LIFT, LID	42431	4200A-1	1 - D11	STOPPER, BUMPER	28320B	280CA-1	1 - K 9	SWITCH, PARKING LAMP	66840	6620A-1	2 - K 9	
SPRING SET	74308	1820A-1	1 - I 6	STOPPER, CONSOLE LID	64481A	5570A-2	2 - L 5	SWITCH, POWER WINDOW	66350	6615A-1	2 - J 9	
	24754	1840A-1	1 - K 6		64482B	5570A-2	2 - L 5	SWITCH, PRESSURE		6130B-2	2 - N 7	
SPRING SET, RETURN	23320	1360A-1	1 - J 4	STOPPER, FILLER LID	42408	4200A-1	1 - D11		32620A	3240A-1	1 - D10	
SPRING, ACCUMULATOR	21272	1920A-2	1 - D 7	STOPPER, RUBBER	69232	6900A-2	2 - L11	SWITCH, REMOTE MIRROR	66600A	6610A-1	2 - F 9	
SPRING, ADJUST	66016	5100A-1	2 - J 3	STOPPER, STEERING	34159A	3400A-1	1 - F10	SWITCH, ROOM LAMP	60690C	6230A-1	2 - L 8	
SPRING, APEX SEAL	113041	1110A-1	1 - H 3	STOPPER, T/MISSION MTG.	39388	3900A-1	1 - K10	SWITCH, STOP	67210	4300A-1	1 - E11	
SPRING, BALL PARK	19703	1950A-1	1 - H 7	STORAGE BOX	55231	6680A-1	2 - C10	SWITCH, STORAGE BOX	60690H	6900A-1	2 - K11	
SPRING, BOOT PANEL	55216A	5570A-1	2 - K 5		55991	6680A-1	2 - C10	SWITCH, TEMP	18880	6800A-1	2 - D 9	
SPRING, BRAKE BACK	26315	2610A-1	1 - E 9	STRAINER	23304	1360A-1	1 - J 4	SWITCH, THERMO	18890	6600A-1	2 - D 9	
SPRING, BRAKE SHOE	26345	2610A-1	1 - E 9	STRAINER, OIL	14240	1400A-1	1 - E 5		18890A	6600A-1	2 - D 9	
SPRING, BRUSH	24521	1830A-1	1 - J 6		14240	1400AA-1	1 - F 5	SWITCH, TRUNK LID OPENER	66630	6610A-1	2 - F 9	
	24752	1840A-1	1 - K 6		19815	1920A-1	1 - C 7	SWITCH, VACUUM	13150	1380A-1	1 - N 4	

ALPHABETICAL INDEX

PART NAME D-CODE SECTION LOCATION				PART NAME D-CODE SECTION LOCATION				PART NAME D-CODE SECTION LOCATION			
SWITCH, VACUUM				TUBE, AIR INLET				VALVE, PURGE			
SWITCH, WIPER				TUBE, DISCHARGE				209501 1380AA-2 1 - D 5			
*****				TUBE, EXTENSION W/ PROTECTOR				209501 1380A -1 1 - N 4			
TACHOMETER				TUBE, GOVERNOR				6145B -2 2 - H 8			
TANK				TUBE, LIQUID				1360A -1 1 - J 4			
TANK				TUBE, METERING OIL				23327 13540A 1350AA-1 1 - H 4			
TANK SET, RESERVE				TUBE, OIL LEVEL				13240 1380A -1 1 - N 4			
TANK, FUEL				TUBE, SUCTION				13240A 1380AA-1 1 - C 5			
TANK, STARTING FLUID				TUBE, VACUUM				13240A 1380A -1 1 - N 4			
TANK, SUB				TUBE, VACUUM CONTROL				13240B 1380AA-1 1 - C 5			
TANK, WASHER				TUBE, VENT				13240B 1380A -1 1 - N 4			
TANK, WASHER-RR. WIPER				TY-RAP				13240F 1380AA-1 1 - C 5			
TAPE, INSULATION (5/16 X 1 X 24)				UNIT ASSY., COOLING				131601 1380AA-1 1 - C 5			
TERMINAL				UNIT, CONTROL				76416 6110A -1 2 - I 7			
THERMO UNIT				UNIT, CPU				45160 4500A -1 1 - L11			
THERMOSTAT				UNIT, HEAT GAUGE				64810 5800A -1 2 - M 5			
THERMOSTAT SET				UNIT, WATER LEVEL SENSOR				64710 5800A -1 2 - M 5			
TIE ROD END, INNER				V-BELT				5840A -4 2 - F 7			
TIE ROD END, OUTER				VACUUM POWER ASSIST				68456 5840A -4 2 - F 7			
TIRE				VACUUM SET				68421A 5840A -3 2 - E 7			
TOOL SET				VALVE				*****			
TRANSMISSION				VALVE & PISTON				64240A 5570A -1 2 - K 5			
TRANSMISSION, ASSY COMPLETE				VALVE ASSY., DISCHARGE SERVICE				64230 5570A -1 2 - K 5			
TRANSMISSION, ASSY. COMPLETE				VALVE ASSY., SUCTION SERVICE				17314A 1720A -1 1 - G 6			
TRAY, ASH				VALVE PLATE ASSEMBLY				19433 1950A -1 1 - H 7			
TRAY, ASH HOUSING				VALVE SET, FLOAT				2366 1360A -1 1 - J 4			
TRAY, ASH-INNER				VALVE, A.A.				234081 1360A -1 1 - J 4			
TRAY, BATTERY				VALVE, AIR				27012 2700AA-1 1 - I 9			
TRAY, GLOVE				VALVE, AIR CONTROL				27012 2700A -1 1 - G 9			
TRIM (L), CTR. PILLAR				VALVE, AIR CONTROL SOLENOID				27252 2700A -1 1 - G 9			
TRIM (L), DOOR				VALVE, AIR SUPPLY				27252 2700AA-1 1 - I 9			
TRIM (L), FRONT SIDE				VALVE, ALTITUDE COMPENSATOR				32341 3230A -1 1 - C 10			
TRIM (L), FRT. PILLAR				VALVE, BY-PASS AIR CONTROL				34158B 2800A -1 1 - K 9			
TRIM (L), QUARTER				VALVE, CHECK				39383 3900A -1 1 - K 10			
TRIM (L), REAR PILLAR				VALVE, DISCHARGE REED				39385A 3900A -1 1 - K 10			
TRIM (L), SEAT BACK				VALVE, EXPANSION				39386 3900A -1 1 - K 10			
TRIM (L), SEAT CUSHION				VALVE, MANUAL				40166 4000A -1 1 - L 10			
TRIM (L), TIRE HOUSING				VALVE, P.B.				40815A 4000A -2 1 - M 10			
TRIM (L), TRUNK SIDE				VALVE, DISCHARGE REED				40815C 4000A -2 1 - M 10			
TRIM (R), CTR. PILLAR				VALVE, EXPANSION				45909 4360AA-1 1 - I 11			
TRIM (R), DOOR				VALVE, MANUAL				45909 4360A -1 1 - H 11			
TRIM (R), FRONT SIDE				VALVE, P.B.				62636A 6750A -1 2 - M 10			
TRIM (R), FRT. PILLAR				VALVE, DISCHARGE REED				68964B 5840A -4 2 - F 7			
TRIM (R), QUARTER				VALVE, DISCHARGE REED				76472 6110A -1 2 - I 7			
TRIM (R), REAR PILLAR				VALVE, DISCHARGE REED				76516 6115A -1 2 - J 7			
TRIM (R), REAR PILLAR				VALVE, DISCHARGE REED				76621A 6750A -1 2 - M 10			
TRIM (R), SEAT BACK				VALVE, DISCHARGE REED				76662 6740A -1 2 - L 10			
TRIM (R), SEAT CUSHION				VALVE, DISCHARGE REED				87132A 6750A -1 2 - M 10			
TRIM (R), TIRE HOUSING				VALVE, DISCHARGE REED				24726 1840A -1 1 - K 6			
TRIM (R), TRUNK SIDE				VALVE, DISCHARGE REED				17641 1710A -3 1 - E 6			
TRIM, (R), CTR. PILLAR				VALVE, DISCHARGE REED				17651 1710A -3 1 - E 6			
TRIM, (R), DOOR				VALVE, DISCHARGE REED				6140B -2 2 - E 8			
TRIM, (R), FRONT SIDE				VALVE, DISCHARGE REED				67375 6730A -1 2 - K 10			
TRIM, (R), FRT. PILLAR				VALVE, DISCHARGE REED				76606 6730A -1 2 - K 10			
TRIM, (R), QUARTER				VALVE, DISCHARGE REED				19641 1930A -2 1 - F 7			
TRIM, (R), REAR PILLAR				VALVE, DISCHARGE REED				18056 6701A -1 2 - F 10			
TRIM, (R), SEAT BACK				VALVE, DISCHARGE REED				19237 1920A -1 1 - C 7			
TRIM, (R), SEAT CUSHION				VALVE, DISCHARGE REED				19388 1920A -1 1 - C 7			
TRIM, (R), TIRE HOUSING				VALVE, DISCHARGE REED				19739 1920A -1 1 - C 7			
TRIM, (R), TRUNK SIDE				VALVE, DISCHARGE REED				76474A 6120A -1 2 - K 7			
TRIM, (R), CTR. PILLAR				VALVE, DISCHARGE REED				6140B -2 2 - E 8			
TRIM, TRUNK END				VALVE, DISCHARGE REED				67301 6730A -1 2 - K 10			
TUBE NO. 1, AIR				VALVE, DISCHARGE REED							
TUBE NO. 2, AIR				VALVE, DISCHARGE REED							
TUBE NO. 3, AIR				VALVE, DISCHARGE REED							
TUBE NO. 4, AIR				VALVE, DISCHARGE REED							
				VALVE, DISCHARGE REED							

ALPHABETICAL INDEX

PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION	PART NAME	D-CODE	SECTION	LOCATION
WASHER, SEAL	104551	1040A	-1 1 - E 3								
	21665	1910A	-1 1 - N 6								
WASHER, SPRING		6140B	-2 2 - E 8								
	138821	6140B	-2 2 - E 8								
	138821	1310A	-1 1 - K 3								
	138821	1310AA	-1 1 - L 3								
WASHER, TAB	33043	3300A	-1 1 - E10								
WASHER, THRUST	115071	1100A	-1 1 - G 3								
	17276	1710A	-1 1 - C 6								
	17313	1710A	-2 1 - D 6								
	17313B	1710A	-2 1 - D 6								
WASHER, THRUST LOCK	17631	1710A	-3 1 - E 6								
WASHER, TOOTHED	76663	6740A	-1 2 - L10								
WASHER, WAVY	17482	1720A	-1 1 - G 6								
WEATHERSTRIP (L) DOOR		5800A	-1 2 - I 6								
WEATHERSTRIP (R) DOOR	58760	5800A	-1 2 - I 6								
WEATHERSTRIP, HOOD	56787	5230A	-1 2 - F 4								
WEATHERSTRIP, INNER	58821A	5840A	-2 2 - D 7								
WEATHERSTRIP, OUTER	58811A	5840A	-2 2 - D 7								
WEATHERSTRIP, ROOF	62805	6330A	-1 2 - C 9								
WEATHERSTRIP, RR. WINDOW	63932	6300A	-1 2 - M 8								
WEIGHT, BALANCE	115111	1100A	-1 1 - G 3								
WEIGHT, BALANCE-ALUMINUM (ADHESIVE TYPE)		3700A	-2 1 - I10								
WEIGHT, BALANCE-ALUMINUM (ADHESIVE TYPE)	37600K	3700A	-2 1 - I10								
WEIGHT, BALANCING	37600E	3700A	-1 1 - H10								
WEIGHT, CONTROL	117501	1100A	-1 1 - G 3								
WEIGHT, PUMP	23301A	1360A	-1 1 - J 4								
WELT, SEAMING	58755	5800A	-1 2 - I 6								
	68911C	6800A	-1 2 - C11								
WHEEL	37600	3700A	-1 1 - H10								
WHEEL SET, ALUMINUM	37600S	3700A	-2 1 - I10								
WHEEL, SPROCKET	14143	1400AA	-1 1 - F 5								
	14143	1400A	-1 1 - E 5								
WIRE	13086	1350A	-1 1 - G 4								
WIRE HARNESS (UNDER DASH)		6152B	-1 2 - K 8								
WIRE HARNESS (UNDER HOOD)		6152B	-1 2 - K 8								
WIRE HARNESS, A/C		6130B	-2 2 - N 7								
WIRE HARNESS, PRESSURE SWITCH		6130B	-2 2 - N 7								
WIRE SET, HIGH TENSION	18150	1800A	-1 1 - H 6								
WIRE, ACC	66311	6640A	-1 2 - N 9								
WIRE, ACCELERATOR	41660	4160A	-1 1 - C11								
WIRE, CHOKE	60050	5500A	-2 2 - D 5								
WIRE, CONNECTOR		6152B	-1 2 - K 8								
WIRE, HEATER CONTROL	76521	6115A	-1 2 - J 7								
WIRE, HIGH TENSION	18110A	1800A	-1 1 - H 6								
	181201	1800A	-1 1 - H 6								
	181301	1800A	-1 1 - H 6								
	181401	1800A	-1 1 - H 6								
	181601	1800A	-1 1 - H 6								
	181701	1800A	-1 1 - H 6								
	181801	1800A	-1 1 - H 6								
WIRE, RADIO GROUND	67861	6682A	-1 2 - D10								
WIRE, RELEASE	88108T	5700A	-3 2 - E 6								
WIRE, RELEASE-HOOD	56710	5230A	-1 2 - F 4								
WIRING, BLOWER	76467A	6120A	-1 2 - K 7								
WIRING, ENGINE	18050	6701A	-1 2 - F10								
WRENCH, HUB NUT	68070	6870A	-1 2 - J11								

YOKE	24701	1840A	-1 1 - K 6								
YOKE, STATOR	76614	6760A	-1 2 - N10								


PART NUMBER INDEX

PART NUMBER INDEX

This index is listed in the following sequence.

GENERAL PARTS

EXAMPLE

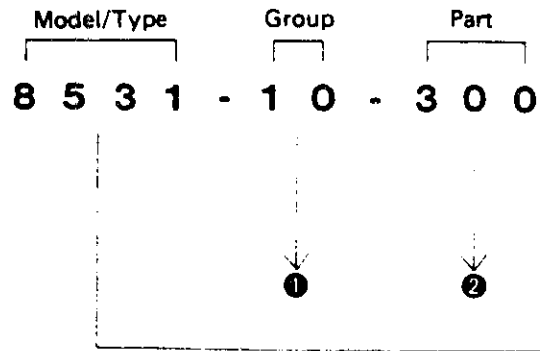

- ① first, in the sequence of group (5th & 6th digits)
- ② second, in the sequence of part (7th-9th digits)
- ③ third, in the sequence of model/type (1st-4th digits)

STANDARD PARTS

Standard Parts are listed in numerical sequence after General Parts.
(Note: Those parts which do not have D-Code are not listed in the index.)

PART NUMBER INDEX

PART NUMBER INDEX

ATION	PART NUMBER	SECTION	LOCATION	PART NUMBER	SECTION	LOCATION	PART NUMBER	SECTION	LOCATION	PART NUMBER	SECTION	LOCATION	PART NUMBER	SECTION	LOCATION
- H 6	FA58-88-181	5700A	-5	2 - G 6	8871-99-741C	5030A	-1	2 - G 3							
- D 9	FA58-88-181	5700A	-5	2 - G 6	8871-99-742C	5030A	-1	2 - G 3							
- D 9	FA58-88-181	5700A	-5	2 - G 6	8871-99-743B	5030A	-1	2 - G 3							
- D 9	FA58-88-181	5700A	-5	2 - G 6	8871-99-744B	5030A	-1	2 - G 3							
- D 9	FA59-88-181	5700A	-5	2 - G 6	8871-99-745A	5030A	-1	2 - G 3							
- H 6	FA59-88-181	5700A	-5	2 - G 6											
- D 9	FA59-88-181	5700A	-5	2 - G 6											
- H 5	FA59-88-181	5700A	-5	2 - G 6											
- D 9	FAB0-88-181	5700A	-5	2 - G 6											
- D 9	FAB0-88-181	5700A	-5	2 - G 6											
- D 9	FAB0-88-181	5700A	-5	2 - G 6											
- D 9	FAS8-88-392	5700A	-4	2 - F 6											
- D 9	FAS8-88-392	5700A	-4	2 - F 6											
- D 9	FAS8-88-392	5700A	-4	2 - F 6											
- D 9	FAS8-88-392	5700A	-4	2 - F 6											
- D 9	FAS8-88-831	5700A	-5	2 - G 6											
- D 9	FAS8-88-831	5700A	-5	2 - G 6											
- D 9	FAS8-88-831	5700A	-5	2 - G 6											
- D 9	FAS8-88-831	5700A	-5	2 - G 6											
- D 9	0000-88-UNLD-18	6930A	-1	2 - N11											
- D 9	BB62-89-334	2610A	-1	1 - E 9											
- H 6	FA01-89-376	3700A	-2	1 - I10											
- J 6	H115-89-376	3700A	-2	1 - I10											
- J 6	1482-89-621	6230A	-1	2 - L 8											
- J 6	8341-89-621	6230A	-1	2 - L 8											
- J 6	8341-89-621	6230A	-1	2 - L 8											
- J 6	8871-89-661	5100A	-1	2 - J 3											
- J 6	FA02-89-661	5100A	-1	2 - J 3											
- J 6	FA01-89-662	5105A	-1	2 - L 3											
- N 6	FA01-89-663	5105A	-1	2 - L 3											
- N 6	FA01-89-664	5110A	-1	2 - M 3											
- N 6	3874-89-665A	5120A	-1	2 - N 3											
- N 6	8871-89-666	5100A	-1	2 - J 3											
- H 7	FA02-89-666	5100A	-1	2 - J 3											
- N 6	FA01-89-667	5105A	-1	2 - L 3											
- N 6	FA01-89-668	5105A	-1	2 - L 3											
- N 6	FA01-89-669	5110A	-1	2 - M 3											
- N 6	FA01-89-673	5120A	-1	2 - N 3											
- N 6	FA01-89-678	5120A	-1	2 - N 3											
- N 6	N201-99-050	1000A	-1	1 - C 3											
- N 6	N304-99-050	1000A	-1	1 - C 3											
- N 6	FA54-99-063A	6640A	-1	2 - N 9											
- N 6	N231-99-100	1000A	-1	1 - C 3											
- N 6	N304-99-100A	1000A	-1	1 - C 3											
- C 7	N249-99-131	1359A	-1	1 - I 4											
- C 7	8553-99-152	1500A	-1	1 - H 5											
- N 6	8553-99-152	1500AA	-1	1 - I 5											
- C 7	N232-99-153A	1500A	-1	1 - H 5											
- C 7	N232-99-153A	1500AA	-1	1 - I 5											
- C 7	M505-99-178	1720A	-1	1 - G 6											
- C 7	BU01-99-190A	1960A	-1	1 - I 7											
- C 7	FA01-99-281A	2800A	-1	1 - K 9											
- C 7	FA24-99-281	2800A	-1	1 - K 9											
- C 7	8531-99-322A	3230A	-1	1 - C10											
- E 7	8021-99-324	3230A	-1	1 - C10											