

PART NUMBER INDEX

This index is listed in the following sequence.

GENERAL PARTS

EXAMPLE

- ① Model/Type
Third, in the sequence of model/types (1st-4th digits)
- ② Group
First, in the sequence of group (5th & 6th digits)
- ③ Part
Second, in the sequence of part (7th-9th digits)

INDEX DES NOMBRES DE PIÈCES

Cet index a été composé selon la séquence suivante.

PIÈCES GÉNÉRALES

EXEMPLE

- ① Modèle/type
Troisièmement, séquence du modèle/type (1er à 4ème chiffres)
- ② Groupe
Premièrement, séquence du groupe (5ème et 6ème chiffres)
- ③ Pièce
Deuxièmement, séquence de la pièce (7ème à 9ème chiffres)

NUMERO INDICE DE PIEZA

Este indice se ordena en la siguiente secuencia.

PIEZAS GENERALES

EJEMPLO

- ① Tipo de modelo
Tercero, en la secuencia de tipo de modelo (entre las cifras 1ro-4to lugar)
- ② Grupo
Primero, en la secuencia de grupo (las cifras en 5to y 6to lugar)
- ③ Pieza
Segundo, en la secuencia de pieza (entre las cifras 7mo-9no lugar)

TEILENUMMERN

Die Teilenummern setzen sich wie folgt zusammen.

ALLGEMEINE TEILE

BEISPIEL

- ① Modell/Typ
Angabe des Modells bzw. Typs (1. bis 4. Ziffer)
- ② Baugruppe
Angabe der Baugruppe (5. und 6. Ziffer)
- ③ Teil
Angabe des Teils (7. bis 9. Ziffer)

① ② ③
┌───┬───┬───┐
B A 0 1 6 0 3 5 0

STANDARD PARTS

Standard Parts are listed in numerical sequence after General Parts.
(Note: Those parts which do not have D-Code are not listed in the index.)

PIÈCES STANDARD

Les pièces standard sont énumérées selon une séquence numérique après les pièces générales.
(Remarque: Les pièces qui ne possèdent pas de code D ne sont pas mentionnées dans cet index.)

PIEZAS NORMALES

Las piezas normales se numeran secuencialmente después de las Piezas generales.
(Nota: Las piezas que no tienen un código D no están en el índice.)

STANDARDTEILE

Die Standardteile sind nach den allgemeinen Teilen mit fortlaufender Numerierung aufgeführt.
(Hinweis: Teile ohne D-Code sind nicht aufgeführt.)

PART NUMBER INDEX / INDEX DES NUMEROS DE PIÉCES / TEILENUMMER-INDEX / INDICE DE NUMERO DE PARTES

R502-17-283	1-K7	R507-17-540	1-H7	N326-18-X57	1-K8	N3A2-18-831A	3-H6	BV11-19-338	1-F11	BV65-19-5K5	1-M10	BV11-19-707	1-H11
Q839-17-287	1-K7	M501-17-543A	1-H7	F214-18-X60A	1-J8	N3A1-18-835	3-H6	BV11-19-341	1-H11	BV11-19-5K6	1-M10	BV65-19-710	1-K9
Q839-17-288	1-K7	R505-17-543	1-H7	NF01-18-X60A	1-L8	F202-18-840A	3-H6	BV11-19-347	1-19	BV65-19-5K6	1-N10	BV11-19-726	1-E9
R501-17-295	1-17	R502-17-550	1-H7	N326-18-X62A	1-J8	NF02-18-840	3-H6	BV65-19-360	1-K10	BV11-19-5K7	1-N10	BV11-19-732	1-H11
R501-17-299	1-K7	R502-17-551	1-H7	NF01-18-X65	1-L8	N370-18-840	3-H6	BV11-19-361	1-J9	BV11-19-5K8	1-N10	BV11-19-733	1-H11
R525-17-301	1-K7	R501-17-552	1-D8	N326-18-X65	1-J8	N391-18-840	1-L4	BV11-19-363	1-J9	BV11-19-5K9	1-N10	BV11-19-734	1-L11
R504-17-302A	1-K7	R526-17-570	1-H7	F214-18-X66	1-K8	N3A1-18-845	3-H6	BV65-19-363	1-J9	BV11-19-500A	1-N10	BV60-19-735	1-L9
Q821-17-303	1-K7	P501-17-575	1-H7	F214-18-X70	1-K8	N3A1-18-861A	3-H6	BV11-19-379	1-K10	BV45-19-500	1-N10	BV12-19-737	1-L9
R501-17-304	1-K7	R523-17-610	1-L7	NF01-18-X70	1-M8	E5A1-18-867	3-16	BV11-19-381	1-J9	BV11-19-503	1-N10	BV40-19-737	1-L9
Q839-17-305B	1-K7	R501-17-612	1-L7	N318-18-X71	1-K8	N3A3-18-881B	3-16	BV11-19-384	1-J9	BV11-19-504	1-N10	Q338-19-739	1-L9
R502-17-306A	1-17	R501-17-613	1-L7	N326-18-X71	1-K8	N3A4-18-881C	3-16	BV11-19-385	1-J9	BV11-19-505	1-N10	BV65-19-750A	1-C10
Q727-17-306	1-K7	R504-17-620	1-L7	NF01-18-X75	1-L8	N3C1-18-881A	3-16	BV11-19-386	1-J9	BV11-19-506	1-N10	BV65-19-765A	1-L11
R524-17-308	1-K7	R502-17-621A	1-M7	N315-18-X80	1-J8	N3C2-18-881A	3-16	BV11-19-387A	1-H11	BV11-19-507	1-N10	BV11-19-768	1-C10
M501-17-309	1-K7	3448-17-629	1-M7	N318-18-X80A	1-J8	N3A2-18-882	3-16	BV11-19-388	1-J9	BV11-19-508	1-N10	BV11-19-772	1-C10
R505-17-310B	1-L7	R501-17-631A	1-M7	N326-18-X87	1-K8	N3A2-18-883	3-16	BV11-19-389	1-J9	BV11-19-509A	1-C11	BV11-19-773	1-C10
Q821-17-313	1-L7	R501-17-632A	1-M7	NF01-18-X90	1-L8	N3A1-18-890	2-D6	BV11-19-391	1-J9	BV45-19-510	1-C11	BV45-19-774	1-C10
Q884-17-315	1-L7	R501-17-633A	1-M7	N326-18-X91	1-J8	N3A2-18-9E1B	3-16	Q358-19-395	1-J9	BV11-19-520	1-C11	BV11-19-776	1-C10
R502-17-316	1-L7	R501-17-634A	1-M7	NF01-18-X92	1-L8	N3A1-18-911	1-D5	BV11-19-397	1-K9	BV11-19-521	1-C11	BV11-19-791	1-C10
Q409-17-323	1-L7	R501-17-635	1-M7	N326-18-X92	1-H8	N3A2-18-911	1-D5	Q358-19-397	1-K9	BV11-19-522	1-C11	BV30-19-881	1-C10
Q884-17-325B	1-F7	R501-17-636	1-M7	N326-18-X93	1-K8	N3A1-18-921	3-16	BV11-19-481	1-K10	BV11-19-523	1-C11	BV66-19-805	1-C10
Q305-17-327	1-L7	R506-17-640	3-G6	E356-18-X95	1-J8	*****	*****	BV30-19-481	1-K10	BV45-19-540	1-C11	Q338-19-808	1-C10
R502-17-328	1-L7	R507-17-640	3-G6	NF01-18-X95	1-L8	*	*	BV11-19-482	1-K10	BV11-19-542	1-C11	BV40-19-810	1-D10
R526-17-350A	1-F7	R508-17-640	3-G6	N3A1-18-0FXA	3-C8	* 19-000	*	BV11-19-483	1-K10	BV66-19-805	1-C11	BV65-19-815	1-D10
R501-17-355A	1-F7	Q821-17-641B	1-M7	N3A2-18-0FXA	3-C8	*	*	BV11-19-484	1-F11	BV11-19-551	1-C11	BV11-19-818	1-D10
Q401-17-357A	1-D7	M502-17-651	1-M7	N3A1-18-0FY	3-C8	*****	*****	BV11-19-486	1-K10	BV65-19-551	1-F11	BV11-19-819	1-D10
R504-17-357	1-F7	M502-17-652	1-M7	N3A1-18-0SZ	3-C8			BV11-19-487	1-F11	BV65-19-560	1-C11	BV11-19-831	1-D10
R505-17-357	1-F7	M502-17-653	1-M7	N3A1-18-0SZF	3-C8					BV45-19-561A	1-C11	BV50-19-832	1-D10
R502-17-358	1-F7	M502-17-654	1-M7	N3A2-18-057	3-C8			BV30-19-487	1-L10	BV11-19-567	1-C11	BV11-19-833	1-D10
BV41-17-361	1-F11	M502-17-655	1-M7	N3A2-18-051H	3-C8			BV11-19-483	1-K9	BV46-19-570	1-D11		
R502-17-361A	1-L7	Q862-17-660C	1-H7	N3A3-18-052	3-C8			BV35-19-403	1-K9	BV45-19-571	1-D11	BV56-19-833	1-L9
M501-17-362	1-L7	M501-17-724	1-M7	N3A2-18-054	3-C8			BV40-19-403	1-F11	BV11-19-572A	1-C11	BV60-19-835	1-L9
R501-17-351	1-C8	R501-17-725B	1-M7	N3A1-18-180	1-E8			BV65-19-027	1-C9	BV11-19-573A	1-C11	BV65-19-836	1-L9
Q114-17-351	1-C8	R501-17-732	1-M7	N3A2-18-180	1-E8			3649-19-064A	1-C9	BV45-19-584	1-D11	BV11-19-837	1-D10
R502-17-371	1-G7	*****	*****	N3A3-18-100	1-E8			BV65-19-090H	1-C9	BV11-19-587	1-D11	Q338-19-837	1-L9
R501-17-372	1-G7	*	*	N3A2-18-105A	1-E8			QV65-19-100	1-C9	BV11-19-590	1-D11	BU27-19-858	1-F9
R501-17-373	1-G7	* 18-000	*	N3A1-18-110	1-E8			BV11-19-2D1	1-D9	BV11-19-593	1-D11	BV11-19-849	1-D10
Q810-17-381A	1-G7	*	*	N3A2-18-110	1-E8			BV11-19-2D2	1-D9	BV11-19-595	1-D11	BV11-19-853	1-D10
R501-17-385A	1-G7	*	*	N3A3-18-110	1-E8			BV11-19-2D3	1-D9	BV11-19-6C1	1-D11	BV65-19-870	1-L9
BV65-17-400	3-G6	*****	*****	N3A4-18-110	1-E8			BV11-19-2D4	1-D9	BV11-19-6C2	1-D11	BV45-19-880	1-L9
				N3X4-18-110	1-F8			BV11-19-2D5	1-D9	BV11-19-6C3	1-D11	BV65-19-890	1-L9
R505-17-400B	1-G7	N3A1-18-T09	1-E8	N3X5-18-110	1-F8	BV11-19-2D6	1-D9	BV45-19-443	1-H11	BV11-19-6C4	1-D11	BV65-19-9A0	1-E9
R522-17-402	1-C8	N3A2-18-T09	1-E8	N328-18-102	1-E8	BV11-19-2D7	1-D9	BV65-19-444A	3-16	BV11-19-6C5	1-D11	BV65-19-9C0	1-E9
R501-17-404B	1-C8	F885-18-T41	3-G6	N329-18-110	1-E8	BV65-19-210	1-D9	BV11-19-450	1-H11	BV11-19-6C6	1-D11	FU31-19-9D3A	1-E9
R505-17-406	1-D8	N3A1-18-T53	1-F8	N342-18-110	1-E8	BT40-19-216	1-D9	BV11-19-451	1-L10	BV11-19-6C7	1-D11	BV65-19-9E0	1-E9
R522-17-411	1-C8	N3A1-18-T54	1-F8	N343-18-110	1-F8	BV65-19-220	1-D9	BV11-19-453	1-L10	BV46-19-6F1	1-E11	BV65-19-9F0A	1-E9
Q103-17-411	1-D8	B3C7-18-W05	1-H8	N3A1-18-140	1-F8	BV60-19-221	1-D9	BV11-19-454A	1-N10	BV65-19-6H6	1-F11	BV65-19-920	1-E9
R502-17-412A	1-C8	N390-18-W11	1-H8	Q8F1-18-140A	1-F8	BV56-19-240	1-D9	BV11-19-456A	1-N10	BV65-19-601	1-F11	BV65-19-930	1-E9
R505-17-416	1-G7	RF71-18-W20	1-H8	N3A1-18-188A	1-F8	BV11-19-241	1-D9	BV11-19-457A	1-N10	BV11-19-603	1-D11	BV65-19-933A	1-E9
R506-17-416	1-G7	N3A1-18-W25	1-H8	N3A1-18-190A	1-F8	BV11-19-242	1-E9	BV11-19-458A	1-N10		1-F11	FU9E-19-933	1-F9
R522-17-421	1-C8	RF71-18-W26	1-H8	N3A1-18-211	3-G6	BV11-19-247	1-D9	BV11-19-459A	1-N10	BV66-19-613	1-G11	BV66-19-934	1-F9
R506-17-422	1-C8	PN16-18-W27	1-H8	N3A1-18-221	3-H6	BV11-19-255	1-D9	BV11-19-475	1-K9	BV45-19-609	1-F11	BV65-19-940	1-F9
R512-17-431A	1-C8	N3A1-18-W35	1-H8	N3A2-18-222	3-G6	BV50-19-255	1-C10	BV11-19-476	1-K9	BV56-19-610	1-G11	BV65-19-950A	1-F9
R512-17-431B	1-C8	N336-18-W36	1-H8	N3A1-18-251	1-F8	BV11-19-256	1-D9	BV11-19-480	1-L10	BV11-19-613	1-G11	BV65-19-968	1-F9
R513-17-432	1-C8	N3A1-18-W45	1-H8	N3A1-18-300A	1-H8	BV11-19-257	1-E9	BV11-19-484	1-L10	BV45-19-613	1-G11	BV65-19-981A	1-F9
R502-17-435	1-C8	N3A1-18-W50	1-H8	N3A1-18-360B	1-F8	BV11-19-381	1-K10	BV11-19-497	1-L10	BV65-19-613	1-G11		
Q221-17-441A	1-C8	N3A1-18-W51	1-H8	N3A1-18-381	1-F8	BV11-19-382	1-F11	BV11-19-498	1-L10	BV66-19-613	1-G11	*****	*****
1011-17-443	1-G7	N3A1-18-W60	1-H8	N3A2-18-381	1-F8	BV11-19-384	1-K10	BV11-19-499	1-L10	BV45-19-615	1-G11	* 20-000	*
	1-19	JE48-18-W70	1-H8	N3A1-18-397	1-F8	BV45-19-384	1-K10	BV45-19-499	1-L10	BV65-19-615	1-G11	*	*
	3-G6	B3C7-18-W77	1-H8	NF01-18-400B	1-L8	BV11-19-385A	1-K10	BV11-19-580A	1-L10	BV11-19-616	1-G11	*****	*****
R514-17-450A	1-G7	N3A1-18-W80	1-H8	N3A1-18-400	1-J8	BV11-19-386	1-K10	BV11-19-580B	1-L10	BV45-19-616	1-G11		
R504-17-455	1-G7	NF01-18-X80A	1-L8	JE15-18-51X	3-H6	BV11-19-3C2	1-I9	BV11-19-581	1-L10	BV65-19-616	1-G11	N3A2-20-180	1-L4
R522-17-461A	1-G7	N3A1-18-X80	1-J8	KL01-18-51X	3-H6	BV11-19-3C3	1-I9	BV11-19-581A	1-L10	BV11-19-617	1-G11	N3A1-20-190	1-D5
Q398-17-462A	1-C8	E356-18-X01	1-K8	AM15-18-520A	1-N8	BV11-19-3C7	1-I9	BV65-19-500A	1-L10	BV65-19-618	1-G11	N350-20-190	1-D5
R504-17-470A	1-D8	F210-18-X01	1-M8	N251-18-520B	1-N8	BV11-19-3C8	1-I9	BV11-19-501B	1-L10	BV11-19-620A	1-N10	N3A1-20-200	1-M4
M501-17-474	1-G7	NF01-18-X05	1-L8	N252-18-520E	1-N8	BV45-19-3F0	1-L10	BV11-19-502	1-M10	BV11-19-622	1-G11	N3A1-20-210	1-N4
Q303-17-474	1-D8	N326-18-X05	1-J8	FE50-18-522	1-N8	BV11-19-3F3	1-J9	BV11-19-503	1-M10	Q338-19-622	1-E11	N3A2-20-220	1-N4
M501-17-475	1-G7	G601-18-X06	1-M8	N3A1-18-591E	1-N8	BV11-19-3F4	1-I9	BV11-19-504	1-M10	BV65-19-623	1-G11	N3A1-20-250	1-N4
R501-17-476	1-H7	N3A1-18-X10	1-M8	N3A1-18-591F	1-N8	BV11-19-3J4	1-J9	BV11-19-505	1-G11	BV65-19-625	1-G11	N390-20-250	1-I4
M513-17-480A	1-D8	N3A1-18-X10	1-K8	N3A1-18-593B	1-N8	BV11-19-303	1-E11	BV11-19-506	1-M10	BV65-19-628	1-G11	N3A1-20-285	1-C4
R503-17-481	1-D8	N315-18-X10	1-K8	N3A2-18-593A	1-N8	BV55-19-304	1-E11	BV11-19-506	1-M10	BV11-19-651	1-N10	N3A3-20-300	1-K5
G5A0-17-482B	1-H7	NF01-18-X20	1-M8	N3A1-18-701	3-H6	BV11-19-305	1-K10	BV11-19-5J1	1-M10	BV45-19-651	1-N10	N3A1-20-305A	1-K5
M505-17-482	1-D8	N327-18-X20	1-K8	F285-18-741	1-J5	BV11-19-306	1-E11	BV11-19-5J3	1-M10	BV11-19-655	1-G11	N3A1-20-35X	1-I4
R502-17-495	1-H7	N318-18-X25	1-K8	N3A1-18-741	1-E5	BV11-19-307	1-E11	BV11-19-5J4	1-M10	BV11-19-669	1-C10	N3C1-20-339	1-K5
R507-17-510A	1-D8	N326-18-X30	1-J8	N3A7-18-741	1-J5	BV56-19-310A	1-I9	BV11-19-5K2					

PART NUMBER INDEX / INDEX DES NUMEROS DE PIECES / TEILENUMMER-INDEX / INDICE DE NUMERO DE PARTES

N3A4-20-341	1-K5	BV40-21-1A3	1-E10	MA10-22-510	2-D3	1243-26-671	2-G3	PA01-27-431	2-M3	FD15-32-380	2-K4	FD01-34-17X	2-F5
N3A5-20-341	1-K5	BV11-21-1A4	1-E10	MA10-22-520	2-D3	FA18-26-680	2-H3	*****	*****	FD15-32-411	2-I4	FD01-34-180C	2-F5
N318-20-341A	1-I5	BV11-21-1A5	1-E10	B462-26-694	2-D3	B462-26-694	2-H3	*****	*****	FD01-32-450	2-K4	FD01-34-19X	2-F5
N3A1-20-342	1-K5	BV56-21-1A5	1-F10	MA10-22-540	2-D3	FD01-26-699	2-H3	*	*	FD02-32-450	2-K4	FD15-34-200	2-C5
N3A2-20-342	1-K5	BV11-21-1A6	1-F10	MA10-22-550	2-D3	FD01-26-71X	2-G3	*	*	FD01-32-480F	2-L4	FD01-34-213	2-C5
N3A3-20-342	1-K5	BV11-21-1A7	1-F10	BV65-22-900	1-J11	FD01-26-731	2-H3	*	*	FD02-32-480	2-K4	8871-34-222	2-C5
N3A5-20-342	1-K5	BV11-21-1B1	1-F10	*****	*****	FD01-26-800	2-H3	*****	*****	FD01-32-490D	2-L4	*****	2-C6
N3A1-20-343A	1-L5	BV11-21-1B4	1-F10	*****	*****	FD01-26-810	2-H3	*****	*****	BR71-32-503	2-L4	*****	2-F4
N3A2-20-343B	1-L5	BV12-21-1B5	1-F10	*****	*****	H001-26-812	2-H3	FD15-28-011B	2-C4	FD15-32-600A	2-L4	FD15-34-250	2-F5
N3A3-20-343A	1-L5	BV11-21-1B7	1-F10	23-000	*	GJ25-26-812	2-H3	FD01-28-012	2-C5	GA2A-32-607	2-L4	FD15-34-300	2-C5
N3A4-20-343	1-L5	BV45-21-1B8	1-F10	*****	*****	FD01-26-851	2-H3	F801-28-091A	2-N3	EA03-32-610	2-L4	H260-34-313	2-D5
FE4J-20-344	1-L5	BV11-21-1B9	1-F10	*****	*****	D613-26-861	2-H3	FB15-28-110A	2-N3	FD01-32-611A	2-L4	FD15-34-350	2-D5
N3A1-20-344A	1-L5	BV11-21-1C1	1-F10	8871-23-180	1-N3	FD01-26-922	2-T7	FD01-28-114	2-E4	G211-32-618A	2-L4	FD01-34-420	2-D5
N3A2-20-344A	1-L5	BV40-21-1C1	1-F10	N236-23-356	1-D5	FD01-26-982	2-H3	FD01-28-116	2-F5	FD01-32-620B	2-L4	FD01-34-460B	2-D5
N3A3-20-344	1-L5	BV11-21-1C2	1-F10	HE19-23-610	1-N4	FD01-26-980A	2-H3	FD01-28-123A	2-C5	FD01-32-682E	2-L4	FD01-39-461	2-D5
N3A4-20-344	1-L5	BV11-21-1C3	1-F10	HE19-23-610	1-N4	FD01-26-992	2-I3	FD01-28-123A	2-C5	FD01-32-683A	2-L4	FD01-34-470A	2-D5
N3A1-20-345	1-L5	BV11-21-1C4	1-F10	*****	*****	FD01-26-990A	2-H3	FD15-28-151A	2-D4	FD01-32-81X	2-H4	FD01-34-471A	2-D5
N3A2-20-345A	1-L5	BV45-21-1C5	1-G10	*****	*****	FD01-26-990A	2-H3	*****	*****	FD01-32-810	2-H4	FD01-34-473	2-D5
N3A4-20-345	1-L5	BV11-21-1D1	1-G10	*****	*****	FD01-26-998	2-I3	*****	*****	FD15-32-850	2-I4	*****	2-F4
N3A1-20-346	1-L5	BV45-21-1D1	1-G10	24-000	*	*****	*****	FD01-28-155A	2-D4	FD01-32-980D	2-H4	FD01-34-480A	2-D5
N3A2-20-346	1-L5	BV11-21-1D2	1-G10	*****	*****	*****	*****	FD15-28-156A	2-D4	FD01-32-980E	2-H4	FD01-34-610A	2-F4
N3A3-20-346A	1-L5	BV40-21-119	1-G10	*****	*****	*****	*****	FD01-28-170B	2-D4	FD03-32-980D	2-H4	*****	2-F5
N3A1-20-348	1-L5	BV11-21-121	1-G10	8599-24-720	1-L8	*****	*****	FD01-28-180B	2-D4	FD03-32-980E	2-H4	FD15-34-700A	2-E5
N3A1-20-361A	1-L5	BV45-21-121	1-G10	8599-24-722	1-L8	0223-27-012	2-J3	FD01-28-2A0B	2-E4	*****	*****	FD16-34-700A	2-E5
N3A2-20-361A	1-M5	BV11-21-125	1-G10	8599-24-722	1-L8	0223-27-030	2-J3	FD01-28-300B	2-E4	*****	*****	FD01-34-701B	2-D5
N3A4-20-361	1-L5	BV11-21-148	1-G10	8599-24-743	1-M8	RD08-27-100C	2-J3	H266-28-312	2-E4	*****	*****	*****	2-F3
N3A1-20-362	1-M5	BV11-21-149	1-G10	8599-24-752	1-M8	R010-27-100B	2-J3	FD15-28-380A	2-C5	33-000	*	FD01-34-710A	2-E5
N3A2-20-362	1-M5	BV30-21-149	1-G10	*****	*****	P061-27-110	2-J3	*****	*****	*****	*****	FD01-34-711A	2-D5
N3A4-20-362	1-M5	BV40-21-155	1-G10	*****	*****	P062-27-110	2-J3	FD01-28-42Y	2-E4	*****	*****	FD01-34-800G	2-F5
N3A2-20-363	1-M5	BV40-21-156	1-G10	25-000	*	P044-27-120B	2-J3	FD01-28-450B	2-E4	*****	*****	FD01-34-800H	2-F5
N3A2-20-370A	1-M5	BV11-21-173	1-G10	*****	*****	P045-27-120A	2-J3	FD01-28-457	2-E4	FD15-33-021	2-M4	FD15-36-900A	2-E5
N3A1-20-371	1-M5	BV11-21-193	1-G10	*****	*****	R005-27-150	2-J3	FD01-28-458	2-E4	FD15-33-031	2-M4	FD16-34-900A	2-E5
N3A2-20-371A	1-M5	BV11-21-2A1	1-F9	*****	*****	R003-27-153	2-J3	FD01-26-460	2-E4	LA01-33-042B	2-E3	*****	*****
N3A1-20-372A	1-M5	BV11-21-2A2	1-F9	PF03-25-100	2-C3	R001-27-165	2-J3	FD01-28-461	2-F4	B455-33-062	2-F3	*****	*****
N3A1-20-380	1-M5	BV11-21-2A3	1-F9	PF04-25-100	2-C3	R004-27-171	2-K3	FD15-28-50X	2-F4	JOY9-33-062	2-M4	*****	*****
N3A1-20-41YA	1-M5	BV12-21-2A5	1-H10	P011-25-123	2-C3	R099-27-200E	2-K3	FD16-28-50X	2-F4	FD23-33-232	2-N4	*****	*****
N3A1-20-610C	1-M5	BV11-21-2A6	1-H10	1368-25-124	2-C3	R008-27-200B	2-K3	FD01-28-664	2-F4	FD01-33-25X	2-M4	*****	*****
J501-20-442	1-M5	BV11-21-2A7	1-H10	MA10-25-500	2-D3	R001-27-210	2-J3	FD15-28-700A	2-C4	FD01-33-261B	2-M4	*****	*****
N3A1-20-490	1-J4	BV11-21-2A8	1-H10	*****	*****	0604-27-220	2-J3	FD16-28-700A	2-C4	*****	*****	*****	*****
N3A1-20-500	2-D6	*****	*****	*****	*****	*****	*****	FD01-28-710A	2-F4	FD01-33-271B	2-M4	8002-37-160	2-G5
N3A2-20-500	2-D6	BV35-21-2A9	1-H10	*****	*****	8051-27-235	2-K3	FD01-28-8C0A	2-F4	FD01-33-61XA	2-M4	FD01-37-191B	2-G5
N3A1-20-600	2-D6	BV65-21-2K1	1-M9	26-000	*	8051-27-236	2-K3	FD15-28-80XB	2-F4	F805-33-651A	2-N4	FD01-37-790A	2-H5
N3A2-20-600	2-D6	BV11-21-216	1-H10	*****	*****	P043-27-238	2-K3	FD01-28-890A	2-F4	8001-33-691	2-I3	FD01-37-810	2-H5
N3A1-20-660	1-M5	BV40-21-241	1-H10	*****	*****	R005-27-320	2-K3	*****	*****	0233-33-691	2-I3	*****	*****
N3A1-20-661	1-M5	BV40-21-243	1-H10	0730-26-060	2-J3	M095-27-326A	2-K3	*****	*****	0259-33-691	2-G6	*****	*****
N250-20-725	1-E5	BV30-21-247	1-H10	GA2A-26-071	2-M4	0118-27-350A	2-K3	32-000	*	FB05-33-693	2-N4	39-000	*
N304-20-725	1-F5	BV56-21-249	1-H10	FD01-26-112	2-E3	R001-27-355	2-K3	*****	*****	0259-33-693	2-G6	*****	*****
N3A1-20-751	1-N4	BV11-21-252	1-H10	J001-26-114	2-E3	R001-27-356	2-K3	*****	*****	1316-33-693	2-I3	*****	*****
N3A3-20-752	1-E5	BV11-21-253	1-H10	FD01-26-121A	2-E3	R001-27-357	2-K3	*****	*****	FD01-33-696	2-N4	*****	*****
ESD5-20-810	1-F9	BV40-21-283	1-H10	FD01-26-122	2-E3	R001-27-358	2-K3	FD01-32-049	2-H4	FD01-33-697	2-N4	*****	*****
N3A2-20-840B	2-D6	BV11-21-381	1-M9	FD01-26-122	2-E3	R001-27-359	2-K3	FD03-32-049	2-H4	FD01-33-71XA	2-N4	8001-39-037B	2-D4
N3A1-20-850A	2-D6	BV65-21-381	1-M9	FD01-26-122	2-E3	R001-27-361	2-K3	FD13-33-049	2-H4	FD13-33-982	2-N4	*****	2-D5
N3C2-20-850	2-D6	BV11-21-382	1-M9	FD01-26-132	2-E3	R001-27-362	2-K3	FD01-32-090A	2-I4	FD13-33-980B	2-N4	*****	2-F4
N3B7-20-870B	2-D6	BV11-21-383	1-M9	FD01-26-132A	2-E3	R001-27-363	2-K3	B455-32-099	2-I4	FD13-33-992	2-N4	*****	2-F5
*****	*****	BV11-21-384	1-I10	*****	*****	R001-27-364	2-K3	FD15-32-100	2-I4	FD13-33-990B	2-N4	FD01-39-040C	2-C6
*****	*****	BV11-21-384	1-M9	FD01-26-133B	2-E3	R001-27-365	2-L3	FD01-32-11X	2-J6	*****	*****	FD01-39-050A	2-C6
*****	*****	BV45-21-387	1-M9	FD01-26-137	2-M4	R001-27-366	2-L3	FD15-32-110A	2-J6	*****	*****	FD01-39-065	2-C6
21-000	*	BV11-21-389	1-M9	FD01-26-137	2-M4	R001-27-367	2-L3	FD15-32-110B	2-J6	34-000	*	FD01-39-066	2-C6
*****	*****	BV40-21-3C1	1-M9	GASS-26-15X	2-M4	R001-27-368	2-L3	FD01-32-112	2-J6	*****	*****	FD01-39-718B	2-C6
*****	*****	BV65-21-3Z	1-J9	J001-26-151	2-E3	R001-27-369	2-L3	*****	*****	*****	*****	FD01-39-710C	2-C6
*****	*****	*****	*****	H001-26-205	2-G3	R001-27-371	2-L3	FD01-32-119	2-J6	*****	*****	FD01-39-723	2-C6
BV11-21-J03	1-D10	BV65-21-391	1-M9	FD01-26-220	2-F4	R001-27-372	2-L3	FD01-32-119A	2-J6	FD01-34-003	2-C5	FD01-39-730A	2-F4
BV11-21-J04	1-D10	BV12-21-671	1-H11	FD01-26-230	2-E4	R001-27-373	2-L3	FD01-32-120	2-J6	*****	*****	*****	*****
BV50-21-0J1	1-D10	BV11-21-672	1-H11	FD01-26-233	2-G3	R001-27-374	2-L3	FD01-32-123	2-J6	FD01-34-011	2-E5	*****	*****
BV11-21-0J5	1-E10	BV11-21-675	1-H11	FD04-26-241	2-E3	R001-27-375	2-L3	F110-32-123	2-J6	FD17-34-011	2-E5	40-000	*
BV11-21-0J7A	1-E10	BV65-21-5H1	3-I6	FD01-26-25X	2-E3	R001-27-401	2-L3	FD01-32-124	2-J6	H380-34-034	2-C5	*****	*****
BV56-21-0J7	1-E10	BV65-21-5H2	3-I6	FD01-26-250	2-E4	R001-27-402	2-L3	FD02-32-125A	2-J6	*****	*****	*****	*****
BV11-21-0J8	1-E10	BV01-21-677	1-F9	FD01-26-261	2-E3	R001-27-403	2-L3	FD01-32-132	2-J6	*****	*****	*****	*****
BV11-21-031	1-F9	BV65-21-678	1-E9	FD01-26-281	2-G3	R001-27-404	2-L3	FD01-32-133	2-J6	H380-34-034A	2-C5	*****	*****
BV11-21-032	1-L9	BV40-21-776	1-I10	FD01-26-285A	2-G3	R001-27-405	2-L3	FD01-32-168	2-I4	*****	*****	*****	*****
BV11-21-033	1-L9	BV11-21-782	1-I10	FDV1-26-43Z	2-G3	R001-27-406	2-L3	B001-32-169A	2-I4	LA01-34-038	2-M4	N3A1-40-D20F	2-D6
BV11-21-035	1-M9	BV11-21-784	1-I10	FDV1-26-46Z	2-G3	R001-27-407	2-L3	FD01-32-180	2-J6	B455-34-091	2-F4	FE20-40-061	2-E6
BV11-21-037	1-E10	BV11-21-786	1-I10	FD04-26-471	2-E3	R001-27-408	2-L3	FD01-32-186	2-J6	FD15-34-110A	2-C5	N3A1-40-061C	2-E6
BV11-21-092	1-E10	BV35-21-793	1-I10	GASS-26-471	2-M4	R001-27-409	2-L3	FD01-32-202	2-K4	FD15-34-110B	2-C5	N3A1-40-061D	2-E6
BV11-21-093	1-E10	*****	*****	FD01-26-61X	2-G3	R001-27-411	2-L3	FD01-32-230	2-L4	FD01-34-120	2-C5	N3A2-40-061A	2-E6
BV35-21-094	1-E10	*****	*****	B462-26-662	2-G3	R001-27-412	2-L3	FD01-32-240	2-K4	*****	*****	N3A1-40-080A	2-E6
BV11-21-095	1-E10	*****	*****	B462-26-663	2-G3	R001-27-413	2-M3	FD01-32-260A	2-K4	FD01-34-151A	2-F5	N3A2-40-080	2-E6
BV56-21-095	1-E10	22-000	*	B462-26-664	2-G3	R001-27-414	2-M3	8AB2-32-280	2-K4	FD01-34-155	2-F5	N3C1-40-100A	2-E6
BV11-21-096	1-E10	*****	*****	FD01-26-668	2-G3	R001-							

PART NUMBER INDEX / INDEX DES NUMEROS DE PIECES / TEILENUMMER-INDEX / INDICE DE NUMERO DE PARTES

FD01-68-877 02 3-J9	FD01-69-852 3-N5	FD01-70-700B 2-J13	H001-76-714 3-H5	FD05-88-161 18 2-J16	99650-58060 2-H5
GJ21-68-885B00 3-F9	FD01-69-858 3-C6	FD01-70-750C 2-F13	H001-76-717 3-H5	FD05-88-161 33 2-J16	99651-94060 2-H5
3-J5	FD01-69-859 3-C6	*****	H001-76-725 3-C5	FD01-88-162 2-J16	99655-90005 2-G5
3-J9	FD01-69-861 3-N5	*****	3-E5	FD01-88-174 2-F16	99655-90010 2-G5
UB54-68-885 00 3-C10	FD01-69-864 3-N5	* 71-000 *	R001-76-734 3-C5	FD01-88-180 02 2-J16	99655-90015 2-G5
UB54-68-885 18 3-C10	FD01-69-865 3-N5	* * * *	3-E5	FD03-88-180 02 2-J16	99655-90020 2-G5
UB54-68-885 82 3-C10	EA05-69-871 3-C6	*****	*****	FD05-88-180 02 2-J16	99655-90025 2-G5
FD01-68-89X 82 3-K9	EA05-69-872 3-C6	*****	*****	FD05-88-180 17 2-J16	99655-90030 2-G5
FD09-68-89X 02 3-K9	EA05-69-873 3-N5	*****	*****	FD05-88-180 18 2-J16	99655-90035 2-G5
FD01-68-911A02 3-F3	F114-69-890A 3-D6	FD01-71-020B 2-G13	* 88-000 *	FD05-88-180 33 2-K16	99655-90040 2-G5
FD01-68-912A02 3-F3	F114-69-893 3-C6	FD01-71-030D 2-G13	*****	FD05-88-180 34 2-K16	99655-90045 2-G5
FD01-68-930A02 3-K5	FB03-69-896A 3-D6	FD01-71-050 2-G13	*****	FD01-88-181 02 2-K16	99655-90050 2-G5
FD01-68-940B02 3-J5	GA28-69-897 3-D6	FD01-71-180A 2-G13	*****	FD03-88-181 02 2-K16	99655-90055 2-H5
FD01-68-950B02 3-J5	G034-69-897 3-D6	FD01-71-1D0 2-G13	FD01-88-005 2-G16	FD05-88-181 02 2-K16	99655-90060 2-H5
FD01-68-960C02 3-K5	FD01-69-9H1 3-C6	FD01-71-1X1 2-H13	FD01-88-006 2-G16	FD05-88-181 17 2-K16	99700-5080 2-E12
*****	FD01-69-9H2 3-C6	FD01-71-11Y 2-G13	FD01-88-062 2-F16	FD05-88-181 18 2-K16	99700-7180 2-K11
* * *	FD01-69-9H3 3-D6	FD15-71-11Z 2-G13	FD01-88-072 2-F16	FD05-88-181 33 2-K16	99701-3270 2-K11
* 69-000 *	FD01-69-9H4 3-D6	FDY1-71-110A 2-G13	F100-88-073 2-F16	FD05-88-181 34 2-K16	99701-4278 2-K11
*****	FD04-69-920 3-D6	FD01-71-119 2-H13	FD01-88-161 02 2-G16	FD01-88-6D0 02 2-K16	99701-6030 2-E15
* * *	FD01-69-921 3-D6	FD01-71-12XB 2-G13	FD01-88-161 17 2-G16	99701-6040 2-M11	
UB40-69-C61 3-H10	FDD4-69-922 3-E6	FD01-71-120B 2-G13	FD01-88-161 33 2-G16	FD03-88-6D0 02 2-K16	99701-6049 2-J11
FA03-69-C72A 3-I10	FD01-69-923 3-D6	FD01-71-131A 2-F13	FD01-88-165 02 2-F16	FD05-88-6D0 02 2-K16	99701-6050 2-D12
FD01-69-D21 3-H10	EA05-69-924 3-C6	FD01-71-15XD 2-H13	FD02-88-165 17 2-F16	FD05-88-6D0 17 2-K16	2-F12
FD01-69-D21A 3-H10	F100-69-926A 3-D6	FD01-71-15DE 2-G13	FD01-88-165 33 2-F16	FD05-88-6D0 18 2-K16	2-J11
B001-69-D51 3-H10	KA02-69-925 3-D6	FDY1-71-200 2-G13	FD01-88-1H5 02 2-G16	FD05-88-6D0 33 2-K16	99703-4350 2-G11
KA10-69-D61A 3-H10	GA28-69-927 3-D6	FD01-71-230A 2-G13	FD01-88-1H5 17 2-G16	FD05-88-6D0 34 2-K16	99703-8605 2-N10
FD01-69-D14 3-H10	FD01-69-929 3-D6	FDY1-71-24X 2-H13	FD01-88-1H5 33 2-G16	FD01-88-6D2 02 2-K16	99705-1115 3-E8
N3C1-69-036A 3-I10	FD01-69-970A02 3-C6	FDY1-71-24X 2-H13	FD01-88-1H5 02 2-F16	FD05-88-6D2 02 2-L16	99705-1130 3-L7
N3C2-69-036A 3-I10	FD01-69-970B02 2-F12	FD01-71-24Y 2-E13	FD01-88-1H5 17 2-F16	FD05-88-6D2 02 2-L16	3-E8
N3C3-69-036 3-I10	FD03-69-970C02 2-F12	FD01-71-253A 2-E13	FD01-88-1H5 33 2-F16	FD05-88-6D2 17 2-L16	99963-6930 3-L7
N3C4-69-036 3-I10	FD03-69-970D02 2-F12	FD01-71-272B 2-H13	FD01-88-101 2-G16	FD05-88-6D2 18 2-L16	99963-6940 1-17
N3C4-69-036A 3-I10	EA01-69-973 2-F12	FD01-71-274A 2-H13	FD01-88-102 2-G16	FD05-88-6D2 33 2-L16	99963-6950 1-17
NSA1-69-044B 3-I10	EA05-69-973 2-F12	FG01-71-311A 2-H13	FD11-88-103 2-G16	FD05-88-6D2 34 2-L16	99963-6960 1-17
FA01-69-064A 3-I10	FD02-69-973 2-F12	FDY1-71-400B 2-H13	FD01-88-104 2-G16	B456-88-815 2-L16	99963-6960 1-17
HG30-69-065 3-I10	FD05-69-973 2-F12	FD01-71-440B 2-H13	FD15-88-110 02 2-G16	B240-88-818 2-L16	99963-6970 1-17
NA01-69-068A 3-I10	FD01-69-98X 3-F9	FD01-71-490B 2-H13	FD18-88-110 02 2-G16	EA01-88-818 2-L16	*****
FD03-69-074A 3-H10	FD01-69-981A02 3-N5	FD01-71-651A 2-G13	FD18-88-110 17 2-G16	*****	* * *
FD04-69-074 3-H10	F114-69-983 3-C6	*****	FD18-88-110 33 2-H16	* 90-000 *	* STANDARD PARTS *
HG30-69-119 3-L5	F114-69-984 3-C6	* * *	FD18-88-110 34 2-H16	* * *	*****
FD01-69-123 3-F10	*****	* 75-000 *	F110-88-110 02 2-H16	*****	99381-1400 1-H6
FD01-69-183 3-F10	* * *	*****	FD01-88-111 02 2-H16	90620-17636 2-G5	
HG31-69-220C 3-F10	* 70-000 *	*****	FD03-88-111 02 2-H16	90622-65726 2-G5	
FD01-69-240 MB 3-E10	* * *	3625-75-139 2-G15	FD05-88-111 02 2-H16	90623-25726 2-G5	
FD01-69-240 NU 3-E10	*****	*****	FD15-88-111 02 2-H16	90623-35726 2-G5	
FD01-69-240 PT 3-E10	FD01-70-020B 2-E13	*****	FD18-88-111 02 2-H16	90692-55726 2-H5	
FD01-69-240 PZ 3-E10	FD01-70-030D 2-E13	* 76-000 *	FD18-88-111 17 2-H16	90701-7270 2-G11	
FD01-69-240 3L 3-E10	FD01-70-050 2-E13	*****	FD18-88-111 18 2-H16	*****	
NS31-69-240 3-F10	FD01-70-1X1 2-F13	0208-76-071 3-C10	FD18-88-111 33 2-H16	* 99-000 *	
3-L5	FD01-70-11Y 2-E13	FD01-76-120 MB 3-E10	FD18-88-111 34 2-H16	*****	
FD01-69-242 MB 3-F10	FD15-70-11Z 2-E13	FD01-76-120 NU 3-E10	FD15-88-112 2-H16	99236-0571 1-J3	
FD01-69-242 NU 3-F10	FDY1-70-110A 2-E13	FD01-76-120 PT 3-E10	FD01-88-124 2-F16	99324-07200 1-M6	
FD01-69-242 PZ 3-F10	FD01-70-119 2-F13	FD01-76-120 PZ 3-E10	FD15-88-130 02 2-H16	99324-07400 1-M6	
FD01-69-242 3L 3-F10	FD01-70-120B 2-E13	FD01-76-120 3L 3-E10	FD18-88-130 02 2-H16	99328-04010 3-D9	
GA5R-69-261 02 3-F10	FD01-70-120B 2-E13	FD01-76-120 NU 3-E10	FD18-88-130 17 2-K16	99340-05540 1-G9	
GA5R-69-263 02 3-G10	FD01-70-130A 2-F13	FD01-76-180 MB 3-E10	FD18-88-130 18 2-I16	99351-04999 1-E6	
FD01-69-270C02 3-F10	FD01-70-15XC 2-F13	FD01-76-180 NU 3-E10	FD18-88-130 33 2-I16	99351-06999 1-H5	
FD03-69-270C02 3-F10	FD01-70-150D 2-E13	FD01-76-180 PT 3-E10	FD19-88-130 02 2-I16	99351-08999 2-H6	
FD01-69-276A 2-D11	FDY1-70-200 2-E13	FD01-76-180 3L 3-E10	FD15-88-131 02 2-I16	99359-0815 1-J4	
GA5R-69-277 02 3-G10	FD01-70-230A 2-E13	FD01-76-190 2-C10	FD18-88-131 17 2-I16	99359-0815M 2-G8	
FD15-69-320 02 3-F10	FDY1-70-24X 2-F13	FD01-76-201 2-C10	FD18-88-131 18 2-I16	99359-0819 2-G8	
FD18-69-320 02 3-F10	FD01-70-24Z 2-E13	FD01-76-202 2-D10	FD18-88-131 33 2-I16	99541-00603 2-H7	
B316-69-361 3-M3	FD01-70-252A 2-F13	FD01-76-208 2-C10	FD18-88-131 34 2-I16	99541-01105 1-L3	
FD01-69-44X 00 3-K5	FD01-70-252B 2-F13	FD01-76-210B 2-C10	FD19-88-132 02 2-I16	99541-01201 1-T9	
FD01-69-47YA 3-D10	FD01-70-274A 2-F13	FD15-76-250 2-C10	FD01-88-132 2-I16	99541-01252 1-K4	
FD01-69-760C02 3-L9	FD01-70-274B 2-F13	FD01-76-260 2-C10	FD01-88-135 2-I16	99541-01401 2-L4	
FD01-69-768A02 3-L9	FD01-70-311A 2-F13	FD01-76-290 2-C10	FD01-88-135 2-I16	99541-01601 1-D6	
FD01-69-771A02 3-L9	FDY1-70-400B 2-H13	FD02-76-290 2-C10	FD03-88-140 02 2-I16	99541-01601 1-L9	
FD01-69-781 02 3-L9	FD01-70-440B 2-F13	B093-76-605 3-M8	FD05-88-140 02 2-I16	99606-23030 1-M6	
FD01-69-810B 3-N5	FD01-70-490B 2-F13	B002-76-619A 3-F9	FD05-88-140 02 2-I16	99611-1500 2-G6	
F114-69-810B 3-N5	0187-70-491 2-C7	B043-76-619A 3-M8	FD05-88-140 17 2-J16	99636-04130 2-G5	
FD01-69-825A 3-D6	FD04-70-600B 2-I13	B093-76-641 3-C9	FD05-88-140 18 2-J16	99650-28060 2-H5	
F114-69-825 3-D6	FD01-70-601A 2-J13	B094-76-662 3-M8	FD05-88-140 33 2-J16		
FD01-69-840 3-N5	FD01-70-610A 2-D13	B094-76-663 3-M8	FD01-88-140 34 2-J16		
FD01-69-842 3-D6	FD01-70-640 2-I13	8532-76-672 2-J10	FD01-88-161 02 2-J16		
FD01-69-845 3-N5	FD01-70-651A 2-E13	S084-76-677 3-J8	FD03-88-161 02 2-J16		
FD01-69-846 3-C6	FD01-70-661 2-I13	HA14-76-707 3-H5	FD05-88-161 02 2-J16		
FD02-69-846 3-C6	FD01-70-700B 2-I13		FD05-88-161 17 2-J16		
FD01-69-851 3-N5					

ALPHABETICAL INDEX *** ENGLISH ***

***** * A * *****	BEARING, NEEDLE-----	1-K7 1-K10	BOLT, COMPRESSOR-AIR CON.-	3-D5 3-N4	BRACKET(R), LAMP-----	2-F13 3-I9	BULB-----	2-N11 3-J6
ACTUATOR, A. C. C.-----	BEARING, PINION-----	1-L7 2-J3	BOLT, CONNECTOR-----	1-D6 1-H6	BRACKET(R), QUARTER TRIM-	3-J10 2-H10	BULB & SOCKET-----	2-K15 2-D12
ACTUATOR, EXHAUST VALVE--	BEARING, ROLLER-----	1-I7 2-E3		2-G6 2-G7	BRACKET(R), BUMPER-----	3-M10 2-F13	BULB, INTERIOR MIRROR--	2-F12 2-J11
ACTUATOR, MODE-HEATER UNIT	BEARING, WHEEL-----	2-E3 1-N6	BOLT, CONTROL VALVE-----	2-I7 2-L7	BRACKET(R), SPOILER-----	3-I9 3-D7	BULB, MODE CONTROL-----	3-E4 3-D7
ACTUATOR, RECYCLE & FRESH-	BELT, V-----	2-M16 2-M16		1-D10 1-L9	BRACKET(R), TRIM-QTR PANEL	2-F13 3-I9	BULB, B'WARNING UNIT----	2-E15 2-C5
ACTUATOR, TEMP-----	BELT, A'(L), FRT SEAT----	2-M16 2-M16	BOLT, DAMPER-REAR-----	2-M4 2-L6	BRACKET(R), TRUNK SIDE----	3-I9 3-M6	BUMPER, BOUND-----	2-C5 2-H10
ADAPTER, SUN VISOR-----	BELT, A'(R), FRT SEAT----	2-M16 1-N6	BOLT, DUST COVER-----	2-M4 1-F8	BRACKET, A. C. C. BOX-----	3-M6 1-C4	BUMPER, REAR-----	2-H10 2-H10
ADJUSTER NO. 3-----	BELT, B'(L), FRT SEAT----	2-M16 2-D11	BOLT, FUEL INJECTION PUMP-	1-D4 1-K4	BRACKET, ACCEL CABLE-----	1-C4 1-M5	BUSH, REAR LOWER-----	1-C7 1-C8
ADJUSTER NO. 4-----	BELT, B'(R), FRT SEAT----	2-D11 3-M9	BOLT, HUB-----	2-M4 2-M4	BRACKET, AIR BAG-----	3-C3 1-M4	BUSH, REAR-----	1-C8 1-I11
ADJUSTER, NO. 1-----	BEZEL(L), LAMP-----	2-D11 3-K8	BOLT, INST. PANEL-----	3-E4 3-M6	BRACKET, AIR CLEANER-----	1-M4 1-N4	BUSH SET-----	2-D7 2-M6
ADJUSTER, NO. 2-----	BEZEL(R), LAMP-----	2-D11 3-K8		3-M6 2-C14	BRACKET, CENTER-----	2-G7 2-G15	BUSH, CHANGE-----	1-L8 2-F4
ALTERNATOR-----	BEZEL, OPENER LEVER-----	3-M9 3-K8	BOLT, INSULATOR-----	1-F4 2-G6	BRACKET, CENTER PANEL-----	2-G15 2-G15	BUSH, DAMPER-----	2-F4 2-M6
AMP, POWER-FRONT-----	BLADE(L), WIPER-FRONT----	3-K8 3-N8	BOLT, INSULATOR, FRT HEAT-	2-G6 2-E16	BRACKET, COMPRESSOR-----	1-N6 3-I4	BUSH, ELBOW JOINT-----	2-F4 2-H7
ANTENNA, RADIO-----	BLADE(R), WIPER-FRONT----	3-K8 3-N8	BOLT, JOINT-----	2-E16 3-E5	BRACKET, CONDENSER-----	3-I4 3-L4	BUSH, HINGE-----	2-G16 3-E9
ANTILOCK BRAKE-----	BLADE, WIPER-----	3-N8 3-K8	BOLT, LINK-----	3-E5 2-E11	BRACKET, CONTROL UNIT-----	3-L4 3-I6	BUSH, INNER-----	3-E9 3-C9
ARM NO. 1, LINK-----	BLOCK, FUSE-----	3-E8 3-L8	BOLT, LOCK-----	2-E11 2-M12	BRACKET, DIFF. MOUNTING--	2-F4 1-E8	BUSH, OUTER-----	3-C9 2-E4
ARM NO. 2, LINK-----	BLOCK, MAIN FUSE-----	3-L8 3-N9	BOLT, LOCKET-----	2-M12 2-M13	BRACKET, DUCT SPEAKER-----	3-H7 3-C8	BUSH, FILLER BALL-----	2-E4 2-D5
ARM(L), LOWER-----	BLOWER UNIT-----	3-N9 3-N9	BOLT, MAGNET CLUTCH-----	2-M13 1-L9	BRACKET, ENGINE HARNESS--	3-C8 2-D4	BUSH, RUBBER-LWR ARM----	2-D5 2-E5
ARM(L), UPPER-----	BOARD(C), TRUNK-----	3-N9 3-N9	BOLT, MOTOR-RETRACT H/LAMP	1-L9 1-J3	BRACKET, EX MANIFOLD-----	2-D4 2-L13	BUSH, STABILIZER-RR-----	2-D4 2-F4
ARM(R), LOWER-----	BOARD, PARTITION-----	3-N9 3-N9	BOLT, MOUNT-MEMBER-----	1-J3 2-E3	BRACKET, FLOOR-----	2-L13 1-J8	BUSHING, DAMPER-LOWER----	2-E5 2-E4
ARM(R), UPPER-----	BODY & PISTON(L), CALIPER-	2-G3 2-N4		2-M7 2-K3	BRACKET, FRONT-----	1-L8 2-G11	BUSHING, LOWER ARM-----	2-E5 2-F4
ARM, LOWER-REAR-----	BODY & PISTON(R), CALIPER-	2-G3 3-D3	BOLT, OIL PAN-----	2-K3 1-C6	BRACKET, FRONT COMB. LAMP-	2-G11 2-E6	BUSHING, RUBBER-FRT-----	2-D5 2-H4
ARM, UPPER-REAR-----	BODY(L), FRONT DOOR-----	3-D3 3-D3	BOLT, PULLEY-----	1-C6 3-D3	BRACKET, HANGER-----	3-C8 3-D8	BUTTON(L), HORN-----	2-H4 2-H4
ARM, WIPER-----	BODY(R), FRONT DOOR-----	3-D3 1-K6	BOLT, REAR BRAKE-----	2-E3 2-M7	BRACKET, HARNESS-----	3-C8 3-D8	BUTTON(R), HORN-----	2-H4 2-H4
ARM, WIPER-CD DRIVER SIDE-	BODY, FILLER CAP-----	1-K6 3-I5	BOLT, REAR SENSOR-----	2-M7 2-K3				
ARM, WIPER-DRIVER SIDE----	BODY, LIFT GATE-----	3-I5 1-D10	BOLT, RING GEAR-----	2-K3 1-C6	BRACKET, HEAD LAMP-----	2-N10 3-C8		
ARMATURE-----	BODY, LWR-CONT. VALVE-----	1-D10 1-D6	BOLT, SET-----	1-C6 2-C10	BRACKET, HOLE-ENG. WIRING-	3-C8 2-J7		
ARMATURE, MAGNETIC CLUTCH-	BODY, OIL FILTER-----	1-D6 1-D5		3-D3 3-D3	BRACKET, HOSE-----	2-J7 1-E4		
AUDIO SET-----	BODY, THROTTLE-----	1-D5 1-G10	BOLT, SETTING-HINGE LOWER-	3-D3 2-I4	BRACKET, INTER COOLER-----	1-E4 2-D12		
	BODY, UPPER-CONTROL-----	1-G10 1-C9	BOLT, SHAFT-----	2-I4 2-H11	BRACKET, MOTOR-----	2-D12 1-C9		
	BOLT-----	1-C9 1-C10	BOLT, SPECIAL-----	2-H11 2-C13	BRACKET, OIL COOLER-----	1-C9 1-I6		
		1-C10 1-D7	BOLT, STRUT BAR-----	2-C13 1-H3		3-L7 3-F9		
		1-D7 1-D9	BOLT, TENSION-----	1-H3 2-N12	BRACKET, OVERHEAD CONSOLE-	3-F9 1-F9		
		1-D9 1-D10	BOLT, TIE DOWN HOOK-FRONT-	2-N12 2-E4	BRACKET, PIPE-----	1-F9 1-J8		
		1-D10 1-F7	BOLT, 'A', LINK-----	2-E4 2-J12	BRACKET, REAR-----	1-L8 3-E7		
		1-F7 1-F9	BONNET-----	2-J12 2-D3		2-K11 3-N6		
		1-F9 1-F11	BOOT SET, INNER JOINT-----	2-D3 2-D3	BRACKET, REAR FINISHER----	2-K11 2-L15		
		1-F11 1-H7	BOOT SET, OUTER JOINT-----	2-D3 2-C5	BRACKET, RELAY-----	2-L15 2-F5		
		1-H7 1-H11	BOOT, BALL JOINT-UP. ARM----	2-C5 2-L15	BRACKET, RR. CONSOLE-NO. 1-	2-F5 2-H15		
		1-H11 1-I9	BOOT, CHANGE-----	2-L15 1-D8	BRACKET, STABILIZER-----	2-F5 2-C7		
		1-I9 1-J8	BOOT, DUST-CHANGE LEVER----	1-D8 2-E11	BRACKET, STEERING-----	2-H15 2-C7		
		1-J8 1-K9	BOOT, MOTOR-RETRACT H/L----	2-E11 2-J4	BRACKET, STOPPER-----	2-C7 3-D6		
		1-K9 1-L9	BOOT, RACK-----	2-J4 2-H4	BRACKET, SUN ROOF-FRONT----	3-D6 3-I4		
		1-L9 2-C3	BOSS, STEERING WHEEL-----	2-H4 2-N12	BRACKET, TANK-----	3-I4 3-K3		
		2-C3 2-C5	BOX(L), TORQUE-----	2-N12 2-M12	BRACKET, TANK-----	3-I4 3-K3		
		2-C5 2-C6	BOX(R), TORQUE-----	2-M12 1-N8	BRACKET, TRIM-----	3-K3 1-E10		
		2-C6 2-C14	BOX, BATTERY-----	1-N8 3-M6	BRACKET, TUBE-----	1-E10 3-E7		
		2-C14 2-D5	BOX, CONTROL-A. B. S.-----	3-M6 2-H15	BRACKET, TUNER-----	3-E7 1-I4		
		2-D5 2-E4	BOX, GLOVE-----	2-H15 2-I15	BREAKER-----	1-I4 3-E8		
		2-E4 2-E6		2-I15 3-N7	BREATH-----	3-E8 2-J3		
		2-E6 2-E10	BOX, RELAY-FRONT HARNESS--	3-N7 3-L9	BREATH, AIR-T/MISSION----	2-J3 1-C9		
		2-E10 2-F5	BOX, STORAGE-----	3-L9 3-D10		1-C9 1-H7		
		2-F5 2-F16	BOX, TOOL-----	3-D10 1-E10	BRKT SET, DASH POT-THROT-	1-H7 2-K7		
		2-F16 2-H3	BRACKET-----	1-E10 1-F9	BRKT(L), STRUT BAR-----	2-K7 3-N6		
		2-H3 2-I4		1-F9 1-L6	BRKT(R), STRUT BAR-----	3-N6 2-L7		
		2-I4 2-J3		1-L6 2-K7	BRKT(R), STRUT BAR-----	2-L7 2-H3		
		2-J3 3-D10		2-K7 3-N6	BRKT, FRT SIDE TRIM-----	2-H3 2-N12		
		3-D10 1-L7	BRACKET & RELAY-----	3-N6 2-L7	BRKT, JOINT-SPEAKER DUCT--	2-N12 3-H9		
		1-L7 1-L8	BRACKET NO 1, A. B. S.-----	2-L7 2-L7	BRKT, MOTOR-ANTENNA-----	3-H9 3-I7		
		1-L8 2-G7	BRACKET NO 2, A. B. S.-----	2-L7 2-H3	BRUSH-----	3-I7 1-H8		
		2-G7 2-M4	BRACKET(L), CABLE-----	2-H3 2-F16	BRUSH, YOKE-----	1-H8 1-K8		
		2-M4 1-E8	BRACKET(L), FRT SEAT-----	2-F16 2-H13	BULB-----	2-C15 2-E12		
		1-E8 1-N6	BRACKET(L), FR. SEAT-----	2-H13 2-T11		2-E15 2-F15		
		2-D5 2-F4	BRACKET(L), LAMP-----	2-T11 3-I9		2-G11 2-G15		
		2-F4 3-J10	BRACKET(L), LAMP-F. FOG-----	3-I9 3-J10		2-J11 2-K11		
		3-J10 2-H10	BRACKET(L), LOWER-F. SIDE--	3-J10 2-H10		2-N10 2-N10		
		2-H10 3-I7	BRACKET(L), QUARTER TRIM--	2-H10 3-I7				
		3-I7 1-M4	BRACKET(L), RR. BUMPER-----	3-I7 3-M10				
		1-M4 3-L4	BRACKET(L), SPEAKER-----	3-I7 3-M10				
		3-L4 1-I9	BRACKET(L), SPOILER-----	3-M10 2-H13				
		1-I9 2-N4	BRACKET(L), TRIM-QTR PANEL	2-H13 3-J9				
		2-N4 1-N8	BRACKET(L), TRIM SIDE-----	3-J9 3-H9				
		1-N8 1-J3	BRACKET(L), UPPER-F. SIDE--	3-H9 2-H3				
		1-J3 1-J7	BRACKET(R), CABLE-----	2-H3 2-H3				
		1-J7 1-K3	BRACKET(R), F. FOG LAMP----	2-H3 2-I11				
		1-K3 3-N4	BRACKET(R), FRT SEAT-----	2-I11 2-F16				
		3-N4 3-D5		2-F16 3-D5				
		3-D5 3-N4		3-D5 3-N4				

ALPHABETICAL INDEX *** ENGLISH ***

CAP,VANE PUMP TANK-----	2-L4	CLIP,FENDER GRILLE-----	2-I12	CORD,HIGH TENSION (T-1)--	1-F8	COVER,THERMOSTAT-----	1-J6	*****	
CARRIER,DIFFERENTIAL-----	2-J3	CLIP,FLEXIBLE HOSE-----	2-I6	CORD,HIGH TENSION (T-2)--	1-F8	COVER,UNDER-----	1-C9	* * *	
CARRIER,FRONT-----	1-C11	CLIP,HARNES-----	2-I7	CORD,LAMP-----	2-N11	COVER,UNDER-FRONT-----	1-G7	* * *	
CARRIER,REAR-----	1-D11	CLIP,HOSE-----	1-D10	CORD,SHORT-----	2-J15	COVER,UNDER-MAIN FUSE BLK	2-C14	* * *	
CARTRIDGE,OIL FILTER-----	1-E6	CLIP,HEATER UNIT-----	1-E10	CORE,HEATER-----	3-J7	COVER,UNDER-REAR-----	3-L7	* * *	
CASE(L),BLOWER-----	3-F4	CLIP,HOSE-----	3-H8	COVER-----	3-M7	COVER,UNDER-RELAY BOX---	2-C14	*****	
CASE(R),BLOWER-----	3-F4	CLIP,HOSE-----	3-D4	COVER NO.1,ADJ-FRT-----	3-D4	COVER,VENT-----	3-L7	FACE,FRONT BUMPER-----	2-E10
CASE,CHANGE CONTROL-----	1-D8	CLIP,HOSE-----	1-J4	COVER NO.1,SIDE-F.SEAT---	3-L7	COVER,WHEEL CORE-----	1-C7	FAN DRIVE-----	1-L6
CASE,HEATER-----	3-D4	CLIP,HOSE-SUB T.& WATER H	1-N4	COVER NO.4,SIDE-F.SEAT---	2-E16	COVER,WIPER ARM-FRONT---	2-H4	FAN(L),COOLING-----	1-J6
CASE,LAMP-----	2-C15	CLIP,M.OIL TUBE-----	1-L6	COVER SET-----	2-G16	COVER,WIPER ARM-REAR---	3-K8	FAN(R),COOLING-----	1-J6
CASE,METER-----	2-L15	CLIP,MUD GUARD-----	1-H6	COVER(L),BUMPER-----	1-L8	COVER,FRAME-SLIDE ROOF---	3-C9	FANNE-----	3-C9
CASE,RELAY BOX-----	3-L7	CLIP,OIL TUBE-----	2-N12	COVER(L),DECORATION-----	2-G10	COVER'L,FRAME-SLIDE ROOF---	3-C6	FASTENER-----	1-E4
CASE,T/MISSION-----	1-F7	CLIP,PARKING CABLE-----	1-H6	COVER(L),DUST-----	3-C6	COVER'L,HYDRAULIC UNIT---	2-L7		1-N4
	1-Y9	CLIP,PIPE-----	2-N7	COVER(L),FOG LAMP-----	2-M4	COWLING,RADIATOR-----	1-L6		2-C13
CASE,WARNING UNIT-----	2-E15		2-D8	COVER(L),QTR. TRIM-----	2-I11	CUP,SECONDARY-----	2-H7		2-E10
CASE'A',COOLING UNIT-----	3-F5		2-K7	COVER(L),RETRACTOR-----	3-K10	CUSHION(L),FRT SEAT-----	2-I16		2-H12
	3-G5		3-C9	COVER(L),RR COMB-----	2-M16		2-J16		2-I10
CASE'B',COOLING UNIT-----	3-F5	CLIP,PROTECTOR-----	3-H4	COVER(L),SIDE-----	2-M11	CUSHION(R),FRT SEAT-----	2-G16		2-K7
	3-G5	CLIP,RR BRAKE PIPE-----	3-K4	COVER(L),TRUNK SIDE-----	2-J15		2-H16		2-M13
CASE'C',COOLING UNIT-----	3-G5		3-L7	COVER(R),BUMPER-----	3-J9	CUSHION,RUBBER-----	2-G15		2-M15
CASING,HYDRAULIC UNIT-----	2-M7		2-G4	COVER(R),TRUNK SIDE-----	2-E10		3-H3		3-C10
CATALYST,THREE WAY-----	2-D6	CLIP,RR WINDOW MOULD-----	2-J10	COVER(R),DECORATION-----	2-G10		3-L9		3-D10
CD SOFT-----	3-E7	CLIP,SCUFF PLATE-----	2-H9	COVER(R),DUST-----	3-G6	CYL,CLUTCH MASTER-----	3-G6		3-F3
CEILING,TOP-----	3-F9	CLIP,SLIDE-----	3-J5	COVER(R),FOG LAMP-----	2-M6	CYL,CLUTCH RELEASE-----	2-G6		3-F9
CHAIN,OIL PUMP-----	1-C6	CLIP,SPOILER-----	3-M10	COVER(R),FOG LAMP-----	2-I11	CYL,TANDEM MASTER-----	2-H7		3-H9
CHAMBER,EXTRACTOR-----	2-I12	CLIP,TOP CEILING-----	3-F9	COVER(R),GLOVE-----	2-I15				3-J3
CHAMBER,VACUUM-----	1-K5	CLIP,TRIM-----	3-F9	COVER(R),QTR. TRIM-----	3-K10	*****			3-J5
CHANGE COMPLETE-----	2-E8		3-F9	COVER(R),RETRACTOR-----	2-M16	* * *			3-J9
CHANNEL(L),GLASS-----	3-E3		3-G9	COVER(R),RR COMB-----	2-L11	* * * D * *			3-L10
CHANNEL(R),GLASS-----	3-E3		3-H9	COVER(R),SIDE-----	2-I15	* * *			3-H9
CHARGE,AIR COOLER-----	1-E4		3-J3	COVER(R),TRUNK SIDE-----	2-J15	*****			3-N10
CHECKER,DOOR-----	3-G3	CLIP,WASHER HOSE-----	3-J5	COVER(R),TRUNK SIDE-----	3-J9	DAM,AIR-SKIRT-----	3-L10		2-K12
CLAMP-----	2-L4		3-K10	COVER,ACTUATOR-----	3-D7	DAM,FRONT WSHLD GLASS---	3-L5		3-H9
CLAMP,BATTERY-----	1-N8		3-I8	COVER,AIR CLEANER-----	1-N4	DAMPER(L),FRONT-----	2-E5		3-J5
CLAMP,HOSE-----	1-E5		3-N8	COVER,BEARING-----	1-F7	DAMPER(L),FRONT-----	2-E5		1-G9
	1-H4	CLIP,WIRE-BONNET-----	2-J12	COVER,BLIND-----	1-G7	DAMPER(R),FRONT-----	2-E5		1-M6
	1-M4	CLIP'A',BELTLINE MOULD---	2-M10	COVER,BLIND-EXTENSION HOU	1-H7	DAMPER(R),REAR-----	2-C4		2-N6
	3-C4	CLIP'X',BELTLINE MOULD---	1-N10	COVER,BOX-BATTERY-----	1-N8	DAMPER,GLOVE BOX-----	2-H15		2-C10
CLAMP,SPARE TIRE-----	2-H5	CLUTCH & ONE WAY-----	1-N10	COVER,CASE-----	2-G3	DAMPER,PULSATIION-----	1-L4		2-N10
CLAMP,WATER HOSE-----	1-K6	CLUTCH,HIGH-----	1-L10	COVER,CENTER ADAPTER-----	3-G10	DAMPER,REAR-----	2-C4		2-F10
CLIP-----	1-F7	CLUTCH,MAGNET-----	3-E5	COVER,CLUTCH-----	1-C7	DASH POT-----	1-D5		2-I10
	1-F9		3-N4	COVER,COLUMN-LOWER-----	2-C15	DIFFERENTIAL-----	2-K3		3-D6
	1-G9	CLUTCH,ONE WAY-----	1-D11	COVER,COLUMN-UPPER-----	2-C15	DISC,CLUTCH-----	1-C7		2-G10
	1-J4	CLUTCH,REAR-----	1-C11	COVER,DAMPER STAY-----	3-I5	DISPLAY,SECURITY-ALARM---	2-M15		3-I7
	2-C8	CLUTCH,REVERSE-----	1-L10	COVER,DUST-----	1-C7	DISTRIBUTOR,FUEL-----	1-K4		3-J7
	2-C11	COCK,DRAIN-----	1-K6	COVER,DRUM,REVERSE-----	1-G3	DOWEL,TUBULAR-----	1-D3		1-J5
	2-D3	COIL,FIELD-MAGNET CLUTCH-	3-C5	COVER,DRUM,REVERSE-----	1-N6	DRIVING & DIFF-----	2-J3		1-K5
	2-E10		3-E5	COVER,FRONT-----	2-E3	DRUM,HIGH CLUTCH-----	1-L10		1-J4
	2-F16	COIL,IGNITION-LEADING-----	1-E8	COVER,FRONT CLUTCH-----	2-I4	DRUM,REVERSE-----	1-L10		2-K6
	2-H4	COIL,IGNITION-TRAILING---	1-E8	COVER,FRONT-ALTERNATOR---	2-J4	DUCT NO.1(R)-----	2-N15		1-C10
	2-H12	COLLAR-----	1-E4	COVER,F.FOG LAMP-----	2-L6	DUCT NO.2(L)-----	2-I15		2-K11
	2-I11	COLLAR,CLUTCH REL-----	1-C7	COVER,FRONT-----	2-J11	DUCT NO.3(R)-----	2-N15		2-J3
	2-I12	COLLAR,COMP. BRKT-----	1-N6	COVER,FRONT CLUTCH-----	1-H3	DUCT(L),AIR-BRAKE PIPE---	2-I7		2-E3
	2-J10	COLLAR,WEDGE-----	1-C7	COVER,FRONT-ALTERNATOR---	1-C7	DUCT(L),LAP-----	2-N15		2-H10
	2-L15	COMPRESSOR-----	3-C5	COVER,FUSE BLOCK-----	3-E8	DUCT(L),SHOWER-----	3-C4		2-H10
	2-N7	COMPRESSOR,AIR CON.-----	3-E5	COVER,GRILLE-----	2-F10	DUCT(L),SIDE DEMIST-----	2-N15		2-D7
	3-C3		3-D5	COVER,HOLE-----	2-K15	DUCT(L),VENTILATOR-----	2-N15		2-F7
	3-D6	CONDENSER-----	3-N4	COVER,HOLE- (C)-----	2-M13	DUCT(R),AIR-BRAKE PIPE---	2-I7		2-D7
	3-E10		1-G8	COVER,HOLE-ANTENNA-----	2-N13	DUCT,AIR-----	3-C4		1-D7
	3-G3	CONNECTOR,HOSE-----	3-H4	COVER,HOLE-BELT-----	3-E7	DUCT,AIR-INTER COOLER---	1-E4		1-D7
	3-H3	CONNECTOR,OIL COOLER-----	3-L4	COVER,HOLE-DOOR BODY-----	3-J6	DUCT,CENTER-----	2-N15		1-C8
	3-H5	CONNECTOR,SHORT-----	3-F7	COVER,HOLE-LIFT GATE-----	2-I15	DUCT,FRESH AIR-----	1-M4		1-D8
	3-H8	CONNECTOR,WATER HOSE-----	3-C4	COVER,HOLE-RR WIPER-----	3-C9	DUCT,OIL COOLER-----	1-C9		2-K13
	3-I3	CONSOLE,OVERHEAD-----	2-F12	COVER,INJECTOR-----	1-K4	DUCT'A',REAR SPEAKER-----	1-I4		2-N12
	3-I4	CONSOLE,REAR-----	2-L15	COVER,LICENSE LAMP-----	2-D12	DUCT'B',RR SPEAKER-----	3-H7		2-G13
	3-I8	CONTROL UNIT-----	3-H6	COVER,LOWER PANEL-----	3-C6	DUCT'C',RR SPEAKER-----	3-H7		2-K13
	3-I9	CONTROL,COOLANT FAN-----	3-M6	COVER,MAIN FUSE BLOCK-----	3-C8	*****			2-E13
	3-J5	CONTROL,HEATER-----	3-E4	COVER,PEEPING HOLE-----	3-L7	* * *			2-K13
	3-J7	CONVERTER,CATALYST-----	2-D6	COVER,REAR-----	1-D9	* * * E * *			2-C6
	3-K4	CONVERTER,TORQUE-----	1-C9	COVER,REAR-ALTERNATOR---	1-C7	*****			3-N5
	3-N5	COOLER,OIL-----	1-E9	COVER,RELAY BOX-F.HARNES---	2-K3	ELEMENT,AIR CLEANER-----	1-N4		2-F4
	3-N8		1-H6	COVER,RELAY FINISHER-----	1-H8	END,CONTROL LEVER-----	1-G7		3-D8
CLIP (R)-----	3-G3		3-H7	COVER,SERVICE HOLE-----	2-N11	END,S/ROD(1ST&2ND)-----	1-C8		3-E8
CLIP KIT,ST. BEAR-----	2-J4	CORD-----	3-M7	COVER,SOCKET HEAD LAMP---	2-N13	END,S/ROD(3RD&4TH)-----	1-C8		3-L7
CLIP SET,DRIVE SHAFT-----	2-D3	CORD SET,HI.TENSION-----	1-F8	COVER,SUN VISOR-----	2-N18	ENGINE,SHORT-----	1-C3		3-C8
CLIP,AIR BAG-----	2-K7	CORD,Earth-----	3-I7	COVER,T/MISSION-----	2-C14	EVAPORATOR-----	3-F5		3-M7
	3-C3	CORD,Earth-RADIO-----	3-J7						
CLIP,BELTLINE MOULD-----	2-M10	CORD,HIGH TENSION-----	1-F8						
CLIP,C.S.D. WIRE-----	2-D7	CORD,HIGH TENSION (L-1)--	1-F8						
CLIP,COOLING UNIT-----	3-G5	CORD,HIGH TENSION (L-2)--	1-F8						
CLIP,DRAIN HOSE-REAR-----	3-D6								
CLIP,DRAIN HOSE-SUN ROOF-	3-D6								

ALPHABETICAL INDEX *** ENGLISH ***

***** * G * *****	GARNISH(L)----- 3-E10 GARNISH(L), DOOR----- 3-L3 GARNISH(L), SAIL-INN.----- 3-L3 GARNISH(R)----- 3-E10 GARNISH(R), DOOR----- 3-L3 GARNISH(R), SAIL-INN.----- 3-L3 GASKET----- 1-C9 1-F7 1-M6 1-J5 1-J6 1-J9 1-K8 1-M6 2-D6 2-D7 2-E6 2-F7 2-H11 2-K6 GASKET & SEAL KIT----- 1-J11 GASKET KIT, COMPRESSOR----- 3-N4 GASKET NO. 2, IN. MANIFOLD----- 1-C4 GASKET SET, ENGINE----- 1-C3 GASKET SET, SUB-ENG.----- 1-C3 GASKET(C), SPOILER----- 3-M10 GASKET(L)----- 2-H11 GASKET(L), REAR SIDE----- 2-N11 GASKET(L), SPOILER----- 3-L10 GASKET(R), REAR SIDE----- 2-N11 GASKET(R), SPOILER----- 3-L10 GASKET, A. C. V.----- 1-E5 GASKET, B. A. C. VALVE----- 1-M5 GASKET, BLIND COVER----- 1-G7 GASKET, BODY-LWR----- 1-G10 GASKET, BODY-UPP----- 1-G10 GASKET, CAP----- 2-M6 GASKET, CHAMBER-EXTRACTOR----- 2-H12 GASKET, COMPRESSOR----- 3-D5 3-N4 GASKET, COVER PLATE----- 1-D8 GASKET, DRAIN PLUG----- 2-K6 GASKET, DRUM SUPPORT----- 1-H10 GASKET, E. G. R. VALVE----- 1-K5 GASKET, EX. MANIFOLD----- 1-D4 GASKET, EXTENSION----- 1-L9 GASKET, FILLER PIPE/TANK----- 2-K6 GASKET, FRONT COVER----- 1-H3 GASKET, GOVERNOR----- 1-K9 GASKET, HINGE-LIFT GATE----- 3-L5 GASKET, IN. MANIFOLD----- 1-C4 GASKET, JOINT PIPE----- 2-D6 GASKET, LICENSE----- 2-D12 GASKET, METERING OIL----- 1-D6 GASKET, OIL CAP----- 1-D3 GASKET, OIL FILLER PIPE----- 1-E3 GASKET, OIL PAN----- 1-H3 1-L9 GASKET, OIL PIPE----- 1-G4 GASKET, OIL PUMP----- 1-D9 GASKET, OIL STRAINER----- 1-C6 GASKET, RR SPOILER----- 3-N10 GASKET, SOLENOID VALVE----- 1-J5 GASKET, SPOILER----- 3-M10 GASKET, SPRING CAP----- 1-B7 GASKET, THERMO----- 1-C5 GASKET, THERMOSTAT COVER----- 1-J6 GASKET, THROTTLE BODY----- 1-I5 GASKET, TURBO----- 1-H4 GASKET, TURBOCHARGER----- 1-F4 GASKET, VAC POWER ASSIST----- 2-G7 GASKET, VAPOR VALVE----- 2-N6 GASKET, WATER DRAIN-INTER.----- 1-D3 GASKET, WATER PUMP----- 1-J6 GASKET 'A', REINFORCEMENT----- 2-L6 GASKET 'B', DUST COVER----- 2-L6	GAUGE UNIT, OIL PRES.----- 3-G6 GAUGE, FUEL TANK----- 2-N6 GAUGE, OIL LEVEL----- 1-E3 1-L9 GEAR----- 1-K8 GEAR SET----- 1-M8 GEAR SET, DRIVEN-SPEED----- 1-G7 1-F7 3-G6 GEAR SET, FINAL----- 2-J3 GEAR, COUNTER----- 1-K7 GEAR, COUNTER REVERSE----- 1-K7 GEAR, COUNTER SHAFT----- 1-K7 GEAR, DISTRIBUTOR----- 1-J3 GEAR, DRIVE----- 1-F11 GEAR, DRIVE-OIL PUMP----- 1-K3 GEAR, DRIVE----- 1-D6 GEAR, INTERNAL----- 1-D11 GEAR, INTERNAL-STARTER----- 1-J8 1-K8 GEAR, MAIN DRIVE----- 1-I7 GEAR, OVER TOP----- 1-I7 GEAR, PARKING----- 1-F11 GEAR, REVERSE----- 1-K7 GEAR, REVERSE IDLE----- 1-L7 GEAR, RING-FLY WHEEL----- 1-K3 GEAR, SHAFT----- 3-N8 GEAR, SMALL SUN----- 1-E11 GEAR, SPEEDO DRIVE----- 1-L7 GEAR, STATIONARY-FRT.----- 1-E3 GEAR, STATIONARY-RR.----- 1-F3 GEAR, STEERING----- 2-J4 GEAR, SUN----- 1-C11 GEAR, 1ST----- 1-J7 GEAR, 2ND----- 1-J7 GEAR, 3RD----- 1-I7 GENERATOR, SPEED PULSE----- 3-I6 GLASS(L), DOOR-FRT----- 3-E3 GLASS(L), MIRROR----- 3-F10 GLASS(R), DOOR-FRT----- 3-D3 3-E3 GLASS(R), MIRROR----- 3-F10 GLASS, BACK WINDOW----- 3-L5 GLASS, FRONT-WARNING UNIT----- 2-F15 GLASS, WINDSHIELD----- 3-L5 GRILLE(C), VENTILATOR----- 2-N15 GRILLE(L), DEF. NOZZLE----- 2-H15 GRILLE(L), FENDER----- 2-I12 GRILLE(L), SPEAKER----- 3-J10 3-K3 GRILLE(R), DEF. NOZZLE----- 2-H15 GRILLE(R), FENDER----- 2-H12 GRILLE(R), SPEAKER----- 3-J3 3-J10 GRILLE, COWL----- 2-H12 GRILLE, EXTRACT.-T.S. TRIM----- 3-J9 GRILLE, SPEAKER----- 2-G15 GRIP, FRT ASSIST----- 3-K3 GROMMET----- 2-H10 2-M10 2-M13 3-C4 3-D7 3-H4 3-J10 3-L4 3-N5 3-N8 3-L4 3-M3 2-K11 GROMMET, REAR COOLER----- 3-L4 GROMMET, REAR FLOOR----- 2-N13 GROMMET, SCREW----- 2-E10 2-H12 2-K11 3-E3 3-H3 3-K3 3-L10 3-M3 2-K11 2-L11 GROMMET, SCUFF PLATE----- 3-M9 GROMMET, SIDE GARNISH----- 2-K11 GROMMET, UNIT-COOLING----- 3-I4	GROMMET, WASHER TANK----- 3-J8 GUARD(L), MUD----- 2-N12 GUARD(R), MUD----- 2-N12 GUIDE(L), REAR----- 3-N5 GUIDE(R), REAR----- 3-N5 GUIDE, AIR----- 2-E10 GUIDE, CHANGE----- 1-H7 GUIDE, PARKING ROD----- 1-H11 GUIDE 'A' (L), GLASS----- 3-E3 GUIDE 'A' (R), GLASS----- 3-E3 GUIDE 'B' (L), GLASS----- 3-E3 GUIDE 'B' (R), GLASS----- 3-E3 GUSSET(L), RR PILLAR----- 2-G13 GUSSET(L), SIDE SILL OUTER----- 2-H13 GUSSET(R), SIDE SILL OUTER----- 2-F13 ***** * H * ***** HANDLE(L), INNER----- 3-G3 HANDLE(L), OUT----- 3-H3 HANDLE(R), INNER----- 3-G3 HANDLE(R), OUT----- 3-H3 HANDLE, JACK----- 2-H5 HANDLE, SLIDING ROOF----- 3-C6 HANGER----- 2-E6 HANGER, ENGINE----- 1-H3 HANGER, ENGINE-REAR----- 1-H3 HANGER, SILENCER----- 2-E6 HANGER, STRAP----- 3-J5 HARNES----- 2-L4 HARNES NO. 2, REAR----- 3-M7 HARNES NO. 3, REAR----- 3-M7 HARNES, BLOWER UNIT----- 3-F4 HARNES, COOLING UNIT----- 3-F5 HARNES, DASHBOARD----- 3-E8 HARNES, DOOR-DRIVER SIDE----- 3-G8 HARNES, DOOR-PASSENGER SI----- 3-G8 HARNES, ENGINE----- 3-D8 HARNES, FRONT----- 3-M7 HARNES, INST----- 3-E8 HARNES, INSTRUMENT----- 3-E8 HARNES, INT. LAMP----- 3-M7 3-F8 HARNES, LOGICAL CONTROL----- 3-F8 HARNES, REAR----- 3-M7 HARNES, SLIDING ROOF----- 3-C6 HEAD, CYL. - COMPRESSOR----- 3-D5 3-N4 HEADER, FRONT----- 2-I13 2-I13 HEADER, REAR----- 2-I13 2-I13 HEATER UNIT----- 3-D4 HINGE----- 2-C13 HINGE(L), BONNET----- 2-J12 HINGE(L), DOOR-LOWER----- 3-D3 HINGE(L), DOOR-UPPER----- 3-D3 HINGE(L), LID-LAMP----- 2-E11 HINGE(R), BONNET----- 2-J12 HINGE(R), DOOR-LOWER----- 3-D3 HINGE(R), DOOR-UPPER----- 3-D3 HINGE(R), LID-LAMP----- 2-E11 HINGE, GLASS HATCH----- 3-I5 HINGE, GLOVE LID----- 2-H15 HOLDER----- 2-J10 HOLDER SET, THROTTLE BODY----- 1-C5 HOLDER, BONNET STAY----- 2-J12 HOLDER, BONNET STAY-SHROUD----- 2-J12 1-K8 1-M8 2-I6 1-F9 2-H5 2-J10 2-E10 2-D8 2-K7 HOLDER, CLUTCH----- 2-I6 HOLDER, JACK HANDLE----- 1-F9 2-H5 HOLDER, MOTOR-H. L. CLEANER----- 2-J10 HOLDER, NO. PLATE----- 2-E10 HOLDER, P. B. VALVE----- 2-M7 2-D8 2-K7 HOLDER, PIPE----- 2-N6 2-K7 HOLDER, PIPE-FRT BRAKE(L)----- 2-K7	HOLDER, PLATE----- 2-F7 HOLDER 'B', PIPE----- 2-D8 HOLDER 'C', PIPE----- 2-D8 HOLDER 'E', PIPE-FUEL----- 2-D8 HOLDER 'F', PIPE----- 2-D8 HOLDER 'G', PIPE----- 2-D8 HOLDER 'J', PIPE----- 2-D8 HOLDER 'K', PIPE-FUEL----- 2-D8 HOOD, METER----- 2-D15 HOOK(L), TIE DOWN----- 2-L13 HOOK(L), TIE DOWN-FRONT----- 2-C13 HOOK(R), TIE DOWN----- 2-L13 HOOK(R), TIE DOWN-FRONT----- 2-C13 HORN, HIGH TONE----- 3-C7 HORN, LOW TONE----- 3-C7 HOSE----- 1-E6 1-G9 1-J4 1-N5 2-D8 2-N6 HOSE NO. 1, WATER----- 3-C4 HOSE NO. 2, WATER----- 3-C4 HOSE NO. 3, WATER----- 3-C4 HOSE NO. 4, WATER----- 3-C4 HOSE, AIR----- 1-E5 1-I4 1-I5 1-J5 1-M4 1-N4 HOSE, BREATHER----- 2-L6 HOSE, CLUTCH FLEXIBLE----- 2-I6 HOSE, DRAIN----- 3-H4 3-K4 HOSE, DRAIN-REAR----- 3-E6 HOSE, DRAIN-SUN ROOF FRONT----- 3-D6 HOSE, EVAPORATION----- 1-J4 HOSE, FLEXIBLE----- 2-J7 HOSE, FLEXIBLE-HIGH----- 3-H4 3-K4 HOSE, FLEXIBLE-LOW----- 3-H4 3-K4 HOSE, FUEL----- 1-J4 2-C8 2-D8 2-M6 HOSE, FUEL MAIN----- 2-C8 HOSE, FUEL-MAIN PIPE----- 2-C8 HOSE, FUEL-SEPARATOR----- 2-M6 HOSE, JOINT-FILLER PIPE----- 2-L6 HOSE, OIL----- 1-E9 1-F9 1-I6 HOSE, PRESSURE----- 2-L4 HOSE, RESERVE----- 2-G6 HOSE, RETURN----- 2-L4 HOSE, SIDE-DEMISTER----- 2-M15 HOSE, SUB TANK----- 1-L6 1-I5 2-G7 HOSE, VACUUM----- 2-H7 1-J6 HOSE, VENTILATION----- 1-J6 HOSE, WATER----- 1-I5 1-K6 1-M6 1-L6 HOSE, WATER SUB TANK----- 1-L6 HOSE, WATER-T/C WATER-PIPE----- 1-F4 HOSE, WATER-TURBOCHARGER----- 1-F4 HOUSING SET, BRG WATER PUM----- 1-J6 HOUSING(L), BACK UP LAMP----- 2-M11 HOUSING(L), FOG LAMP----- 2-H11 HOUSING(R), BACK UP LAMP----- 2-M11 HOUSING(R), FOG LAMP----- 2-H11 HOUSING, AIR CLEANER----- 1-M4 HOUSING, CLUTCH----- 1-C7 HOUSING, CONVERTER----- 1-D9 HOUSING, EXTENSION----- 1-F7 1-K9 HOUSING, FRONT----- 1-G3 HOUSING, GEAR----- 2-J4 HOUSING, INTERMEDIATE----- 1-E3	HOUSING, REAR----- 1-G3 HOUSING, ROTOR-FRONT----- 1-D3 HOUSING, ROTOR-REAR----- 1-D3 HOUSING, WAX----- 1-C5 HUB----- 1-E11 HUB SET, CLUTCH-O. T. & REV----- 1-L7 HUB SET, CLUTCH-1ST & 2ND----- 1-J7 HUB SET, CLUTCH-3RD & 4TH----- 1-I7 HUB(L), SUPPORT----- 2-E3 HUB(R), SUPPORT----- 2-E3 HUB, CLUTCH----- 1-M7 HUB, FORWARD CLUTCH----- 1-L10 HYDRAULIC UNIT, A B S----- 2-L7 ***** * I * ***** IGNITER, IG. COIL-TRALING----- 1-F8 INDICATOR----- 2-E8 INDICATOR, ECONOMY-METER----- 2-E15 INDICATOR, LEVEL----- 2-G7 INJECTION, FUEL-M.P. ELECT.----- 1-K4 INSULATOR----- 1-E4 1-N4 2-C14 3-H5 INSULATOR(L), COWL SIDE----- 3-M9 INSULATOR(L), F. FLOOR----- 3-M9 INSULATOR(R), COWL SIDE----- 3-M9 INSULATOR(R), F. FLOOR----- 3-M9 INSULATOR, BONNET----- 2-K12 INSULATOR, BOOT----- 2-C8 INSULATOR, CONVERTER----- 2-D6 INSULATOR, DASHBOARD----- 3-M9 INSULATOR, EX. MANIFOLD----- 1-D4 INSULATOR, FRONT----- 2-C14 INSULATOR, FUEL DIST.----- 1-K4 INSULATOR, HEAT----- 1-F4 2-C14 INSULATOR, HEAT-FRONT----- 2-C14 INSULATOR, INJECTION----- 1-K4 INSULATOR, MASTER VAC----- 2-M7 INSULATOR, ROD-ANTENNA----- 3-H7 INSULATOR, ROOF----- 3-F9 INSULATOR, SUB----- 1-D4 1-F4 ***** * J * ***** JACK----- 2-H5 JOINT SET, BALL----- 2-K4 JOINT SET, INNER----- 2-D3 JOINT SET, OUTER----- 2-D3 JOINT, BACK WINDOW MOULD----- 2-L10 JOINT, BALL----- 1-L6 JOINT, DRAIN HOSE-REAR----- 3-D6 JOINT, FUEL PIPE----- 2-J7 JOINT, HOSE----- 3-C9 3-I8 JOINT, PIPE----- 2-G6 2-G7 2-J7 2-K7 2-L7 JOINT, RUBBER----- 1-E4 1-H4 1-M4 JOINT, STEERING----- 2-I4 JUNCTION(L), CORNER-Q/PANE----- 2-G13 JUNCTION(R), CORNER-Q/PANE----- 2-E13 ***** * K * *****
-------------------------	---	---	---	--	---

ALPHABETICAL INDEX *** ENGLISH ***

PIPE, HEATER-----	3-C4	PLATE, DRIVEN-REV. PISTON--	1-C11	PROTECTOR(R), FENDER-----	2-D11	REINF. (R), REAR PILLAR IN.	2-E13	RING, SEAL-----	1-G11
PIPE, HEATER UNIT-----	3-D4	PLATE, EARTH-MOTOR ANTENNA	3-H7	PROTECTOR(R), RETRA H/L-----	2-D11	REINF. (R), ROOF RAIL-----	2-F13	RING, SNAP-----	1-C6
PIPE, INNER-----	2-K6	PLATE, GUARD-CALIPER BRAKE	2-G3	PROTECTOR(R), RR. COMB-----	2-L11	REINF. (R), SIDE SILL-----	2-F13		1-C11
PIPE, JOINT-----	1-L6	PLATE, HOLDER-BRUSH-----	3-E9	PROTECTOR, CONVERTER-----	2-F6	REINF. (R), SUSPENSION HSG-----	2-E13		1-F11
PIPE, GIL-----	1-E9		3-M8	PROTECTOR, COVER-----	2-N11	REINF. (R), WHL. APRON-----	2-M12		1-17
	1-F9	PLATE, LOCK-----	3-L9	PROTECTOR, COWL GRILLE-----	2-H12	REINF. (R), ROOF-----	2-I13		1-K7
	1-G4	PLATE, LOCKING-----	3-G6	PROTECTOR, DOOR SWITCH-----	3-C7	REINFORCEMENT, BUMPER-----	2-E10		1-K10
PIPE, OIL FILLER-----	1-E3	PLATE, LOGO-STRUT BAR-----	2-C13	PROTECTOR, FENDER GRILLE-----	2-I12		2-H10		1-M7
PIPE, OIL LEVEL GAUGE-----	1-D3	PLATE, MANUAL-----	1-H11	PROTECTOR, FILLER HOSE-----	2-L6	RELAY-----	3-F4		1-M10
PIPE, OIL OUTLET-F. COVER-----	1-G4	PLATE, MIDDLE-----	1-C6	PROTECTOR, FUEL TANK-----	2-M6	RELAY & BRACKET, NORMAL OP	2-J10		3-C5
PIPE, OIL-OILPUMP-----	1-E9	PLATE, RETAINING-----	1-C11	PROTECTOR, HARNESS-----	3-H7	RELAY, FUEL PUMP-----	3-H6	RING, SNAP-MAGNET CLUTCH--	3-C5
PIPE, PRESSURE-----	2-K4		1-G11	PROTECTOR, HOSE-SUB TANK-----	1-L6	RELAY, MAIN-----	3-H6		3-E5
PIPE, REAR WASHER-UPPER-----	3-N8		1-I10	PROTECTOR, HO. PLATE-----	2-F10	RELAY, MOTOR-HYD. UNIT-----	3-L7	RING, SNAP-PISTON STEM LOW	1-F11
PIPE, RELIEF-----	1-M4		1-M10	PROTECTOR, PIPE-----	2-D8	RELAY, N. O.-----	3-L4		1-K9
PIPE, RETURN-----	2-K4		1-N10	PROTECTOR, SPORGE-----	1-F4		3-M6		1-M10
	2-L4		2-D11		1-J5		3-M6		3-C5
PIPE, SCREEN WASHER-----	3-L8	PLATE, RETRACTABLE-----	3-G6	PROTECTOR, VACUUM PIPE-----	1-L5	RELAY, SLIDE ROOF-----	3-N5	RING, SNAP-PISTON STEM UP-	2-H3
PIPE, VACUUM-----	1-M5	PLATE, SENSOR-----	3-G6	PROTECTOR, VACUUM TUBE-----	1-J4	RELAY, TRANSFER-----	3-M6	RING, SNAP-RR CALIPER-----	1-D3
	2-H7	PLATE, SEPARATOR-----	1-C10	PROTECTOR 'A' (L), BELTLINE	2-M10		3-N6	RING, SQUARE-----	1-D3
	2-D9	PLATE, STABILIZER-----	2-F5	PROTECTOR 'A' (R), BELTLINE	2-M10		3-N6	RING, SQUARE-OUTER-----	1-D3
PIPE, VINYL-----	3-18	PLATE, STABILIZER-RR-----	2-D4	PROTR. MOULD-FRT WINDOW-----	2-L10		2-L7	RING, STOP-----	1-D5
PIPE, WASHER-FRONT WIPER-----	3-18	PLATE, THRUST-----	1-K3	PULLEY-----	1-H8	RELAY, VALVE-HYD. UNIT-----	2-L7	RING, SYNCHRONIZER-----	1-J7
PIPE, WATER-----	1-F4	PLATE, WINDOW-----	2-F15	PULLEY, CRANKSHAFT-----	1-J3	RESISTOR-----	3-E4		1-M7
PIPE, WATER IN-T/C-----	1-F4	PLATE 'E', SIDE-----	1-H10	PULLEY, IDLE-----	1-N6	RESISTOR, BLOWER UNIT-----	3-F4	RING, THRUST WASHER-----	1-M7
PISTON, ACCUMULATOR-----	1-I10	PLAYER, COMPACT DISC-----	3-E7	PULLEY, MAGNET CLUTCH-----	3-C5	RESISTOR, INTERLOCK-----	3-M6	RING, WIRE-----	1-C7
	1-M9	PLUG-----	1-H7		3-E5	REST, FOOT-----	2-D7	RING 'O'-----	2-M7
PISTON, BAND SERVO-----	1-J9		1-H10	PULLEY, VANE PUMP-----	2-L4		2-F7	RIVET-----	2-D12
PISTON, CALIPER-FRT-----	2-N4		1-I3	PULLEY, WATER PUMP-----	1-J6	RET, ACCUM-----	2-D7		2-E11
PISTON, CLUTCH-----	1-L10		1-I9	PUMP KIT-----	2-K10	RETAINER-----	1-C11	RIVET, BLIND-----	3-G6
PISTON, FLOATING-----	2-H7		2-N13	PUMP, AIR-----	1-E5		1-C11	RIVET, MUD GUARD-----	2-E10
PISTON, HIGH CLUTCH-----	1-M10	PLUG SET, SPARK-----	1-F8	PUMP, FUEL-----	2-K6	RETAINER, CHAMBER-EXTRACTO	2-I12	RIVET, SEAL PLATE-SHROUD--	2-C13
PISTON, LOW & REVERSE-----	1-F11	PLUG, BLIND-----	1-G3	PUMP, FUEL-SUB-----	2-K6	RETAINER, CHAMBER-EXTRACTO	2-E10	ROD, PARKING-----	1-H11
PISTON, O. W. VALVE-----	2-G6	PLUG, CAP-----	1-C8	PUMP, METERING OIL-----	1-D6	RETAINER, FASCIA-----	2-E10	ROD, PUSH-----	2-D7
PISTON, PRIMARY-----	2-H7	PLUG, COMPRESSOR-----	3-D5	PUMP, OIL-----	1-C6	RETAINER, LOCK CYL-----	3-H3		2-G6
PISTON, REVERSE-----	1-M10		3-N4		1-D9	RETAINER, SERVO-----	1-J9	ROD, RETRACTABLE-----	2-D11
PIVOT, ROLLER-----	1-E9	PLUG, CORNER SEAL-----	1-M3	PUMP, VANE-----	2-L4	RETAINER, SERVO SPRING-----	1-M9	ROD, SELECTOR-REAR-----	2-E8
PLATE-----	1-D11	PLUG, DRAIN-----	1-H3	PUMP, WASHER-----	2-J10	RETAINER, SPRING-----	1-F11	ROD, SHIFT (1ST&2ND)-----	1-C8
	1-I10		2-K6		2-K10	RETAINER, SPRING-CLU. ONE W	1-C11	ROD, SHIFT (3RD&4TH)-----	1-C8
	1-K3		2-M13		3-C9	RETAINER, SPRING-PSTN STEM	1-K9	ROD, SHIFT-OVER TOP & REVE	1-C8
	2-F7		2-N12	PUMP, WATER-----	3-J8	RING-----	1-K6	ROTOR-----	1-C6
PLATE NO. 1(L), SET-F.-----	2-F10		3-G3		1-I6	RING SET-KEY CYLINDER-----	2-C15		1-18
PLATE NO. 1, PRINT-----	2-E15		3-N8		1-J6	RING SET, 'O'-----	1-C3		1-N3
PLATE NO. 1, SET-F. BUMPER-	2-F10	PLUG, DRAIN-LIFT GATE UP.-	2-N13			RING, 'O'-----	1-C5	ROTOR, SENSOR-RR A. B. S.---	2-E3
PLATE NO. 2(L), SET-F. BUMPE	2-F10	PLUG, HOLE-----	2-M13				1-C5		2-M4
PLATE NO. 2(R), SET-F. BUMPE	2-F10	PLUG, HOLE-F. SIDE FRAME---	2-M13				1-D3	RUBBER(C), CUSHION-BONNET--	2-J12
PLATE NO. 3(L), SET-F. BUMPE	2-F10	PLUG, HOLE-FLAP-----	2-M13				1-D6	RUBBER(L), ENGINE MT-----	2-C6
PLATE NO. 3(R), SET-F. BUMPE	2-F10	PLUG, JET-----	1-D3				1-E10	RUBBER(L), SEAL-SIDE PANEL	2-J15
PLATE NO. 4(L), SET-F. BUMPE	2-F10	PLUG, MAGNET-----	1-F7				1-F3	RUBBER(R), ENGINE MT-----	2-C6
PLATE NO. 4(R), SET-F. BUMPE	2-F10		2-J5				1-F9	RUBBER(R), SEAL-SIDE PANEL	2-J15
PLATE SET, SEAT BELT-----	2-M16		1-F7	RACE, BEARING-----	1-D11		1-G3	RUBBER, BLADE-FRONT-----	3-K8
PLATE(L), CLOSING-QTR PANE	2-H13	PLUG, MAGNET DRAIN-----	1-F7		1-E11		1-G7		3-N8
PLATE(L), CLOSING-R. FENDER	2-L13	PLUG, OIL JET-----	1-J5		1-E11		1-H5	RUBBER, CUSHION-BONNET FRT	2-J12
PLATE(L), CORNER-----	2-H13	PLUG, OUTER HANDLE-----	3-G3	RACE, INNER-----	1-F11		1-I9		2-K12
PLATE(L), FRONT SCUFF-----	3-I9	PLUG, REGULATOR-----	1-C10		1-J7		1-K4	RUBBER, HANGER-----	2-E6
PLATE(L), GUIDE-----	3-D6	PLUG, SERVICE COVER-----	2-N13	RACE, OUTER-----	1-D11		1-K9	RUBBER, INSULATOR-----	3-I4
PLATE(L), POSITION-S. ROOF	3-C6	PLUG, SPARK-----	1-E8	RACK, STEERING GEAR-----	2-J4		1-L3		1-K6
PLATE(L), STRUT BAR-----	2-F13	PLUG, SQUARE HEAD-----	1-F8	RADIATOR-----	1-K6		1-L9	RUBBER, MOUNT-----	2-F4
PLATE(R), CLOSING-QTR PANE	2-L13	PLUG, STOPPER-----	1-G10	RAIL(L), GUIDE-----	3-N5		2-L4	RUBBER, MOUNT-DIFF. CASING	2-L7
PLATE(R), CLOSING-R. FENDER	2-F13		1-H10	RAIL(L), RAIN-----	2-H13		3-D4	RUBBER, MOUNT-HYD. UNIT---	2-L7
PLATE(R), CORNER-----	3-I9	PLUG 'A', BLIND-S. SPOILER--	2-M13	RAIL(L), ROOF-INNER-----	2-G13		3-G6	RUBBER, MOUNTING-----	1-C9
PLATE(R), FRONT SCUFF-----	3-I9	PLUG 'B', BLIND-S. SPOILER--	2-M13	RAIL(R), GUIDE-----	3-N5	RING, 'O'-ACCUM. CLUTCH---	1-L9		1-H4
PLATE(R), GUIDE-----	3-D6	PLUNGER, CONTROL-----	1-C6	RAIL(R), RAIN-----	2-F13	RING, 'O'-ACCUM. FOR. CLUT	1-M9		1-H6
PLATE(R), POSITION-S. ROOF	3-C6		1-H3	RAIL(R), ROOF-INNER-----	2-E13	RING, 'O'-FUEL PUMP-----	2-K6		2-C5
PLATE(R), STRUT BAR-----	2-C13	POCKET(L), QTR. TRIM-----	3-J10	RECTIFIER-----	1-H8	RING, 'O'-INJECTOR-----	1-K4		2-F4
PLATE, ABSORBER-----	1-F4	POCKET(R), QTR. TRIM-----	3-J10	REFRIGERANT DRUM-----	3-I4	RING, 'O'-INLET MANIFOLD---	1-H4		2-F5
PLATE, BACKING-----	1-C9	POLE, ANTENNA-----	3-I7	REGULATOR(L), WINDOW-----	3-H3	RING, 'O'-INNER-----	1-M3		2-J4
PLATE, BAFFLE-----	1-I9	PRESSURE RG., FUEL-----	1-L4	REGULATOR(R), WINDOW-----	3-H3	RING, 'O'-MASTER CYL-----	2-H7		2-N3
	2-K3	PROTECTOR-----	1-J4	REGULATOR, PRESSURE-----	1-C6	RING, 'O'-NO. 1-----	3-M4	RUBBER, REAR-ET/ED COMBI.-	3-E7
PLATE, CAM-----	2-D5		2-C8	REGULATOR, VOLTAGE-----	1-H8	RING, 'O'-NO. 3-----	3-G5	RUBBER, SEAL-----	1-H7
	2-F4		2-C14	REINF. (L), BELT LINE-C.PIL	2-F13	RING, 'O'-NO. 3-----	3-G5		3-L7
PLATE, CAUTION-----	3-I10		2-F6	REINF. (L), COWL SIDE-----	2-G13	RING, 'O'-OIL LEVEL SENSOR	3-G6	RUBBER, SEAL-FRESH AIR DUC	1-M4
PLATE, CLAMP-----	2-J4	PROTECTOR(L), COWL GRILLE--	2-H10	REINF. (L), F. PILLAR INNER	2-E13	RING, 'O'-OUTER-----	1-M3	RUBBER, SEAL-RR LOWER ARM-	2-E4
PLATE, CRANKSHAFT PULLEY---	1-J3	PROTECTOR(L), DRIP MLDG-----	2-M10	REINF. (L), FLOOR SIDE-----	2-G13	RING, 'O'-PRESSURE REGU.---	1-L4	RUBBER, SEAL-SIDE PANEL---	2-J15
PLATE, DISC-----	2-E3	PROTECTOR(L), FENDER-----	2-D11	REINF. (L), HINGE-----	2-G13	RING, 'O'-TENSION BOLT-----	1-G3	RUBBER, STAB-FRT-----	2-F5
	2-M4	PROTECTOR(L), RETRA. H/L-----	2-D11	REINF. (L), REAR PILLAR IN.	2-G13	RING, 'O'-UP. ACCUM 2ND PIS	1-L9	RUBBER, STOPPER-----	3-H3
PLATE, DISHED-----	1-L10	PROTECTOR(L), RR. COMB-----	2-M11	REINF. (L), REAR PILLAR IN.	2-H13	RING, 'O'-WATER THERMO SW.	3-G6		
PLATE, DRAIN PLUG-UNDER C.	1-G7	PROTECTOR(L), STRUT BAR-----	2-C13	REINF. (L), ROOF RAIL-----	2-H13	RING, BACKUP-----	1-D3		
PLATE, DRIVE-----	1-C9	PLATE, ABSORBER-----	1-F4	REINF. (L), SIDE SILL-----	2-H13	RING, ILLUMINATION-----	3-J6		
	1-D11	PLATE, BACKING-----	1-C9	REINF. (L), SUSPENSION HSG-	2-G13	RING, RETAINING-----	1-C8		
	1-M10	PLATE, BAFFLE-----	1-I9	REINF. (R), WHL. APRON-----	2-H12		1-L7		
PLATE, DRIVEN-----	1-F11	PLATE, CAM-----	2-D5	REINF. (R), BELT LINE-C.PIL	2-F13		2-E3		
	1-G11	PLATE, CAUTION-----	3-I10	REINF. (R), COWL SIDE-----	2-F13	RING, RETAINING-BALL BEARI	1-K7		
	1-L10	PLATE, CLAMP-----	2-J4	REINF. (R), F. PILLAR INNER	2-E13	RING, SEAL-----	1-D9	SCREEN(L), FRONT DOOR-----	3-I3
	1-N10	PLATE, CRANKSHAFT PULLEY---	1-J3	REINF. (R), HINGE-----	2-E13		1-E9	SCREEN(R), FRONT DOOR-----	3-H3
PLATE, DRIVEN-FRONT-----	1-D11	PLATE, DISC-----	2-E3						

CAT. AUF05-03

E-005

3-F12

ALPHABETICAL INDEX *** ENGLISH ***

SCREW-----	2-F10	SENSOR, IN. AIR TEMP-----	3-H6	SPACER-----	1-H11	SPRING 'V', REAR BRAKE-----	2-G3	TANK & MOTOR, WASHER-----	2-J10
SCREW, KNOCK-----	3-H5	SENSOR, KNOCK-----	3-I6	SPACER, BONNET STAY-----	1-K3	STABILIZER, FRONT-----	2-F5	TANK, AIR SEPARATE-----	1-L6
SCREW SET-----	3-L5	SENSOR, M. A. P.-----	3-G6	SPACER, CONTROL CABLE-----	1-K7	STABILIZER, RR-----	2-D4	TANK, CATCH-----	1-J5
SCREW SET, THROTTLE BODY-----	1-H8	SENSOR, OIL LEVEL-----	3-G6	SPACER, DOWNEL-----	1-L7	STARTER-----	1-J8	TANK, FUEL-----	2-K6
SCREW, BACK LAMP-----	1-J8	SENSOR, OXYGEN-----	3-H6	SPACER, WINDOW-----	2-C5	STATOR-----	1-L8	TANK, LIQUID-----	3-I4
SCREW, BLEEDER-----	1-L8	SENSOR, REVOLUTION-----	3-I6	SPEAKER(L), LOUD-DOOR-----	2-E10	STAY(L), DAMPER-----	1-H8	TANK, SUB-RADIATOR-----	3-L4
SCREW SET, ADJUST-----	3-L10	SENSOR, STEERING PRESSURE-----	2-L4	SPEAKER(R), LOUD-DOOR-----	2-G7	STAY(R), DAMPER-----	3-J5	TANK, WASH-----	1-L6
SCREW, CHANGE LEVER KNOB-----	1-C5	SENSOR, TEMP. - ENG. COOLANT-----	1-L4	SPEAKER, FRONT-----	2-M3	STAY, BONNET-----	3-I5	TANK, WASH-FRONT-----	2-J10
SCREW, COOLING UNIT-----	2-H11	SENSOR, THROTTLE POSITION-----	3-H6	SPEAKER, REAR-----	2-N3	STAY, LOCK-BONNET-----	2-J12	TANK, WASH-REAR-----	3-I8
SCREW, DOOR SWITCH-----	2-N10	SENSOR, WATER LEVEL-----	1-D5	SPEEDOMETER-----	3-D7	STEM, PISTON-----	2-J12	TANK, WASH-RR WIPER-----	3-N8
SCREW, F. FOG LAMP-----	2-M11	SEPARATOR, LIQ. VAPOR-----	1-L6	SPINDLE, ADJUSTER-----	2-J12	STOPPER-----	1-J9	TAPE, PROTECTOR-STOPPER-----	3-C9
SCREW, FRONT FOG LAMP-----	2-G6	SET, TANK-----	2-M6	SPINDLE, SELECT-----	1-I11	STOPPER SET-----	2-C5	TAPE, SEAL-SDG. ROOF FRAME-----	3-J8
SCREW, FUEL DIS-----	2-I3	SHADE, SUN-----	2-G7	SPINDLE, SELECT LOCK-----	1-I11	STOPPER, BUMP-----	2-C6	TAPE, SEAL-SDG. ROOF NOZZLE-----	3-I5
SCREW, GROMMET-----	2-N4	SHAFT-----	3-D6	SPOILER(L), SIDE-----	2-N3	STOPPER, CALIPER-RR-----	2-N3	TERMINAL-----	2-N15
SCREW, ID. ADJUST-TH. BODY-----	2-E8	SHAFT, CLUTCH-----	1-G11	SPOILER(R), SIDE-----	1-J8	STOPPER, CONNECTOR-----	1-J8	TERMINAL, BACK WIND. GLASS-----	1-M9
SCREW, LAMP-----	3-G5	SHAFT, CYL - COMPRESSOR-----	1-M8	SPRINGER-----	3-I7	STOPPER, FILLER LID-----	1-H6	TERMINAL, SET-----	1-I8
SCREW, REAR SIDE-----	3-C7	SHAFT, DRIVE-----	1-M8	SPRING SET-----	3-I7	STOPPER, LOWER ARM-----	2-C7	THERMOSTAT-----	1-J6
SCREW, RR. COMB-----	2-H12	SHAFT, DRIVE NO. 1-----	3-D5	SPRING SET, THROTTLE BODY-----	2-F15	STOPPER, RAMP-----	2-F4	THERMOSTAT, COOLING UNIT-----	3-F5
SCREW, TAPPING-----	3-L10	SHAFT, DRIVE NO. 2-----	3-M4	SPRING(L), LEVER-----	2-H3	STOPPER, RTR-STR-GEAR-----	2-K4	TIRE-----	3-G5
SEAL & BOOT SET, CAL. RR-----	1-C5	SHAFT, DRIVEN GEAR-----	3-M4	SPRING(R), LEVER-----	1-H7	STOPPER, WHEEL-----	3-D10	TIRE & AIR VALVE-----	2-G5
SEAL KIT-----	2-I11	SHAFT, ECCENTRIC-----	2-D3	SPRING, ACCUMULATOR-----	1-H7	STRAINER-----	2-L4	TRAY, ASH-----	2-H5
SEAL KIT, CALIPER-FRT-----	2-N11	SHAFT, ENGY. ABSORBER-----	3-K8	SPRING, ADJUST-----	3-L10	STRAINER, OIL-----	1-C6	TRAY, BATTERY-----	2-L15
SEAL KIT, ST. GEAR-----	2-N11	SHAFT, INPUT-----	1-J3	SPRING, APEX SEAL-----	1-D10	STRAP, AIR PUMP-----	1-D10	TRAY, REAR PACKAGE-----	1-N8
SEAL KIT, VANE PUMP-----	2-L11	SHAFT, INTERMED.-----	1-D6	SPRING, AUDIO-----	3-H9	STRAP, ALTERNATOR-----	3-H9	TRIM(C), FRT BAG-----	3-H9
SEAL SET, OIL-----	2-G11	SHAFT, MAIN-----	1-J3	SPRING, BACK UP LAMP-----	1-E5	STRIPER-----	1-F8	TRIM(C), FRT BAG-----	2-K16
SEAL, 'O' RING-----	2-J15	SHAFT, MANUAL-----	2-T4	SPRING, BRUSH-----	1-F8	STRIPER, LOCK-----	2-I15	TRIM(L), 'A' PILLAR-----	2-L16
SEAL, APEX-----	2-N15	SHAFT, OIL PUMP-----	1-E9	SPRING, CENTER PANEL-----	1-D8	STRUT, BAND-----	3-H3	TRIM(L), DOOR-----	3-G9
SEAL, CORNER-----	3-C3	SHAFT, PARKING PAWL-----	2-T4	SPRING, CLUTCH CYL-----	1-D9	STRUT, BAND-----	3-I5	TRIM(L), FRONT SIDE-----	3-L3
SEAL, DUST-BALL JOINT-----	3-G3	SHAFT, PROPELLER-----	1-H11	SPRING SET, THROTTLE BODY-----	1-G7	STUD-----	3-I9	TRIM(L), LIFT GATE-SIDE-----	3-J5
SEAL, FLANGE-----	2-N6	SHAFT, PULLEY-----	1-H11	SPRING(S), LEVER-----	1-I3	STUD, HOUSING-----	1-D4	TRIM(L), QUARTER-----	3-K10
SEAL, LAMPE CUT-----	3-H3	SHAFT, REV. IDLE GEAR-----	1-E8	SPRING(L), LEVER-----	1-I11	STUD, HOUSING-----	1-F9	TRIM(L), SEAT BACK-----	2-K16
SEAL, MANUAL SHAFT LEVER-----	2-G3	SHEET-----	1-N6	SPRING(R), LEVER-----	2-G6	SUN VISOR(L)-----	1-G3	TRIM(L), SEAT CUSHION-----	2-J16
SEAL, OIL-----	2-H6	SHEET, FRT DAMPER-----	1-L7	SPRING, ACCUMULATOR-----	1-D4	SUN VISOR(R)-----	2-G6	TRIM(L), TRUNK SIDE-----	3-J9
SEAL, RING-----	2-N4	SHEET, RUBBER-----	3-H3	SPRING, ADJUST-----	2-L15	SUPPORT, EX. MANIFOLD-----	1-D4	TRIM(R), 'A' PILLAR-----	3-G9
SEAL, SHIM, WATER PIPE BRACKET-----	2-J4	SHEET, SPRING-----	2-C5	SPRING, APEX SEAL-----	2-L7	SUPPORT, HOUSING-----	1-G3	TRIM(R), DOOR-----	3-L3
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHEET, TUBE-----	2-N3	SPRING, AUDIO-----	1-G3	SUPPORT, MOUNTING-----	3-F10	TRIM(R), FRONT SIDE-----	3-I9
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, ADJUST-----	1-C8	SPRING, BACK UP LAMP-----	3-F10	SUPPORTER, ACTUATOR-----	3-F10	TRIM(R), LIFT GATE-SIDE-----	3-J5
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, ADJUST-COUNTER SHAFT-----	1-C10	SPRING, BRUSH-----	2-C11	SW. PRESSURE-LIQUID TANK-----	1-H11	TRIM(R), QUARTER-----	3-K10
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-17	SPRING, CLUTCH COLLAR-----	1-K8	SWITCH-----	1-K8	TRIM(R), SEAT BACK-----	2-I16
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-17	SPRING, COIL-FRONT-----	1-K8	SWITCH, AUTO-CRUISE-----	2-E15	TRIM(R), SEAT CUSHION-----	2-H16
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-K3	SPRING, COIL-REAR-----	2-K15	SWITCH, BACK UP LAMP-----	3-G6	TRIM(R), TRUNK SIDE-----	3-J9
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-L3	SPRING, CORNER SEAL-----	3-G6	SWITCH, BACK UP LAMP-----	3-G6	TRIM, LIFTGATE-LOWER-----	3-K5
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-L7	SPRING, CORNER SEAL-----	3-G6	SWITCH, CLUTCH-----	2-H4	TRIM, LIFTGATE-UPPER-----	3-K5
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	3-H3	SPRING, CORNER SEAL-----	3-G6	SWITCH, CLUTCH CUT-----	3-G6	TRIM, SLIDING ROOF-----	3-C6
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-C5	SPRING, CORNER SEAL-----	3-G6	SWITCH, COMBINATION-----	2-D7	TRIM, TRUNK END-----	3-K9
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-N3	SPRING, CORNER SEAL-----	3-G6	SWITCH, DOOR-----	3-G6	TUBE, BACK UP LAMP-----	2-M11
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C8	SPRING, CORNER SEAL-----	3-G6	SWITCH, FAN-HEATER CONTROL-----	3-G6	TUBE, CORRUGATE-----	3-I8
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C10	SPRING, CORNER SEAL-----	3-G6	SWITCH, FOG-FRONT-----	3-G6	TUBE, HEAD LAMP-----	2-G11
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, FOG-FRONT-----	3-G6	TUBE, LAMP-FRONT COMB.-----	2-N10
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, GLOVE TRAY-----	2-D7	TUBE, METERING OIL-----	1-D6
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-K3	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TUBE, OIL FILTER-UPPER-----	1-L9
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C8	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TUBE, OIL LEVEL-----	1-E4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C10	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TUBE, VACUUM-----	1-K5
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-L5
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-M5
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-K3	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C8	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C10	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-K3	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C8	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C10	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-K3	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C8	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C10	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-K3	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C8	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C10	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-K3	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C8	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C10	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-K3	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C8	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C10	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-K3	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C8	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C10	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-K3	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C8	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C10	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-K3	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C8	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C10	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-17	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	2-K3	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C8	SPRING, CORNER SEAL-----	3-G6	SWITCH, HAZARD-----	2-D7	TURBOCHARGER-----	1-F4
SEAL, SHIM, WATER PIPE BRACKET-----	1-K9	SHIM, LOWER PANEL FRONT-----	1-C10	SPRING, COR					

ALPHABETICAL INDEX *** ENGLISH ***

***** * V * *****		WASHER, SPEAKER----- 3-M7 WASHER, SPRING----- 2-G3 WASHER, STOP----- 2-I4 WASHER, THRUST----- 1-D9 1-G11 1-J7 1-K3 1-K7 1-M7
VACUUM POWER ASSIST----- 2-G7 VALVE----- 1-G10 VALVE, ACCUMULATOR----- 1-C10 VALVE, AIR----- 2-G5 VALVE, AIR BYPASS----- 1-I4 1-N4 VALVE, AIR CONTROL----- 1-E5 VALVE, CHECK----- 1-E5 1-J5 2-D6 2-M6 3-I8		WASHER, THRUST LOCK-OVER T 1-M7 WASHER, THRUST-REVERSE IDL 1-L7 WASHER, TOOTHED----- 3-M8 WASHER, TRUST----- 1-K10 WASHER, WAVE-CHANGE CONT.C 1-D8 WAX, THERMO----- 1-C5 WEATHERSTRIP(L), DOOR----- 3-F3 WEATHERSTRIP(L), DOOR-LOW. 3-E3 WEATHERSTRIP(L), INN.----- 3-J3 WEATHERSTRIP(R), DOOR----- 3-F3 WEATHERSTRIP(R), DOOR-LOW. 3-E3 WEATHERSTRIP(R), INN.----- 3-J3 WEATHERSTRIP, BONNET-REAR- 2-K12 WEATHERSTRIP, S/ROOF----- 3-D6 WEDGE, LIFTGATE----- 3-I5 WEIGHT, BALANCE----- 1-K3 WEIGHT, COUNTER----- 1-K3 WEIGHT, DISC WHEEL-ALUMI-- 2-G5
VALVE, CONTROL----- 1-C10 1-I4 VALVE, CONVR RELIEF----- 1-G10 VALVE, DUTY SOLENOID----- 1-C4 VALVE, E. G. R.----- 1-K5 VALVE, EXPANSION----- 3-F5 3-G5		WELT(L), SEAMING----- 3-F3 WELT(R), SEAMING----- 3-F3 WELT, SEAMING----- 3-N5 WHEEL, DISC-ALUMI.----- 3-H5 WHEEL, FLY----- 1-J3 WHEEL, SPROCKET----- 1-C6 WIRE----- 2-H5 WIRE, A. C. C.----- 3-D7 WIRE, EARTH----- 3-D8 WIRE, EARTH-FILLER PIPE----- 2-L6 WIRE, EARTH-HYD. UNIT----- 2-M7 WIRE, EARTH-REAR DEFFOGGER- 3-L7 WIRE, RELEASE----- 2-G16 WIRE, RELEASE-BONNET----- 2-J12 WIRING, ENGINE----- 3-C8 WIRING, FLOOR----- 3-8B WRENCH, HUB NUT----- 3-D10 WTHSTP, LIFT GATE----- 3-I5 WTHSTP(L), GLASS-F. DOOR-- 3-F3 WTHSTP(R), GLASS-F. DOOR-- 3-E3
VALVE, EXTRACT CHAMBER--- 2-I12 VALVE, FUEL VAPOR----- 2-M6 VALVE, IDLE AIR CONTROL--- 1-M5 VALVE, LOCK UP CONTROL--- 1-H10 VALVE, MANUAL----- 1-C10 VALVE, MODIFIER----- 1-C10 VALVE, NON RETURN----- 2-L6 VALVE, ORIFICE CHECK----- 1-C10 VALVE, P. B.----- 2-M7 VALVE, P. C. V.----- 1-J5 VALVE, RELIEF----- 3-D5 3-N4 VALVE, SHIFT----- 1-F10 1-G10		***** * Y * *****
VALVE, SOL.-AIR BLEED EXTE 1-I5 VALVE, SOLENOID----- 1-E5 1-F5 1-J5 VALVE, SOLENOID-A. C. VALVE 1-E5 VALVE, SPOOL----- 1-H10 VALVE, ST. GEAR----- 2-K4 VALVE, 3RD LOCK UP----- 1-H10 VALVE, 3WAY----- 1-I5		YOKE----- 1-J8 1-L8 YOKE SET, SUPPORT-ST. GEAR 2-J4
***** * W * *****		
WALL(L), SIDE----- 2-K15 WALL(R), SIDE----- 2-K15 WARNING, HEAT----- 2-K15 WASHER----- 1-D10 2-D11 2-E8 2-F6 2-G16 2-J3 2-J4 3-C5 3-E5 3-M8		
WASHER SET----- 1-J8 1-L8 WASHER, HYD. UNIT----- 2-L7 WASHER, LOCK-PUMP FILTER-- 2-K6 WASHER, PLAIN----- 1-F11 1-J9 1-L9 2-E3		
WASHER, PLAIN-LOWER ARM--- 2-M6 WASHER, PLAIN-REAR BRAKE-- 2-E3 WASHER, SEAL----- 1-H3 WASHER, SETTING----- 3-D3 WASHER, SLEEVE-REAR BRAKE- 2-C5 2-E3 2-E4		

MODEL IDENTIFICATION

This parts catalog has been compiled to cover the following models.

(1/1)

Model No.	Specifications of vehicles																			VIN (Chassis No.)						
	Basic spec.	Eng ine	Turbo	T/ mission	Speed		Body	Roof			Susten sion		Diff.	Brake	Airbag	Production period		Model year	U.S.A.			Guam & Saipan				
	U.S.A.	RE 13B	Turbo	Manual	Automatic	4 speed	5 speed	Coupe	W/O sun roof	Steel sun roof	Glass sun roof	Normal suspension	Hard suspension	Limited slip diff.	Antilock brake system	Air bag	From	To	1994		Production for U.S.A.	Grade	Production for Guam & Saipan	Grade	Grade	
	(US)	(13)	(TR)	(MT)	(AT)	(4S)	(5S)	(CP)	(W/O SR)	(ST)	(GS)	(NS)	(HS)	(LS)	(AL)	(AB)					Yes	(BS)	(R2)	(TR)	(BS)	(R2)
FD15	US	13	TR	MT		5S	CP	W/O SR			NS	LS	AL	AB	Aug '93	Jul '94	→	→	Yes	BS		Yes	BS		FD333+ - 300001-310000	
FD16	US	13	TR	MT		5S	CP	W/O SR			HS	LS	AL	AB	Aug '93	Jul '94	→	→	Yes		R2	Yes		R2	FD333+ - 300001-310000	
FD17	US	13	TR		AT	4S	CP	W/O SR			NS	LS	AL	AB	Aug '93	Jul '94	→	→	Yes	BS		Yes	BS		FD333+ - 300001-310000	
FD18	US	13	TR	MT		5S	CP			GS	NS	LS	AL	AB	Aug '93	Jul '94	→	→	Yes			TR	Yes		TR	FD333+ - 300001-310000
FD19	US	13	TR		AT	4S	CP			GS	NS	LS	AL	AB	Aug '93	Jul '94	→	→	Yes			TR	Yes		FD333+ - 300001-310000	
FD30	US	13	TR	MT		5S	CP		ST		NS	LS	AL	AB	Aug '93	Jul '94	→	→	Yes	BS		Yes	BS		FD333+ - 300001-310000	

AUFA05

BODY PAINTS AND INTERIOR COLORS

THIS LIST SHOWS COMBINATION OF BODY PAINT AND INTERIOR COLOR. USING THIS LIST YOU WILL BE ABLE TO FIND OUT NECESSARY COLOR CODE OF PART YOU NEED IN THE TEXT.

BODY PAINT		INTERIOR COLOR CODE		
NAME	CODE			
Brilliant black	PZ	F E 5	F E 6	F E 7
Vintage red	NU	F E 5	F E 6	
Silver stone metallic	3L	F E 5		F E 7
Montego blue metallic	M8	F E 5	F E 6	
Chaste white	PT	F E 5	F E 6	F E 7

NOTE:
COLORS OF INTERIOR CODES
ARE AS FOLLOWS.

FE5	Black
FE6	Tan
FE7	Red

AUFA05

COMPLETE ASSEMBLY PARTS NUMBERS

Engine

Specifications of vehicles		Parts number
T/mission	Suspension	
Manual T/mission	Normal suspension	N3C5 - 02 - 000
	Hard suspension	N3C1 - 02 - 000
Automatic T/mission	※	N3C2 - 02 - 000

T/mission

(1/1)

Specifications of vehicles	Parts number
T/mission	
Manual T/mission	R564 - 03 - 000
Automatic T/mission	BV65 - 19 - 090H

Cabin


Specifications of vehicles		Parts number
Roof	Suspension	
W/O sunroof	Normal suspension	FD15 - 07 - 000
	Hard suspension	FD16 - 07 - 000
Steel sunroof	※	FD30 - 07 - 000
Glass sunroof		FD18 - 07 - 000

The ※ mark in the above chart does not affect on part number selection.
Complete assemblies are available and manufactured in accordance with current production specifications only.

AUFA05

VEHICLE IDENTIFICATION SYSTEM FOR RX-7 SERIES (1994)

VIN (= Vehicle Identification Number) for RX-7series (1994 - Year Model) consists of WMI(= World Manufacturer Identifier), VDS(= Vehicle Description Section) and VIS(= Vehicle Identification Section). VDS consisting of six alphanumeric characters denotes the "MODEL SERIES". VIS consisting of eight alphanumeric characters denotes the serial unit number of vehicle and is sequentially numbered within each VDS.

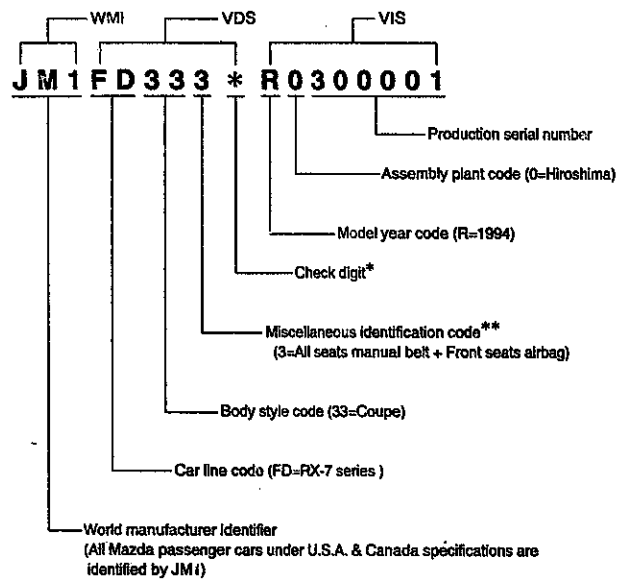


* Check digit is included as a VIN security feature to permit law enforcement verification of the authenticity of a suspected illegal VIN plate. This single digit number is determined, based upon a complex mathematical formula which is applied to each vehicle's VIN number.

** Miscellaneous Identification Code identifies major components such as engine, brake system, cab type, etc.

LOCATION OF VIN PLATE

The plate is attached to the top ledge of the dash panel under the bonnet(engine hood), refer to the illustration shown right.

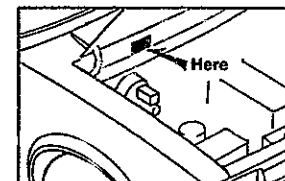

[Note]

If the VIN(Chassis) reference number in the PCM(Parts Catalog Microfiche) appeared as:

FD333 * - 300001

...the vehicle's VIN would be e.g. JM1FD333*R0300001.

ABBREVIATIONS

The following abbreviations are used throughout Mazda Microfiche parts catalog: in the illustration, text, section number index, alphabetical index.

Abbreviation	Definition	Abbreviation	Definition	Abbreviation	Definition	Abbreviation	Definition	Abbreviation	Definition	Abbreviation	Definition
1ST	First	B.S.V.	Bleed Solenoid Valve	DIFF.	Differential	H	Head	L/EM	Less Emission Controls	..P	Panel
2ND	Second	BTHR	Breather	DISC/B	Disc Brake	HARN.	Harness	L.H.D.	Left Hand Drive	(P)	Primary
2D.	2-Door	BUMP.	Bumper	DIST	Distributor	H.A.C.	High. Altitude Compensator	L.H. SIDE	Left Hand Side	PARK or PARKG	Parking
2-SEAT	2-Seater	BURG.	Burglar	DMPR	Dumper	H.A.COMPENSATOR	High. Altitude Compensator	LKOUT	Lock-out	PASS.	Passenger
3D.	3-Door	BY.A.C.V.	Bypass Air Control Valve	DOHC	Double Overhead Camshaft	HS	Hatchback	L. NOSE	Long Nose	P.B.	Proportioning Brake
3PD	Third	[C]	Center	D.P.	Dual Proportioning	H.B. RE	Hatchback Release	L/NVGT. CPU	Less Navigation computer	P.C.V.	Positive Crankcase Ventilation
3-SP	3-Speed	C. or (C)	Center	DRUM/B	Drum Brake	HC-A/T	Hydro Control Automatic T/Mission	L.O.	Low	PHLPPNS	Philippines
4D.	4-Door	CALIF.	California	D/TIRE or D.TIRE	Double Tire (+Dual Tire)	H/DUTY	Heavy Duty	L.S. VALVE	Load Sensing Valve	PILR.	Pillar
4-SP or 4-SPD	4-Speed	C/AREA	Cold Area	D.T. TOP	Detachable Top	HEA. or HEAT.	Heater	L/PARTITION	Less Partition	PV	Pivot
4S-SP	4-Speed/5-Speed	CAN.	Canada	DUMP.	Dump Truck	H/L	High -	L.P.G.	L.P. Gas (+Liquefied Petroleum Gas)	PKG.	Package
4TH	Fourth	CARB.	Carburetor	DX.	Deluxe	H/LT	High Altitude	L.S.D. or L.S. DIFF	Less Slip Differential	PNEUMA.	Pneumatic
5D.	5-Door	CAT	Catalyst	D. YLW	Dark Yellow	H/LTI	Head Injury Criteria	..L.T.	..Liter(s) Tank	PNL	Panel
5-LINK	5-Link Suspension	C.DISC	Compact Disc	[E]	Economic Commission for Europe	HIGHT	High-Tension	L/TAILGATE	Less Tailgate	PNT	Point
5-SP or 5-SPD	5-Speed	CE	Conventional Engine (+Reciprocating Gasoline Engine)	ECON.	Economy	H/L or H.L. or H/LAMP	Head Lamp	LVR	Lever	POSI.	Position
10TH-ANNIV.	10th-Anniversary	C.G.R.	Constant Gear Ratio	E.C.P.S. SYS	Electric Control Power Steering System	H.KONG	Hong Kong	LWR	Lower	POW. WINDOW	Power Window
[A]	..Ampere	CH	Coach	EGI	Electric Gasoline Injection	HNGR	Hanger	LX-P	LX with Performance Package	P.P.	Polypropylene (Plastics)
A.A.S. or A.A.SUSP	Automatic Adjusting Suspension	CHG	Change	EGR.	Exhaust Gas Recirculation	..HP	..Horsepower(s)	[M]	..Meter(s)	PRESS	Pressure
ABS	Absorber	CHMBR	Chamber	ELECT.	Electric	H.P.R.	High Penetration	..M	..Miles	PROTN	Protection
A.B.S.	Anti lock Brake System	CHK	Check	E.M.	Emission Controls	HSG	Housing	MA. CYL	Master Cylinder	PROTR	Protector
A.B.S.V.	Air Bleed Solenoid Valve	CLG.	Cooling	ENEGY or ENGY	Energy	HT. HT or H/TOP	Head Top	MAINT.	Maintain or Maintenance	PORTGL	Portugal
A.C.	Air Conditioner	CLNR	Cleanse	ENGL	Engine	H/WI	Hawai	MAP	Manifold Absolute Pressure	P.S.	Power Steering
A.C.C.	Automatic Cruise Controls	CLTR	Cigarette Lighter	ENQZ	Equalizer	[I]	..Inch	MAP	Multi-Adjustable Suspension	P-SOUND	Premium Sound
ACCEL	Accelerator	CLU	Clutch	EQUIP.	Equipment	[J]	..Inch	M.A. SUSP	Multi-Adjustable Suspension	PSIN	Piston
ACTR	Actuator	..CM	..Centimeter (s)	EX.	Exhaust	ID.	Inner Diameter	MA. EAST	Middle East	PTC	P- drive Temperature Coefficient
A.C.V.	Air Control Valve	C.MEMBER	Crossmember	EXC.	Except	IG or IGN.	Ignition	M. EAST	Middle East	P.T.O.	Power Take Off
ADJ.	Adjuster or Adjustable or Adjusting	CNTNR	Container	EXC.10TH-ANNIV.	EXC.10th-Anniversary	IL.	Island	MFR	Maintenance Free	PU	Pickup
ADJ.SUSP	Adjustable Suspension	COMB.	Combination	EXT.	Extension	ILLUM.	Illumination	MIR	Mirror	P/W or P. WINDOW	Power Window
AIR P.	Air Pipe	COMP.	Companion	EXTRACT.	Extractor	IN.	Inlet	MIR	Mirror	PWRGT LIFTR	Power Gate Lifter
AIR CON.	Air Conditioner	COMPR	Compressor	[F]	Front-	IND.	Indicator	MLD. or MLDG.	Moulding	PWT.	Powertrain
ALTN	Alternator	COMPS.	Compass	..F	..Foot	INHIB.	Inhibitor	..MM	..Millimeter(s)	[Q]	Quarter
ALUM.	Aluminum	CONDNSH	Condenser	FED.	Federal	INJ.	Injection	M.P.	Multiport	QTY	Quantity
AMP.	Amplifier	CONN.	Connector or Connecting	FINS	Finisher	INM.	Inner	MPL.	Multiple	[R]	Final Gear Ratio
ANALOG	Analogue	CONNS.	Consoles	F.I.P.	Fuel Injection Pump	INS.	Insulation	MRFN	Maroon	RE	Right
ANNIV.	10th Anniversary	CONT.	Control	FLEX	Flexible	INSP.	Inspection	MT. & MTG.	Mounting	..R or (R)	.. Right
ANT	Antenna	CONV.	Conventional	F.L.P.	Fuel Injection Mixer	INST.	Instrument	MT	Manual Transmission	RAD.	Radiator
ARG	Argent	CONVR	Converter	FLEX	Flexible	INT.	Interior	N-	Number of Teeth	RE	Rotary Engine
A.S. ABSORBER	Adjust Shock Absorber	COVR.	Cover	F.I. MIXER	Fuel Injection Mixer	INT.COOLER	Inter Cooler	NARR.	Narrow	RECIPRO	Reciprocating Engine (+Conventional Engine)
ASH.	Ashtray	CPE	Coupe	FDX.	Folding	INTER	Intermittent	N.O.	Normal Close	REFRIGER.	Refrigerator Van
ASSY	Assembly	CPT.	Complete Assembly	F.LID	Filler Lid	INTMT. or INTERMIT.	Intermittent	N.O.	Normal Open	REG. or REGU.	Regular
AT	Automatic Transmission	CPU	Computer	F.LID	Filler Lid	I.R.S. or I.R. SUSP	Independent Rear Suspension	NON-SP.	Non-Special Equipment	REG. GAS	Regular Gasoline
ATT	Attachment	C.P.UNIT	Central Processing Unit	F.LID	Filler Lid	I.S.C.	Idle Speed Control	NON-TILT	Non-Tilting	REGUL.	Regulator
AUS	Austria	CRK	Crank	F.LID	Filler Lid	IVRY	Ivory	NOR.	Normal	REL.	Release
AUST.	Australia	CRUST	Crust	F.LID	Filler Lid	[K]	..Kilogram(s)	NOZ.	Nozzle	REM. CON.	Remote Controlled
AUTO.	Automatic	C/SHIFT	Column Shift	F.LID	Filler Lid	..KM	..Kilometer(s)	NOZ.W.	New South Wales (Aust.)	RET.	Return
[B]	Balance	CTR.	Center	F.LID	Filler Lid	..KW	..Kilowatt(s)	NVGT. CPU	Navigation Computer	RETAIN.	Retaining
BAL.	Balance	CUSH.	Cushion	F.LID	Filler Lid	[L]	..Liter(s)	NZ.	New Zealand	RETRACT	Retractable
BAT	Battery	CYL	Cylinder	F.LID	Filler Lid	L or (L)	Left	[O]	Length =	REV.	Reverse
B.COLOR	Body Color	D. or DR	Door	F.LID	Filler Lid	L =	Length =	[O]	..Liter(s)	R.H.D.	Right Hand Drive
B/DOOR	Back Door	D=.	Double	F.LID	Filler Lid	..L	..Liter(s)	O	Outer Diameter	RICO	Puerto Rico
BDY	Body	DBL CAB	Double Cab (+Crew Cab)	F.LID	Filler Lid	..L.T.	..Liter(s) Tank	O.O.	Over Head	R.H. SIDE	Right Hand Side
BELT.	Beltline	D. BLUE	Dark Blue	F.LID	Filler Lid	L.	Less. (+Without.)	O.FLTR	Oil Filter	REINF.	Reinforcement
BLK	Black	D. BRN	Dark Brown	F.LID	Filler Lid	U/A.A. SUSP	Less Automatic Adjusting Suspension	O.H.	Over Head	R. or RR.	Rear
BLU	Blue	DE	Dark Diesel Engine	F.LID	Filler Lid	L/A.C.	Less Air Conditioner	OHC	Overhead Camshaft	[S]	..Side
BLU/GRY	Blue Gray	DEF.	Defroster	F.LID	Filler Lid	L/BODY	Long Body	OIL CONSUMP.	Oil Consumption	..S.	..Secondary
BLU. M	Blue Metallic	DEFG	Defogger	F.LID	Filler Lid	L/BOX	Long Box	OP	Optional	(S)	Safety
BLVA	Bolivia	DES	Design	F.LID	Filler Lid	L/BOX	Long Box	ORD. BY..	Order By..	S. AFRICA	South Africa
BRG.	Gearing	DEMST.	Demister	F.LID	Filler Lid	L/COMP	Luggage Compartment	G.S.	Over Size	SAUDI	Saudi Arabia
BRKT.	Bracket	D. GRAY	Dark Gray	F.LID	Filler Lid	L.C.DISPLAY	Liquid Crystal Display	G.T.	Over Top	S/BODY	Short Body
BRN	Brown	DIAPH	Diaphragm	F.LID	Filler Lid	LEG1	Less Electric Gasoline Injection	OUT.	Outer	S/BOX	Short Box
BRT.	Britain (+Great Britain)			[H]	..Horsepower(s)			[P]	..Panel		

Abbreviation	Definition	Abbreviation	Definition	Abbreviation	Definition
SDN	Sedan	U. LONG	Ultra Long		
SDUTY	Standard Duty	UND	Under		
SELECT.	Selective Use	UP	Upper		
SEN.	Sensor	URETANE	Urethane Rubber		
SERV.	Service	U.S.	Undersea		
S.FORK	Shift Fork	[V]			
SIG., SGN or SIG.	Signal	.V	..Volt(s)		
SHFT	Shift	.V.	Valve		
SHRD	Shroud	VAC.	Vacuum		
SHTR	Shutter	V.CHAMBER	Vacuum Chamber		
SILV. M or SILVER M.	Silver Metallic	Vent.	Ventilator or Ventilation		
SING	Singapore	V.G.R.	Variable Gear Ratio		
SILEN	Silencer	VNL	Vinyl		
SLDG	Sliding	[W]			
SLN	Sloon	.W	..Watt(s)		
SML	Small	W. or WIND	Window		
S. NOSE	Short Nose	W-	Width-		
SOL	Solenoid	W/.	With. or Use with		
SP.	Speed	W/L S. VALVE	W/O Load Sensing		
SPEC.	Specification	VALVE	Valve		
SPEEDO.	Speedometer	W/O OIL CONSUMP.	W/O Oil Consumption		
SPG.	Spring	W/O P.T.O.	W/O Power Take-Off		
SPK.	Speaker	WARN.	Warning		
	(-Loud-speaker)	WAS.	Washer		
SPLR	Spoiler	W/AUTO BELT	With Automatic		
ST.	Steering		Shoulder Belt		
STAB.	Stabilizer	W/CHASSIS	Windshield Chassis		
STD.	Standard	WAT	Water		
S/TIRE or S. TIRE	Single Tire	WGN	Wagon		
STYL	Styled	WHL	Wheel		
SUB-TRNS	Sub-transmission	WHT	White		
SUN SHLD	Sun Shield	WIND.	Window		
SURGT.	Surge Tank	WIP.	Wiper		
SUP. GAS	Super Gasoline	W/O AUTO BELT	Without Automatic		
SUSP	Suspension		Shoulder Belt		
S.V.	Solenoid Valve	W/O.	Without.		
SW.	Switch	WOOF.	Woofer		
S. WASHER	Screen Washer	W. PUMP	Water Pump		
	(Windshield Washer)	WSHLD or WNDSHLD	Windshield		
SWD.	Sweden	WSTR or WT:STP	Weatherstrip		
SYNC.	Synchronizer	W/T	With Tube (Tire)		
[T]		[Y]			
.T	..Ton(s)	YLW	Yellow		
T..	Thick - see..	YLW/GRN	Yellowish Green		
TACH. & TACHOM.	Tachometer	YLW/WHT	Yellowish White		
T.ADJUST	Time Adjusting	[Z]			
TACHOZ TACHOM.	Tachometer	Z.TEMP	Zone Tempered		
T.BELT	Timing Belt				
T/CEILING	Top Ceiling				
TEMP.	Temperature				
T/F	Transfer				
TH.	Throttle				
THAI	Thailand				
THERM.	Thermostat				
THROT.	Throttle				
T/L	Tubeless				
T/MISSION	Transmission				
TRD CLMT	Torrid Climates				
TRK	Truck				
TRO. GLIDE	Torque Glide				
T. TOBAGO	Trinidad and Tobago				
TURB.	Turbocharge				
TWIN	Twin				
[U]					
U.K.	The United Kingdom				