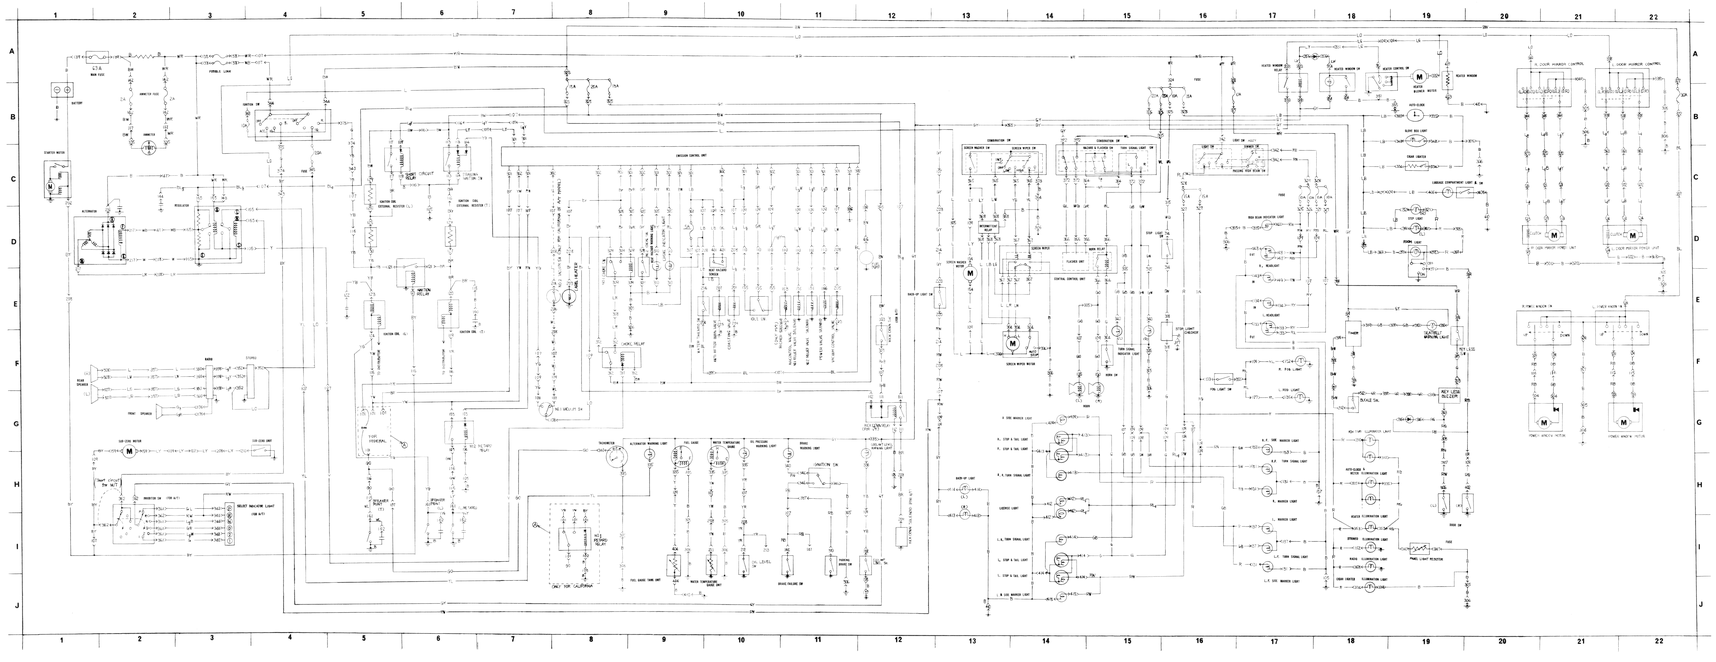

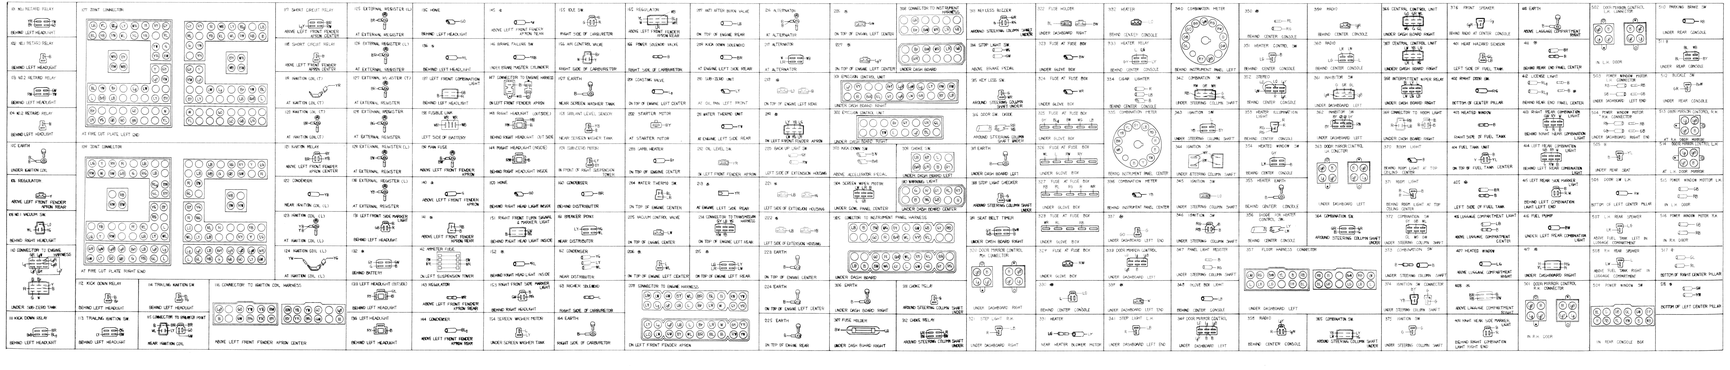

INDEX

COMPONENT	LOCATION
AIR CONTROL VALVE	E - 21
ALTERNATOR	E - 21	35
ALTERNATOR WARNING LIGHT	E - 21	35
AMMETER	E - 21	36
AMMETER FUSE	E - 21	36
ANTI-CAPACITANCE VALVE	E - 22	54
AUTO CLOCK	E - 24	85
BACKUP LIGHT		
LEFT	E - 23	90
RIGHT	E - 23	92
BACKUP LIGHT SW	E - 23	90
BATTERY	E - 21	1
BRAKE FAILURE SW	E - 21	37
BRAKE WARNING LIGHT	E - 21	37
BUZZER SW	E - 21	85
CARB. HEATER	E - 8	51
CENTRAL CONTROL UNIT	E - 24	84
CHOKE INDICATOR LIGHT	E - 9	81
CHOKE RELAY	E - 9	81
CIGAR LIGHTER	E - 23	87
COMBINATION SW		
RADIATO R FLASHER SW	E - 15	27
DIMMER WARNER SW	E - 15	
DIMMER WIPER SW	E - 16	
WIPER & WASHER SW	E - 16	
COOLANT LEVEL SW	E - 13	40
COOLANT LEVEL WARNING LIGHT	E - 13	55
CRANKING VALVE	E - 21	35
DISTRIBUTOR	E - 14, 6	38
DOOR SW		
L	E - 13	49
R	E - 13	51
DOOR MIRROR CONTROL	E - 24	84
L	E - 22	18
R	E - 22	19
EMISSION CONTROL UNIT	E - 23	84
EXTERNAL RESISTER	E - 14	39
FUEL GAUGE	E - 9	78
FUEL GAUGE TANK UNIT	E - 9	78
FUSE BOX	E - 21	30
FUSIBLE LINK	E - 21	30
FUEL PUMP	E - 23	90
GLOVE BOX LIGHT	E - 23	82
HEADLIGHT		
LEFT LO	E - 17	59
LEFT UP	E - 17	61
RIGHT LO	E - 17	60
RIGHT UP	E - 17	62
HEAT RAISING SENSOR	E - 23	73
HEAT RAISING WARNING LIGHT	E - 23	73
HEATED WINDOW	E - 23	77
HEATED WINDOW RELAY	E - 23	77
HEATED WINDOW SW	E - 23	86
HEATER BLOWER MOTOR	E - 23	86
HEATER BLOWER SW	E - 23	86
HIGH BEAM INDICATOR LIGHT	E - 17	57
HORN		
LEFT	E - 24	95
RIGHT	E - 24	96
HORN SW	E - 15	26
IDLE SW	E - 13	47
IGNITION COIL	E - 14	38
IGNITION RELAY	E - 14	35
IGNITION SW	E - 14	35
ILLUMINATION LIGHT		
CIGAR LIGHTER	E - 23	87
CIGAR LIGHTER	E - 23	87
HEATER	E - 23	70
RADIO	E - 23	70
STEREO	E - 23	70
INDICATOR SW	E - 15	74
INTERMITTENT RELAY	E - 23	83
KEYLESS BUZZER	E - 23	83
KICK-DOWN RELAY	E - 23	83
KICK-DOWN SOLENOID	E - 23	83
KICK-DOWN SW	E - 23	84
LICENSE LIGHT	E - 17	94
LIGHT SW	E - 15	25
LUGGAGE COMPARTMENT LIGHT & SW	E - 23	75
MAIN FUSE	E - 21	1
MARKER LIGHT		
LEFT	E - 17	67
RIGHT	E - 17	67
NO. 1 CHOKE SW	E - 9	80
NO. 2 CHOKE SW	E - 9	80
NO. 3 CHOKE SW	E - 9	80
NO. 4 CHOKE SW	E - 9	80
OIL LEVEL SW	E - 13	53
OIL LEVEL WARNING LIGHT	E - 13	54
PANEL LIGHT REGULATOR	E - 21	84
PARKING BRAKE SW	E - 21	84
POWER WINDOW RELAY	E - 24	84
POWER WINDOW MOTOR		
LEFT	E - 22	66
RIGHT	E - 22	66
POWER WINDOW SW		
LEFT	E - 22	65
RIGHT	E - 22	65
RADIO	E - 23	70
REGULATOR	E - 14	39
RETARD RELAY (M/T)	E - 9	81
RUDDER SOLENOID	E - 23	84
ROOM LIGHT	E - 23	94
SHOWER WASHER MOTOR	E - 16	28
SHOWER WASHER SW	E - 16	28
SPEAKER (FRONT)	E - 23	70
START SPEED SENSOR	E - 9	81
STARTER MOTOR	E - 1	35
STEERING LOCK	E - 21	84
STOP LIGHT		
LEFT	E - 19	95
RIGHT	E - 19	96
STEREO	E - 23	70
STOP & TAIL LIGHT		
LEFT	E - 19	95
RIGHT	E - 19	96
STOP LIGHT CHECKER	E - 19	95
STOP LIGHT SW	E - 19	95
TACHO-METER	E - 8	77
TIMER	E - 14	39
TRAILING IGNITION SW	E - 6	38
TURN SIGNAL FLASHER	E - 19	93
TURN SIGNAL LIGHT		
FRONT LEFT	E - 19	93
FRONT RIGHT	E - 19	94
REAR LEFT	E - 19	95
REAR RIGHT	E - 19	96
VACUUM CONTROL VALVE	E - 21	54
WATER TEMPERATURE GAUGE	E - 13	79
WATER TEMPERATURE GAUGE UNIT	E - 13	105
WATER THERMO SW	E - 9	37

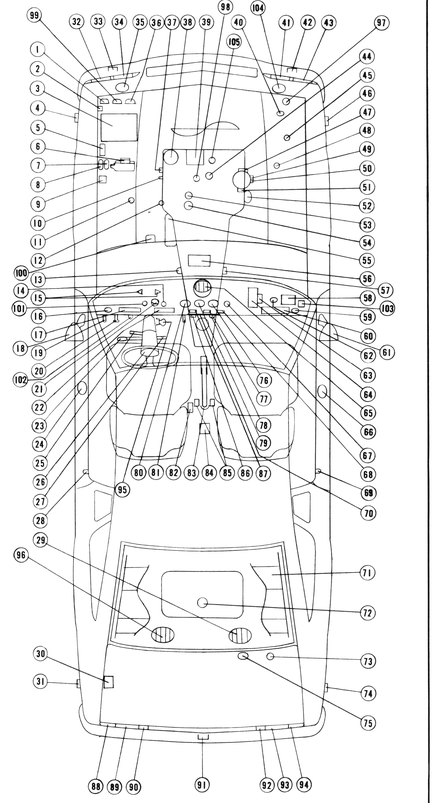

WIRING CODE	
B BLACK	
G GREEN	
L BLUE	
LG LIGHT GREEN	
O ORANGE	
R RED	
W WHITE	
Y YELLOW	

EXAMPLE

WHITE	MAIN WIRE
RED	TRACER WIRE
	FEMALE
	MALE

Mazda COSMO WIRING DIAGRAM

© 1975 TOYO KOGYO CO.,LTD.
PRINTED IN JAPAN

5505-10-751 LE-FU