
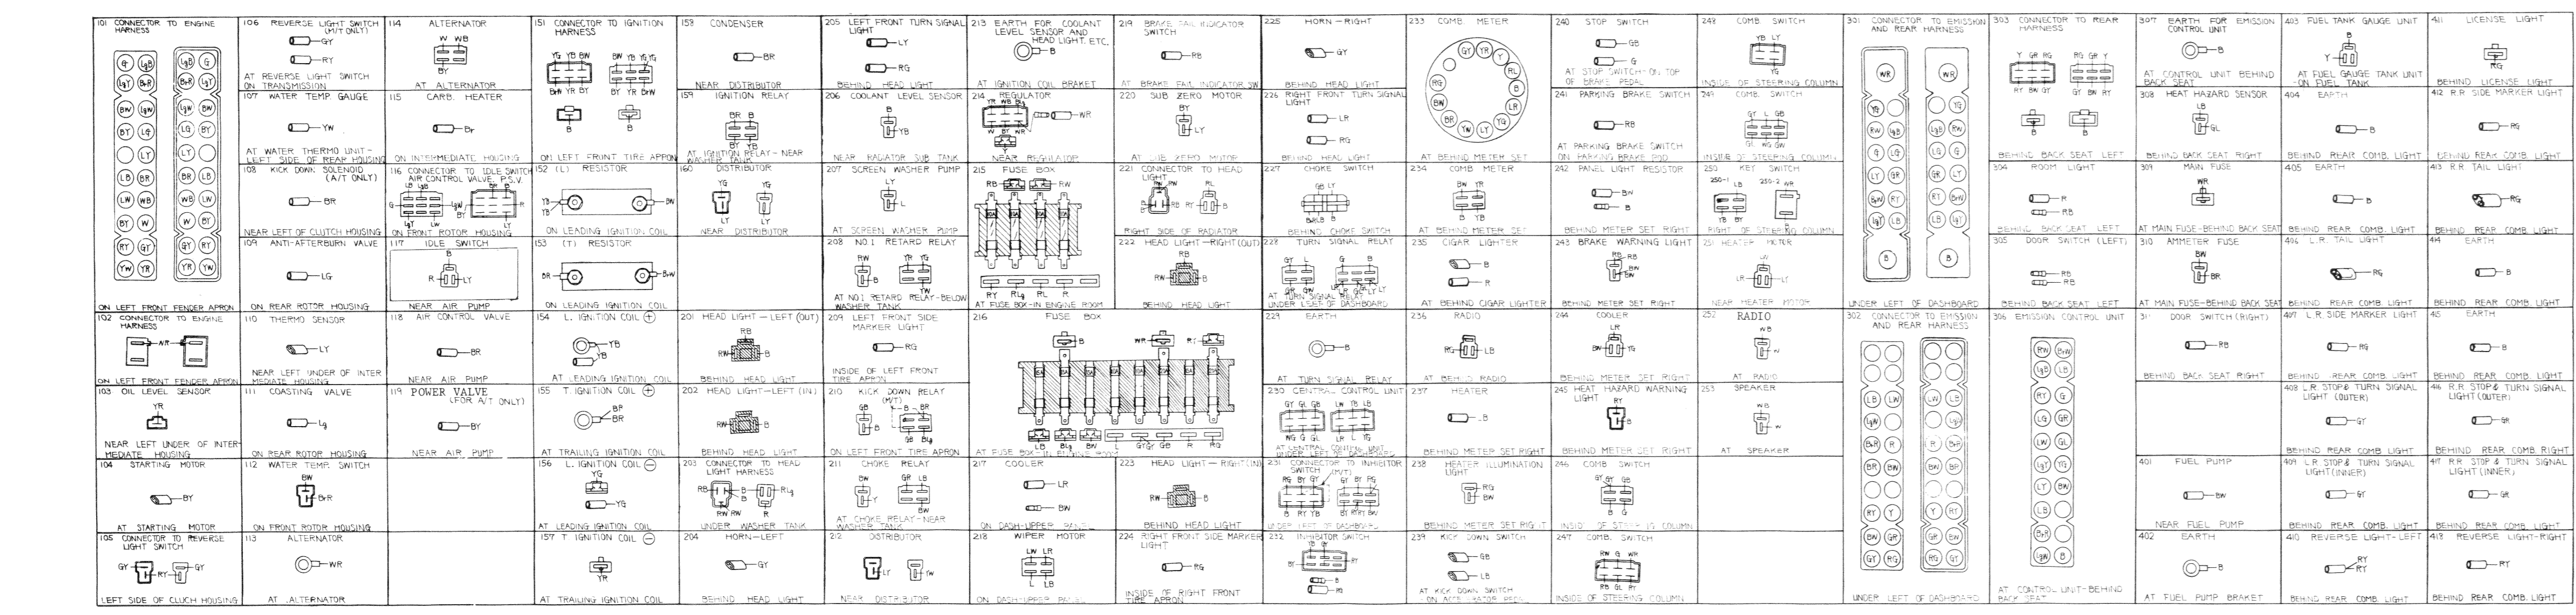


-INDEX-

COMPONENT	LOCATION
AIR CONTROL VALVE	ON INTAKE MANIFOLD
ALTERNATOR	ABOVE ENGINE
ALTERNATOR WARNING LIGHT	AT COMBINATION METER
AMMETER	AT COMBINATION METER
AMMETER FUSE	BEHIND PASSENGER SEAT
ANTI AFTERBURN VALVE-40 C.V.	ABOVE ENGINE
BATTERY	UNDER RIGHT FRONT OF BOX
BRAKE FAILURE SWITCH	ON COMB. PLATE RIGHT
BRAKE WARNING LIGHT	ON DASHBOARD
BZZER	AT COMBINATION METER
CARB. HEATER	AT CARBURETOR
CENTRAL CONTROL UNIT	UNDER LEFT VENTILATION ROD
FLASHER RELAY	---
HORN RELAY	---
WIPER RELAY	---
CHOKER SWITCH	BEHIND CHOKE KNOB
CHOKE RELAY	ON LEFT FRONT FENDER APRON
CIGAR LIGHTER	ON DASH BOARD
COASTING VALVE--(D.C.V.)	ABOVE ENGINE
COMBINATION SWITCH ASS'Y	UNDER STEERING WHEEL
TURN SIGNAL & FLASHER SW.	---
WIPER SWITCH	---
COOLANT LEVEL SENSOR	ON LEFT FRONT FENDER APRON
COOLANT WARNING LIGHT	AT COMBINATION METER
DISTRIBUTOR BREAKER POINT(L)	AT ENGINE
DISTRIBUTOR BREAKER POINT(R)	AT ENGINE
DOOR SWITCH - LEFT	AT LEFT REAR PILLAR
DOOR SWITCH - RIGHT	AT RIGHT REAR PILLAR
EMISSION CONTROL UNIT	BEHIND PASSENGER SEAT
EMISSION CONTROL UNIT FUSE	NEAR EMISSION CONTROL UNIT
EXTERNAL RESISTOR(L)	AT IGNITION COIL(L)
EXTERNAL RESISTOR(R)	AT IGNITION COIL(R)
FUEL GAUGE	AT COMBINATION METER
FUEL GAUGE TANK UNIT	AT FUEL TANK
FUEL PUMP	AT RIGHT OF FUEL TANK
FUSE	ON UPPER COMB. LEFT
ENGINE	---
FLASHER, METER, REVERSE LIGHT	---
HEATER, REGULATOR	---
HORN, STOP, HAZARD	---
ROOM, CIGAR LIGHTER	---
TAIL-WIPER	---
MAIN FUSE	BEHIND PASSENGER SEAT
HEAD LIGHT FUSE - LEFT	ON LEFT FRONT OF FENDER APRON
HEAD LIGHT FUSE - RIGHT	---
HEAD LIGHT LEFT IN-	AT LEFT FRONT OF CABIN
HEAD LIGHT LEFT OUT-	AT LEFT FRONT OF CABIN
HEAD LIGHT RIGHT IN-	AT RIGHT FRONT OF CABIN
HEAD LIGHT RIGHT OUT-	AT RIGHT FRONT OF CABIN
HEATER MOTOR	UNDER DASHBOARD
HEATER SWITCH	ON DASHBOARD
HEAT HAZARD SENSOR	UNDER PASSENGER SEAT
HEAT HAZARD WARNING LIGHT	ON DASHBOARD
HIGH BEAM INDICATOR LIGHT	AT COMBINATION METER
HORN - LEFT	UNDER LEFT HEAD LIGHT
HORN - RIGHT	UNDER RIGHT HEAD LIGHT
HORN SWITCH	ON STEERING WHEEL
IGNITION SWITCH	AT CARBURETOR
IGNITION COIL(L)	ON LEFT FRONT FENDER APRON
IGNITION COIL(R)	ON LEFT FRONT FENDER APRON
ILLUMINATION LIGHT	ON LEFT FRONT FENDER APRON
HEATER CONTROL	AT HEATER
METER	AT COMBINATION METER
RADIO	AT RADIO
INHIBITOR SWITCH-(A/T only)	AT MANUAL SELECT LEVER
KEY SWITCH	UNDER STEERING WHEEL
KICK DOWN SWITCH-(A/T only)	ABOVE ACCELERATOR PEDAL
KICK DOWN SOLENOID-(A/T only)	AT TRANSMISSION
KICK DOWN RELAY-(A/T only)	ON LEFT FRONT FENDER APRON
LICENSE LIGHT	AT REAR OF BOX
LIGHT SWITCH ASS'Y	UNDER STEERING WHEEL
OIL LEVEL SENSOR	AT OIL PAN
OIL LEVEL WARNING LIGHT	AT COMBINATION METER
OIL THERMO SENSOR	AT OIL PAN
PANEL LIGHT RESISTOR	ON DASHBOARD
PARKING BRAKE SWITCH	AT FRONT OF PARKING BRAKE ROD
POWER VALVE-(A/T only)	AT CARBURETOR
RADIO	---
REGULATOR	ON LEFT FRONT OF FENDER APRON
REAR RELAY-(N/L)	ON LEFT FRONT OF FENDER APRON
REVERSE LIGHT-LEFT	AT LEFT REAR BOX
REVERSE LIGHT-RIGHT	AT RIGHT REAR BOX
REVERSE LIGHT SWITCH (A/T)	AT MANUAL SELECT LEVER
REVERSE LIGHT SWITCH (M/T)	AT TRANSMISSION
ROOM LIGHT & SWITCH	IN SIDE OF LEFT REAR PILLAR
SELECT INDICATOR LIGHT-(A/T only)	AT MANUAL SELECT LEVER
SIDE MARKER LIGHT	---
LEFT FRONT	AT LEFT FRONT FENDER
RIGHT FRONT	AT RIGHT FRONT FENDER
LEFT REAR	AT LEFT REAR SIDE OF BOX
RIGHT REAR	AT RIGHT REAR SIDE OF BOX
SIDE & TURN SIGNAL LIGHT	---
LEFT FRONT	AT LEFT FRONT BUMPER
RIGHT FRONT	AT RIGHT FRONT BUMPER
LEFT REAR	AT LEFT REAR OF BOX
RIGHT REAR	AT RIGHT REAR OF BOX
STOP, TURN SIGNAL & TAIL LIGHT	---
LEFT IN-	AT LEFT REAR OF BOX
LEFT OUT-	AT RIGHT REAR OF BOX
RIGHT IN-	AT RIGHT REAR OF BOX
RIGHT OUT-	AT RIGHT REAR OF BOX
SUB ZERO MOTOR	ON RIGHT FRONT FENDER APRON
TACHO METER	AT COMBINATION METER
TURN SIGNAL INDICATOR LIGHT	---
LEFT	AT COMBINATION METER
RIGHT	AT COMBINATION METER
TURN SIGNAL RELAY	UNDER DASHBOARD LEFT
WASHER PUMP	ON LEFT FRONT FENDER APRON
WATER TEMP. GAUGE	AT COMBINATION METER
WATER TEMP. SENSOR	ON ENGINE
WATER THERMO UNIT	AT LEFT REAR OF ENGINE
WIPER MOTOR	ON UPPER COMB. CENTER

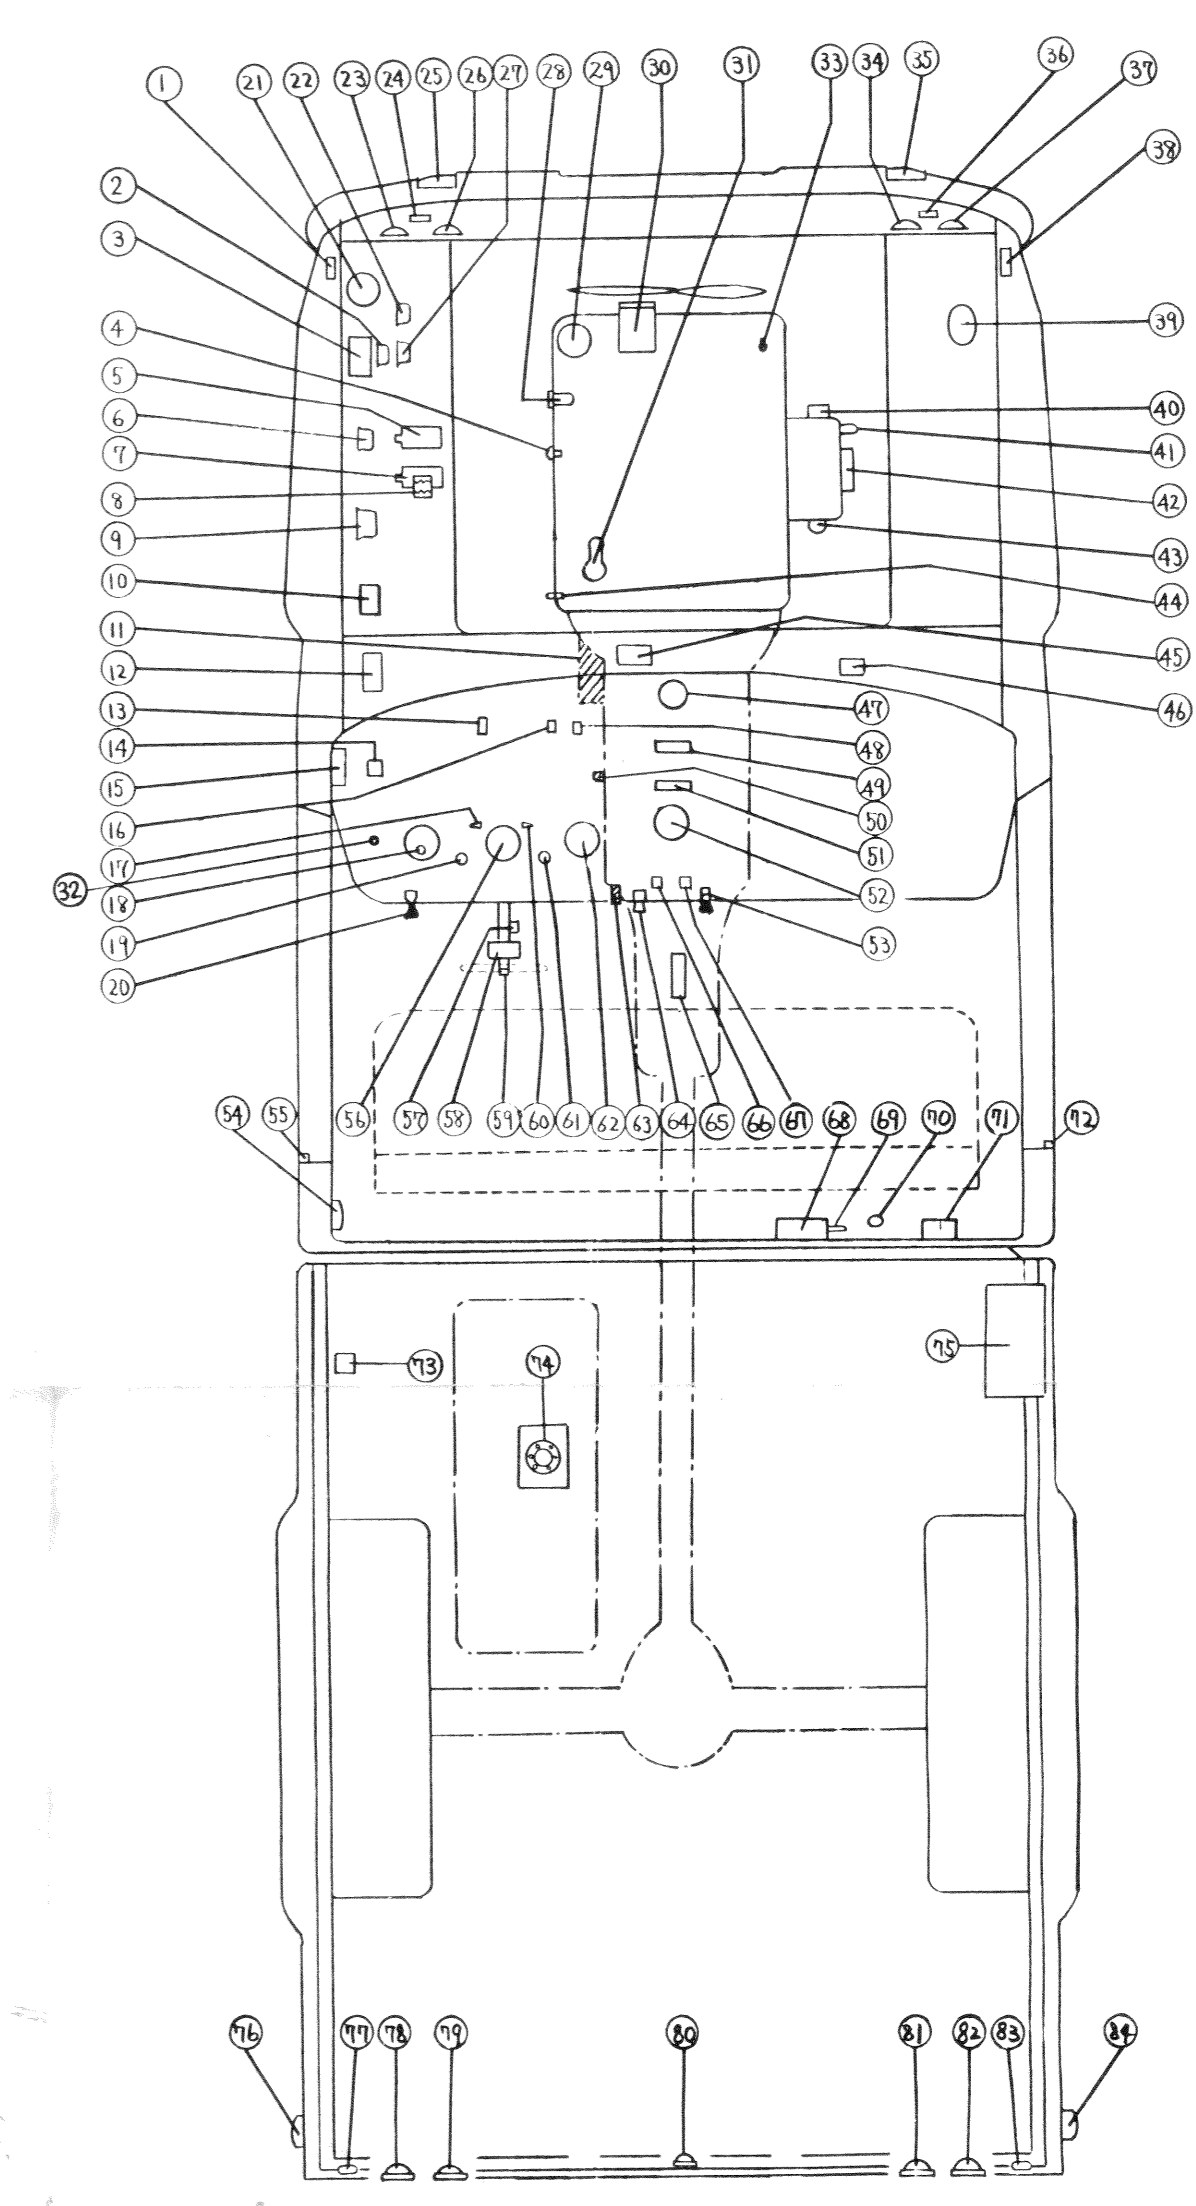

WIRING CODE

CODE	COLOR
R	RED
G	GREEN
B	BLACK
L	BLUE
Y	YELLOW
W	WHITE
Br	BROWN
Lg	LIGHT GREEN

EXAMPLE

NO	COUPLER LOCATION
100 199	ENGINE & IGNITION
200 249	DASH & LIGHTS
300 399	EMISSION
400 499	BOX

**1975**  
**AUTOMOBILES**  
**MAZDA ROTARY PICK-UP**  
**WIRING DIAGRAM**  
 © 1974 TOYO KOGYO LTD.  
 PRINTED IN JAPAN  
 5411-10-74K